



S N O W P L O W

BOSS PRODUCTS
A Division of Northern Star Industries, Inc.
P.O. Box 787 Iron Mountain MI 49801-0787
www.bosspow.com

AUGER/PINTLE CHAIN HOPPER SPREADER STORAGE CHECKLIST

- Remove the rear Spinner Assembly, wash, rinse and let dry completely. This will be re-installed for final storage.

CAUTION: DO NOT spray directly into any electrical connections or electric motor.

- Activate the Dump Switch to completely empty the hopper.
- Pintle Spreader:** Remove the bottom Drop Pan, wash and rinse. This will be re-installed for final storage.
- Remove spreader from the truck using Lift Bars located on the top edge of the hopper at each of the four corners.
- Wash and rinse entire unit. Tipping the hopper up on an angle so that the water and material can easily flow out the end of the hopper opening.
- Remove rear black Poly Cover, wash and rinse the inside of the cover only.
- Wash and rinse all rear drive components.
CAUTION: DO NOT spray directly onto any electrical connections or electric motor.
- Pintle Spreader:** Remove pintle chain from spreader, roll up and fully submerge into a container of oil for storage (transmission oil would work best). The pintle chain will be re-installed next season.
- Auger Spreader:** Spray oil or similar lubricant the entire length of the auger screw, coating the screw and all fasteners.
- Clean and grease all bearings.
- Clean all exposed plow-side and truck-side connectors and apply dielectric grease.
- Remove spreader control from the truck cab and store in a clean, dry place.
- Once the Spinner Assembly and Drop Pan are completely dry, reinstall for final storage of the spreader unit.

Signature _____

Date _____