

## The Lear Car2U™ System

The Lear Car2U™ System is a universal transmitter that includes two primary features – a garage door opener and a platform for remote activation of devices within the home. The Car2U System's garage door opener function replaces the common hand-held garage door opener with a three-button transmitter that is integrated into the interior of your vehicle. After being programmed for garage doors, the Car2U System transmitter can be programmed to operate security devices and home lighting systems.

Additional Lear Car2U System information can be found online at [www.learcar2U.com](http://www.learcar2U.com) or by calling the toll-free Car2U System help line at 866-572-2728.

## Programming the Lear Car2U™ System to the Car2U™ Receiver

The Car2U Receiver (Conversion Box) is designed to allow you to use your in-vehicle Car2U Transmitter with any garage door opener. This receiver follows the Rolling Code programming process.

### Programming Considerations

- Read the instructions completely before attempting to program the Car2U™ System
- Upon the sale of the vehicle, it is recommended that the programmed Car2U System buttons should be erased for security reasons (refer to "Erasing the Lear Car2U System buttons")
- Repeat the programming steps for each garage door opener you wish to program up to a maximum of three

#### **CAUTION**

Programming the rolling code garage door opener involves time-sensitive actions. Read the ENTIRE procedure prior to beginning so you will know which actions are time-sensitive. If you do not follow the time-sensitive actions, the device will time out and you will have to repeat the procedure.

Make sure that your key is ON and engine is OFF while programming the transmitter. Use the following steps to program up to three different devices.

## Programming the Car2U™ System to Work with the Car2U™ Receiver

Use the following directions for programming your Car2U Receiver.

1. Firmly press the 2 outer Car2U System buttons for 1-2 seconds, then release.



2. Go to the garage to locate the Car2U Receiver and its “learn” button. You may need a ladder to reach the unit. Press the “learn” button, after which, you will have 10-30 seconds to return to your vehicle and complete the following steps.

If you cannot locate the “learn” button, refer to the Owner’s Manual of your Car2U Receiver or call the toll-free Car2U System help line at 866-572-2728.

3. Return to your vehicle. Press and hold the Car2U System button you would like to use to control the garage door. You may need to hold the button from 5-20 seconds, during which time the selected button indicator light will blink slowly. Immediately (within 1 second) release the button once the garage door moves. When the button is released, the indicator light will begin to blink rapidly until programming is complete.

## Lear Car2U™ Home Automation System

4. Press and release the button again. The garage door should move, confirming that programming is successful. If your garage door does not operate, repeat the previous steps in this section.

After successful programming, you will be able to operate your Car2U System by pressing the button you programmed to activate the opener. The indicator light above the selected button will turn on to confirm that the Car2U System is responding to the button command.



To program another rolling code device such as an additional garage door opener, a security device, or home lighting, repeat steps 1-4 substituting a different function button in Step 3 than what you used for the garage door opener. For example, you could assign the left-most button to the garage door, the center button to a security device, and the right-most button to another garage door opener.

NOTE: The Car2U Home Automation System allows for three devices to be programmed. If you need to change or replace any of the 3 devices after it has been initially programmed, it is necessary to erase the current settings using the "Erasing the Car2U System buttons" procedure and then reprogram ALL of the devices being used.

## Erasing the Car2U™ System Buttons

### NOTE

The system allows for three devices to be programmed. If you need to change or replace any of the three devices after it has been initially programmed, it will be necessary to erase the current settings using the Erasing the Car2U System buttons procedure and then reprogram ALL of the devices being used.

To erase fixed code programming from the Car2U System, use the following procedure.

1. Firmly press the 2 outside Car2U System buttons simultaneously for approximately 20 seconds until the indicator lights begin to blink rapidly. The indicator lights are located directly above the buttons.



2. Once the indicator lights begin to blink, RELEASE your fingers from the buttons. The codes for all buttons are erased.

If you sell your vehicle equipped with the Car2U System, it is recommended that you erase the programming for security reasons.

## **FCC and RSS-210 Industry Canada Compliance**

If your vehicle is equipped with a Lear Car2U™ System transmitter, it complies with Part 15 of the FCC Rules. Operation is subject to two following conditions:

1. This device may not cause harmful interference
2. This device must accept any interference received including interference that may cause undesired operation of the device

The Lear Car2U™ System transmitter complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions:

1. This device may not cause interference
2. This device must accept any interference received including interference that may cause undesired operation of the device

Changes and modifications to the Lear Car2U™ System transmitter by other than an authorized service facility could void authorization to use this equipment.