

Connecting to Your T-i^X

T-i^X can be connected to a thermal printer, a PC or can be updated using a USB key issued by Tellermate.



We hope you have found this guide useful. If you have any questions, please call us at:
1-800-TELMATE



Product of Tellermate Limited



Tellermate Inc.

3600 Mansell Road
Suite 500
Alpharetta, GA 30022
USA

Tel: +1 (770) 220 0930
Fax: +1 (770) 220 0970
Email: sales@tellermate-us.com
www.tellermate.com

Registered Company since 1981
Company No. 1522341

Version: 24/10
904822B



Quick Start Guide

An introduction to the basic functions of your T-i^X

Customer Helpline

1-800-TELMATE

Money Platform

Coin Tray

Screen

Soft Keys

Power Light

Power, Ports & Serial Number

Navigation keys

Carry Grips


Optional Battery

Battery Cover

Caring for Your T-i^X

- Set T-i^X on a stable, flat surface, free from vibrations and drafts (air conditioning, fans, etc).
- Raise the coin tray to count Bills and lower it for Coins.
- Count loose coins in a Tellermate cup.
- Place items on T-i^X carefully; do not drop them.
- Check the count mode carefully; e.g. do not count coin rolls in cup mode.
- Sort money before counting; do not count mixed denominations.
- Turn T-i^X OFF and unplug all cables before moving. Carry in an upright position using the finger grips.
- Do not leave objects on the Money Platform when T-i^X is not in use, not even a cup.
- T-i^X cannot identify counterfeit money.
- Charge your battery (if supplied) for 3 hours before first use; replace it when advised.

Display and Buttons

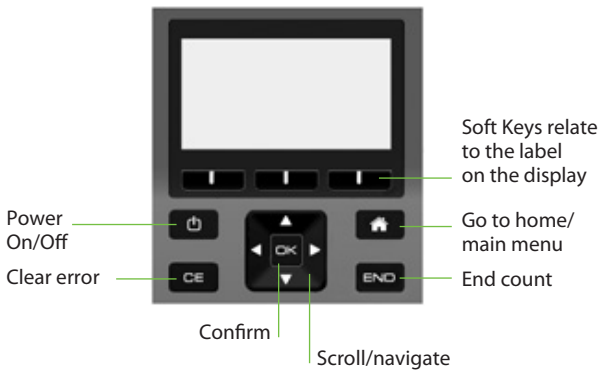

Set Time and Date

From the 'Home' menu

Use then to select 'Settings' and then 'Set Time and Date'

Use to select the number you want to change

Use to adjust time and date

Press to save changes.

Select a Count Task

T-iX Count Tasks are set up to enable the fastest possible counting. Count Tasks dictate running totals, denomination order and banks. Ensure you choose a Count Task that closely matches your current task.

From the 'Home' menu

Select a Count Task using and

Weighing Scale Mode

From the 'Home' menu

Use to scroll to 'Weighing Scale'

Press

Small items of less than 4.4lb and about 8in³ can now be put on the money platform and T-iX will give the weight to the nearest ounce.

Select a Bank Value

Bank values aid the closeout of cash drawers and are not available in all Count Tasks. Where banks are available:



At start of count, repeatedly press the right-hand Soft Key to choose either a value or 'No Float' (0.00).

How to Count Coins

Loose Coins

TellerCup/Roll

Use to ensure that 'Coins' are selected



Use the left-hand Soft Key to scroll through 'TellerCup', or 'Roll' on the display.

Use to select denomination.

Place TellerCup or Roll on the Coin Tray.

Depending on the Count Task, when the item is removed, your T-iX may automatically add to the running total and move to the next denomination.

Full Rolls

Press left-hand Soft Key until 'Roll' is displayed.

Individually stack up to 5 rolls on the Coin Tray.

If 'Suspect Roll' appears, use to select the denomination of the last roll placed on the Platform. The correct value will be displayed.

How to Count Bills

Loose Bills

Use to ensure that 'Bills' are selected.

Press left-hand Soft Key until 'Loose' is displayed.

Use to select denomination

Stack bills on the Money Platform 15-25 at a time.

Strapped Bills

Press left-hand Soft Key until 'Straps' is displayed.

Use to select denomination

Individually place up to 5 straps on the Money Platform.

If 'Suspect Strap' appears on the display, remove the last strap, open and count as Loose Bills.

How to Count Coupons & Tokens

Use to select 'Coupons' or 'Tokens'

Use to select the specific Coupon or Token

Count tokens in a TellerCup and stack coupons on the Money Platform in batches of 15-25.

We hope you find this guide to the basic functions of your T-iX useful!

