

INSTALLATION INSTRUCTIONS FOR BSNY HEATER KIT

WARNING: Before beginning any modification, be sure the main electrical disconnect switch is in the "OFF" position.

1. Remove heater compartment front access panel. See Figure 1.
2. Remove center panel from heater compartment and discard. See Figure 2.
3. Install adaptor panel provided in unit on left side of heater compartment opening. See Figure 3.
NOTE: An adaptor panel is not required on 2-½ or 3 ton units.
4. Install the heater with the offset flange to the top. An attaching hole must be drilled in the upper left hand corner. See Figure 4.
5. Connect heater control plug to unit control plug, making sure it snaps securely in place. See Figure 5.
6. Complete electrical connections as shown in the wiring diagrams. If a single power supply is provided, make certain that the circuit ampacity is adequate for the largest load (the air conditioning unit or the heater kit).
7. Reinstall front access panel.
8. Heater provides fan interlock on desired speed. Turn power on to unit and test for proper function.

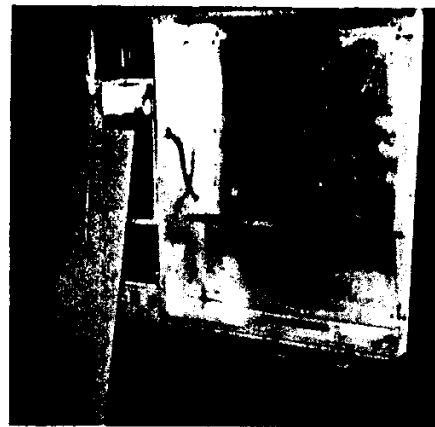


FIGURE 1.



FIGURE 2.

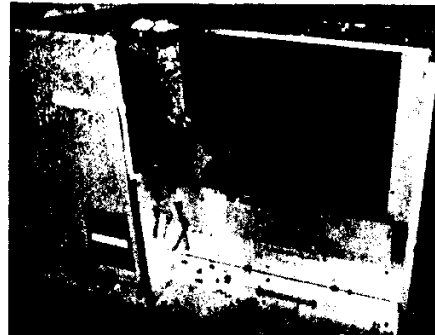


FIGURE 3.



FIGURE 4.



FIGURE 5.