

DH-98 DUCT DETECTOR REMOTE ACCESSORIES

APPLICATION

The DH-98 Duct Detector Remote Accessories are designed to be used with the DH-98 Conventional and DH-98 Analog Duct Detectors to provide audible and visual indication as well as remote test/reset functions.

These devices are contructed of brushed stainless steel and mount on a standard single or double gang backbox.



MS-RA

Functions:

Remote Alarm LED (red) For Use with:

DH-98-I, DH-98-P DH-98-HVI, DH-98-HVP DH-98-A, DH-98-AR



SPECIFICATIONS

Power Requirements Alarm LED 15 mA Pilot LED 15 mA 20 mA @ 24 VDC Horn Sound Pressure Horn 78 db @ 10 feet **Dimensions** Single Gang 2.75" (69.85mm) W 4.5" (114.3mm) H **Double Gang** 4.5" (114.3mm) W



4.5" (114.3mm) H

Functions:

Remote Alarm LED (red) Pilot LED (green) Key-Operated Test/Reset Switch

For Use with:

DH-98-I, DH-98-P DH-98-HVI, DH-98-HVP



MS-KA/R

Functions:

Remote Alarm LED (red) Key-Operated Test/Reset Switch

For Use with:

DH-98-I, DH-98-P DH-98-HVI, DH-98-HVP

DH-98-AR



MS-RA/R

Functions:

Remote Alarm LED (red) Push-button Test/Reset Switch

For Use with:

DH-98-I, DH-98-P DH-98-HVI, DH-98-HVP

DH-98-AR



 
MS-RA/P

Functions:

Remote Alarm LED (red) Pilot LED (green)

For Use with:

DH-98-I, DH-98-P DH-98-HVI, DH-98-HVP



MS-RA/P/R

Functions:

Remote Alarm LED (red)
Pilot LED (green)
Push-button Test/Reset
Switch

For Use with:

DH-98-I, DH-98-P

DH-98-HVI, DH-98-HVP


Hochiki America Corporation

7051 Village Drive, Suite 100 Buena Park, CA 90621-2268 Phone: 714/522-2246 Fax: 714/522-2268

Technical Support: 800/845-6692 or technical support@hochiki.com





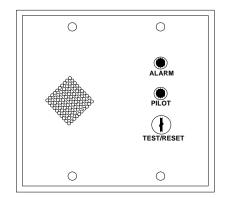

MS-RH/KA/P/R

Functions:

Remote Alarm Horn Remote Alarm LED (red) Pilot LED (green)


Key-Operated Test/Reset


Switch


For Use with:

DH-98-I, DH-98-P DH-98-HVI, DH-98-HVP

WIRING DIAGRAM

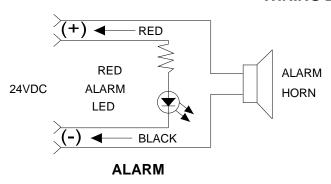

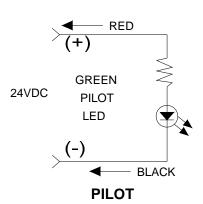

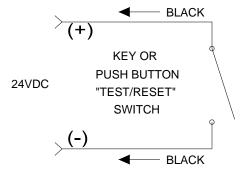

TEST/RESET

PRODUCT SPECIFICATIONS							
	PILOT LED (GREEN)	ALARM LED (RED)	PUSH BUTTON TEST/ RESET	KEY OPERATED TEST/ RESET	HORN	SINGLE GANG	DOUBLE GANG
MODEL#							
MS-RA		•				•	
MS-RA/P		•				•	
MS-RA/R		•	•			•	
MS-RA/P/R	•	•	•			•	
MS-KA/R		•		•		•	
MS-KA/P/R	•	•		•		•	
MS-RH/KA/P/R	•	•		•	•		•