

B1000 BREWER USE & CARE GUIDE

Part # 71-000039-002

Coffee House Taste by the Cup®



Patents Pending



Sanitation
Approved to
NSF Standards



Welcome to the Keurig family!

On behalf of our entire team, I would like to thank you for purchasing a Keurig B1000.

Keurig's objective is to provide you with the finest single-serve coffee system available so that you can enjoy Coffee House Taste by the Cup®.

The Keurig System has been thoroughly tested with painstaking attention to detail. Properly maintained, your Keurig brewer will serve your needs for many years. Within this Use & Care Guide, you will find easy-to-follow information regarding:

- Safe Operation and Use
- Controls and Features
- Brewer Set-up and Shutdown
- Proper Coffee Brewing Methods
- Care and Maintenance Instructions
- Accessory Products for the B1000

Keurig is committed to providing superior customer service. Should you have any unanswered questions when using this Use and Care Guide, please contact Keurig at 1.888.CUP.BREW. Our customer service hours are 9 a.m. to 5 p.m. EST Monday – Friday.

Sincerely,

Nick Lazaris
President/CEO

MODEL B1000


USE & CARE GUIDE

Table of Contents



Safe Operation and Use

 Page 4

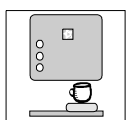

Controls & Features

Page 5

Status Lights

Page 5

Brew Button

Page 5

Custom Brew™ by Keurig

Page 6

Drip Tray

Page 6

Exit Needle Cleaning Tool


Page 6

K-Cup®

Page 6

Brew Drawer

 Page 6



Brewer Setup

Page 7

Unpacking Instructions

Page 7

K-Cup Holder

Page 7

Install Fill and Heat

Page 8



Brewer Operation


Page 9

Brewing Instructions

Page 9

Shutdown / Storage

 Page 9



Care and Maintenance

Page 10

General Cleaning

Page 10

Exterior

Page 10

Exit Needle Cleaning

Page 11



Accessories

Page 12

Water Filter


Page 12



Safety Operations and Use

IMPORTANT SAFEGUARDS for your Keurig B1000 Brewer:

 
1. Read all instructions.
2. Do not touch hot surfaces.
3. To protect against electric shock, do not place cords, plugs or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any matter.
7. The use of an accessory not evaluated for use with this appliance may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use appliance for other than intended use.
12. During operation, water fill door should remain closed. The fill door is designed with a self closing safety spring. Do not defeat or disassemble this spring.
13. For Household and Commercial use.
14. SAVE THESE INSTRUCTIONS.



Controls and Features

Your Keurig brewer includes: 1) a control panel that controls operation and shows you the status of your brewer, and 2) a water tube that shows the amount of water and water system status.


Keurig B1000 Control Panel

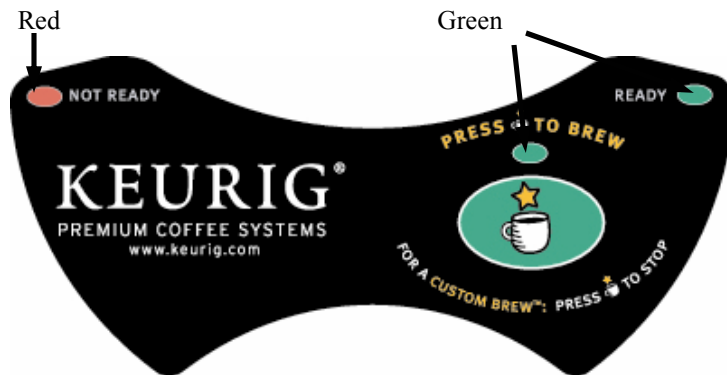

Water Tube Lights

Lights

 Blue
(normal)



Red
(see below)



Yellow
(see below)



Status Lights				
Light	Color	Status	Indicates	Brewer Status/User Action
Touch pad				
Left	Red	Solid	Not Ready	Needs water or is heating water
Left	Red	Flashing	Problem	Call Customer Service
Right	Green	Solid	Ready	Ready to activate
Right	Green	Flashing	Activated	Open/closing drawer activates
Center	Green	Solid	Brewing	Brewing process underway
Water Tube				
Right	Blue	Flashing	Needs Water	Please fill water tank
Right	Blue	Solid	Normal	Has sufficient water
Right	Red	Solid	Problem	Call Customer Service
Right	Yellow	Solid	Problem	Call Customer Service


Brew Button



Pressing the Brew Button starts the brew cycle.

Before pressing the Brew Button, be sure:

- Cup / Mug is placed on the drip plate.
- K-Cup® is set properly in the K-Cup holder.
- Drawer is closed and GREEN ready light is flashing (GREEN ready light will flash for 60 seconds).

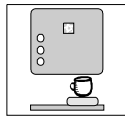

Controls and Features

Custom Brew™ by Keurig



Want a stronger, more intense coffee taste? Try Custom Brew™ by Keurig. Custom Brew allows you to customize your coffee experience, resulting in a more intense cup (less than the standard 8 oz.).

- Custom Brew can be activated by either: pressing and holding the Green “Brew” button for 20 seconds, or;
- Pressing the Green “Brew” button once and then pressing it again any time after 20 seconds has passed from the first pressing.

Drip Tray and Exit Needle Cleaning Tool

The drip tray can accumulate up to eight ounces of overflow. It should be periodically inspected and rinsed clean. To remove the tray, simply slide the tray toward you, keeping it level at all times, to avoid spilling.

On the underside of the drip tray you will find a tool that is designed for cleaning the exit needle, should a clog arise. The exit needle is located on the inside bottom of the K-Cup Holder. Please refer to the Care and Maintenance section for specific instructions on using this tool.



K-Cup®

The Brewer operates with a patented, single serve portion pack called the K-Cup. The K-Cup contains an individual serving of freshly ground specialty coffee. The coffee is nitrogen-sealed in the K-Cup to preserve freshness for at least six months. This portion pack should not be opened, punctured or reused.

Brew Drawer




The brew drawer is manually operated and located on the brewer front.

Pull out brew drawer.

Place K-Cup in K-Cup holder, foil side up. **DO NOT REMOVE FOIL LID OR PUNCTURE THE K-CUP.**

Close brew drawer fully, until the drawer catch detent is felt. Flashing green ready light indicates full closure of the drawer and the B1000 is ready to brew.

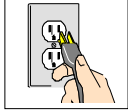

Brewer Setup

To operate your new Keurig brewer, please follow these instructions. Also follow these instructions if you emptied the brewer of water (for example to move it) before operating it again.

Step 1. Remove tape from drip tray/plate and place drip tray/plate at the base and in front of the brewer.

Step 2. If desired, prepare the charcoal filter provided.
(The filter will remove chlorine found in municipal water)

- Remove filter from bag
- Run filter under cold water for 1 minute
- Place filter in water fill area of brewer (see Figure 1)

Step 3. Be sure power switch is “OFF”, then plug in the brewer.

- Plug into a 3 pronged grounded receptacle
- Avoid sharing outlet with other appliances



Figure 1

Step 4. Turn “ON” power switch found on rear of brewer. The blue water column light in the fill tube will be flashing, indicating that the brewer needs water. Fill the water pitcher provided with cold water and fill the brewer up to 80 oz on initial fill (the regular refill quantity is 64 oz). When the brewer is full it is indicated by four audible beeps and the green Ready light will flash four times.

Step 5. The red “Not Ready” light indicates that the brewer is not ready (the water is heating). Wait for 8- 10 minutes. The green “Ready” light will illuminate when the water is heated.

Step 6. The K-Cup holder is shipped in the water pitcher. Insert the K-Cup holder in the brew drawer; press and snap into place. (see Figure 2)

Step 7. Perform a “Cleansing Brew”


- Open and close brew drawer
- Place a mug on the drip plate
- Press the green “Brew” button
- Hot water will dispense into mug (water should be discarded)



“Brew”



Figure 2

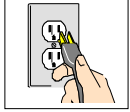

Brewer Setup, cont.

Initial Fill and Heat

Step 9. Now you are ready to brew your first cup of coffee.

- Open the brew drawer
- Insert your favorite K-Cup into the holder and close brew drawer (**see Figure 3**)
- ***Please do not open foil lid on K-Cup***
- Place a mug on the drip plate
- Press the green “Brew” button
- Enjoy your first cup of Keurig Brewed® coffee!



Figure 3



Brewer Operation

Brewing Instructions



1. Determine that the GREEN *Ready* light is on.



2. Place your cup or mug on the drip tray.



3. Select a K-Cup of your choice. *Do not remove foil lid or puncture the K-Cup.*

4. Pull out the brew drawer.

5. Place the K-Cup, foil side up, into the K-Cup holder in the opened brew drawer.




6. Push in the brew drawer (GREEN light will now flash).

7. Press the *Brew* button, the GREEN Brew light will illuminate while brewing.

8. When the Green light turns off, remove cup. Enjoy.

9. Open brew drawer and remove and dispose of used K-Cup.

10. Brewer is ready for the next cup.

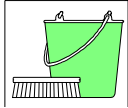

Care and Maintenance

Draining / Storage

Draining your Keurig brewer:

You can drain the water reservoir in your Keurig brewer if you want to move it, or simply change the water. To drain your Keurig brewer, please follow these instructions:

Step 1. Turn power “OFF” and unplug the brewer. Let it sit for a minimum of 2-3 hours to allow water to cool.


Step 2. Remove the drain cap on rear of brewer. Rest the rear of the brewer flat on the counter with the drain positioned over the sink and allow brewer to drain. (*Caution: Water may still be hot!*)

Important: Do not tip brewer past horizontal or upside down as this could cause warm or hot water to splatter.

Correct



Incorrect

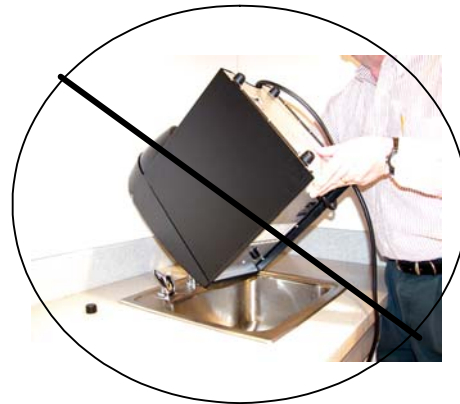

Step 3. Once water is drained, replace the drain cap. Your B1000 is now ready to be moved or refilled

General Cleaning


Regular cleaning of the brewer’s external components is recommended for proper operation. The K-Cup holder and funnel, drip plate and drip tray are dishwasher safe.

Exterior

Cover may be cleaned with a suitable cleaning compound and a non-abrasive cloth. Clean all other components with warm, soapy water and rinse thoroughly.


Caution: Please insure that no cleaners / cleaning solutions are used in or near the fill area as this may contaminate your water supply.

Also, be sure to keep all sharp instruments away from the touch pad on the front of the B1000.

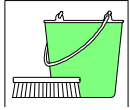

Care and Maintenance

Cleaning the Exit Needle

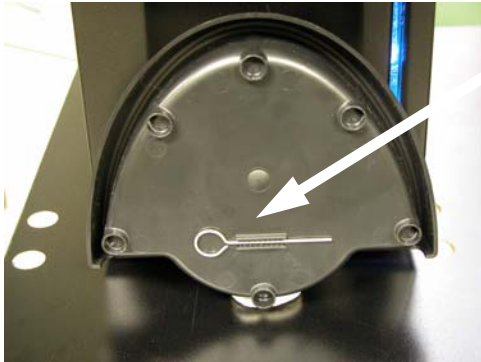

- To clean the exit needle, first locate the exit needle cleaning tool, which is on the underside of the drip tray.
- Remove the tool.



- Open the brew drawer and remove the K-Cup holder.



- Remove the K-Cup holder by pressing on the underside of the holder.



- Using cleaning tool, clean the exit needle, clearing any debris.

- Now, reassemble unit by placing the K-Cup holder back into place. Please ensure that the K-Cup holder is in position.
- Replace exit needle cleaning tool into its housing on the bottom of the drip tray.
- The B1000 is now ready to use.



Accessories

These accessories are available for your Keurig B1000.

Water Filter

A pour over activated charcoal water filter accessory may be used with your Keurig B1000. If you're not using purified water, then we highly recommend the activated charcoal water filter. It will provide you with a better cup of coffee and prolong the life of your Keurig B1000.



Installing the Water Filter

Note: Please remove filter from plastic bag and rinse under tap water prior to installation.

To install filter, open lid on top of B1000. Place the filter in the opening.

Replacement Schedule: To maintain optimal performance the water filter for your B1000 should be replaced after it has filtered 35 gallons or at 6 month intervals, whichever comes first. Keurig authorized distributors can order replacements through Keurig Customer Service, 1.888.CUP.BREW, referencing part # 76-000107-001.

