

ONE-YEAR WARRANTY

This Vanity Planet product is warranted to be free of manufacturer's defects in materials or workmanship for one year from the date of purchase. Damage or wear resulting from an accident, misuse, abuse, commercial use, or unauthorized adjustment and/or repair are not covered under this warranty.

Should this product require warranty service (or replacement at our discretion) please contact client service to obtain a Return Merchandise Authorization number (RMA) and return instructions; proof of purchase is required. Products returned without a Vanity Planet generated RMA number will not be accepted and the sender will not receive a refund, replacement, or repaired product.

VANITYPLANET.COM
INFO@VANITYPLANET.COM
1.855.418.6444

There are no express warranties except as listed above. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

Please do not return this product to the retailer.
Contact us directly for warranty service or repair, thank you.

SUBSCRIBE AND SAVE PROGRAM

REFILL. SPIN. REFRESH.

With your Vanity Planet MoxiSpin in hand, step one is complete! The next step? Upkeep.

To maintain your healthy habits and ensure your MoxiSpin stays in top condition, you can receive replacement brushes regularly through our Subscribe and Save Program. You'll save 25% on every refill order, with no extra hassle and no bumps in your beauty routine.

SIGN UP FOR THE SUBSCRIBE AND SAVE PROGRAM AT VANITYPLANET.COM

V|P

MOXISPIN

portable cleansing & exfoliating
facial brush system

#VPBEAUTY | VANITYPLANET.COM

HEY THERE GOOD LOOKIN'

In this box, you'll find a top notch product waiting patiently for your attention. Let's be honest, you know an awesome buy when you see one, so thanks for choosing our goods to add to your stellar beauty routine.

The way we see it, we're here to help you enhance your already stunning looks. Why? Because we think confidence looks best on everyone.

XOXO
VANITY PLANET

DON'T FORGET TO SHOW OFF YOUR GOODS BY USING THE
#MYVP AND #VPBEAUTY HASHTAGS.

THANK YOU


The Vanity Planet MoxiSpin is a complete, compact system that will keep your face feeling fresh at home or on-the-go. This easy to use, micro-massaging device comes with three specifically designed brush heads for an enhanced cleansing and exfoliating experience. Made with convenience in mind, MoxiSpin is USB rechargeable and also includes a counter stand that's equipped with attachment storage. Let's face it, washing with your hands or a washcloth and soap just doesn't cut it anymore. It's time to invigorate your skin by adding this essential tool to your beauty routine.

With three unique brush heads, The MoxiSpin provides all around rejuvenation. The Daily Cleansing Brush has ultra-soft bristles that are suited for your everyday skin care ritual. If you're looking for a more thorough scrub, the Exfoliating Brush gets deep in your pores to lift trapped dirt, oils, and debris. Plus, the MoxiSpin comes equipped with a Silicone Brush that's perfect for dry and sensitive skin. The flexible silicone bristles gently remove dead skin and unclog your pores to make sure your skin can absorb beneficial skin products. The MoxiSpin helps you maintain a radiant complexion wherever life may take you.

USING YOUR MOXISPIN

- Attach your desired brush head.
- Gently wet your face and the brush head with warm water.
- Apply cleanser to your skin or directly to the brush head.
- Press the on/off button to turn on the MoxiSpin system.
- Press the direction button to select the direction in which you would like to cleanse (clockwise or counter-clockwise).
- Gently move the brush head in small circular motions around the area you are cleansing.
- Push the on/off button again when finished to turn off the unit.
- Rinse the brush head, then dry the handle to remove any water drops.
- Store the MoxiSpin on the stand between uses.

NOTE: Use gentle pressure to keep the brush head flush to your skin while cleansing. Pressing too hard will impede the motion of the brush and reduce its effectiveness.

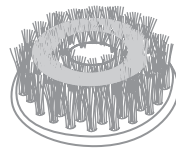


DAILY CLEANSING BRUSH

The Daily Cleansing Brush is made of ultra-soft bristles that are specially designed for the tender skin on your face. For best results, always moisten your face and brush prior to use.

IMPORTANT SAFEGUARDS & WARNINGS

If you are under a doctor's care for any skin condition or if you think you may have a skin condition, please consult your physician before using the Vanity Planet MoxiSpin facial cleansing brush. To ensure that you experience the full range of benefits from the MoxiSpin, we recommend the following:

- Do not share brush heads with anyone.
- Use with a gentle daily cleanser designed for the face.
- Do not use with harsh exfoliating cleansers or physical exfoliants such as nuts, shells, seed, or other jagged exfoliating particles. Using harsh exfoliants combined with the rotary action of the MoxiSpin may damage the delicate facial skin.
- If you would like to use the MoxiSpin with an exfoliating product, use one that contains soft, rounded particles.
- Using your MoxiSpin to remove makeup may stain the bristles of the brush head; if discoloration occurs, clean the brush head with soap and water.
- For best results, change your brush heads every 2 to 3 months. Avoid using brush heads with frayed bristles.

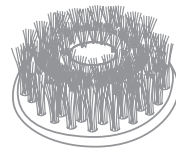

EXFOLIATING BRUSH

The hygienic, quick-drying bristles of the Exfoliating Brush are specially designed to lift away debris. For best results, we recommend that you cleanse your face before exfoliating.

CARING FOR YOUR MOXISPIN

Charge the unit for at least 2 hours prior to each use. Plug the USB wire into the recharging port and connect the unit to a computer or another USB power outlet. The MoxiSpin will run for 1 hour of continuous use on a full charge.


Do not use abrasive cleaners or chemicals to clean any part of the unit. The handle is sealed and fully waterproof. However, you should not submerge any part of the MoxiSpin into water.

CLEANING THE HANDLE

- To remove any residue or buildup, remove the brush head and wipe the handle clean using a mild cleanser and a damp cloth.
- Never attempt to open the brush handle for any reason.

CLEANING THE BRUSH HEADS

- Rinse the brush heads thoroughly after every use.
- Replace brush heads every 2-3 months with regular use.

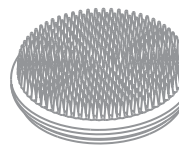

SILICONE BRUSH

Perfect when you need a deep, but gentle clean. For dry or sensitive skin. Non-abrasive silicone bristles gently remove dead skin and unclog pores to enhance absorption of skincare products.