



REMOTE CONTROL ABRASIVE METERING VALVE 1-1/4" Valve #430-000 replaced #400

Old#	New#	Description	Old#	New#	Description
- 430-000	620-100-01	Grit Valve, 1-1/4	16 400-115	620-151-43	Valve Seat
1 430-001	620-150-02	Valve Body, 1-1/4	17 400-116	261-000-24	Valve Seat Gasket
2 430-002	620-150-36	Bonnet	18 430-017	226-004-09	Cap Screw, 3/8-16 x 2-1/2 (6 req'd)
3 430-003	620-151-30	Outer Spacer	19	226-100-07	Hex Nut, 3/8-16 (6 req'd)
4 430-022	620-151-40	Inner Spacer	20	226-124-03	Lock Washer, 3/8 (6 req'd)
5 400-111	620-151-51	Bumper and Stem	- 430-095	360-030-02	Exhaust/Grit Valve Repair Kit
6 400-110	620-151-52	Stem Nut	<i>Repair Kit Includes:</i>		
7 430-021	620-151-04	Diaphragm (2 Req'd)	400-111	620-151-51	Bumper and Stem
8 430-008	620-152-17	Control Knob	430-021	620-151-04	Diaphragm (2 each)
9 430-011	226-067-01	Set Screw, 1/4-20 x 3/8	430-010	470-030-11	O Ring
10 430-006	620-150-83	Adjusting Stem	400-115	620-151-43	Valve Seat
11 430-010	470-030-11	O Ring	400-116	261-000-24	Valve Seat Gasket
12 254-024	226-015-01	Bolt, Sq Hd 5/16-18 x 1 (2 Req'd)			
13 351-005	470-030-02	O Ring			
14 254-931	170-000-06	Clean Out Plug			
15 254-025	226-103-06	Wingnut, 5/16-18 (2 Req'd)			

WARNING

- READ ALL WARNINGS PRIOR TO EVERY USE.
- NEVER USE ANY PAULI SYSTEMS SUPPLIED PARTS OR EQUIPMENT WITH SAND ABRASIVE.
- INSPECT ALL EQUIPMENT PRIOR TO USAGE.
- NEVER USE DAMAGED OR IMPROPERLY FUNCTIONING EQUIPMENT. DOING SO MAY BE HAZARDOUS TO YOUR SAFETY AND THE SAFETY OF THOSE AROUND YOU.