


Tel: 740-594-2277 Fax: 740-592-1499 www.ultimateair.com

Wiring the Dehumidistat for Boost Control

The Dehumidistat helps to lower room humidity when outside air is dryer than indoors. The Dehumidistat can be used to adjust indoor humidity levels by boosting the RecoupAerator® to maximum airflow. Pool Rooms and Bath areas may benefit most with use of the Dehumidistat.

When lowering the indoor humidity is desirable, set the Dehumidistat dial at a comfortable level and the control will automatically Boost the ventilation rate to lower indoor humidity. After the humidity drops below the dial set point, the flow rate will return to the RecoupAerator® flow setting. The Dehumidistat overrides the Off position of the RecoupAerator® flow control dial.

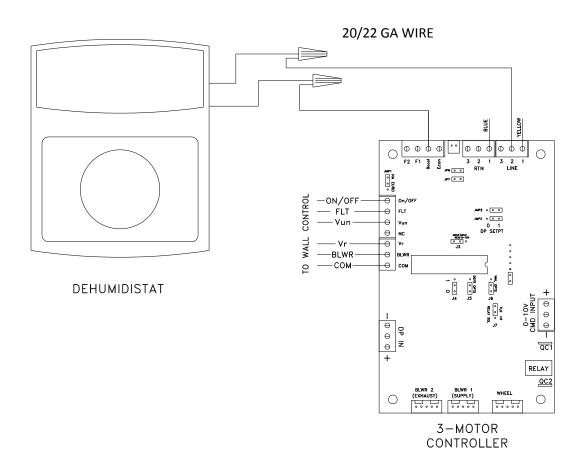

^{*} Note: When installation option #2B and #2C (use of forced air system ductwork and wiring to the furnace) have been utilized, the timer may not have full desired functionality, unless the furnace blower has been set to operate continuously. See the installation manual for further details.