




## Header Vent Plug

### Description

The header vent plug is used to release low pressure build-up that may occur in a closed system utilizing selector valves or check valves. The header vent plug should also be installed on the cylinder sides of the check valves on both main and reserve systems to relieve any pressure that may leak past the check valve and accidentally actuate the reserve system while the main system is discharging.

Shipping Assembly Part No.	Description
40309	Header vent plug

Component	Material	Thread Size/Type	Approvals
Vent Plug	Body: Brass  Spring: Bronze  Seal: Neoprene	1/2 in. NPT Male	UL Listed (EX-4510) FM Approved

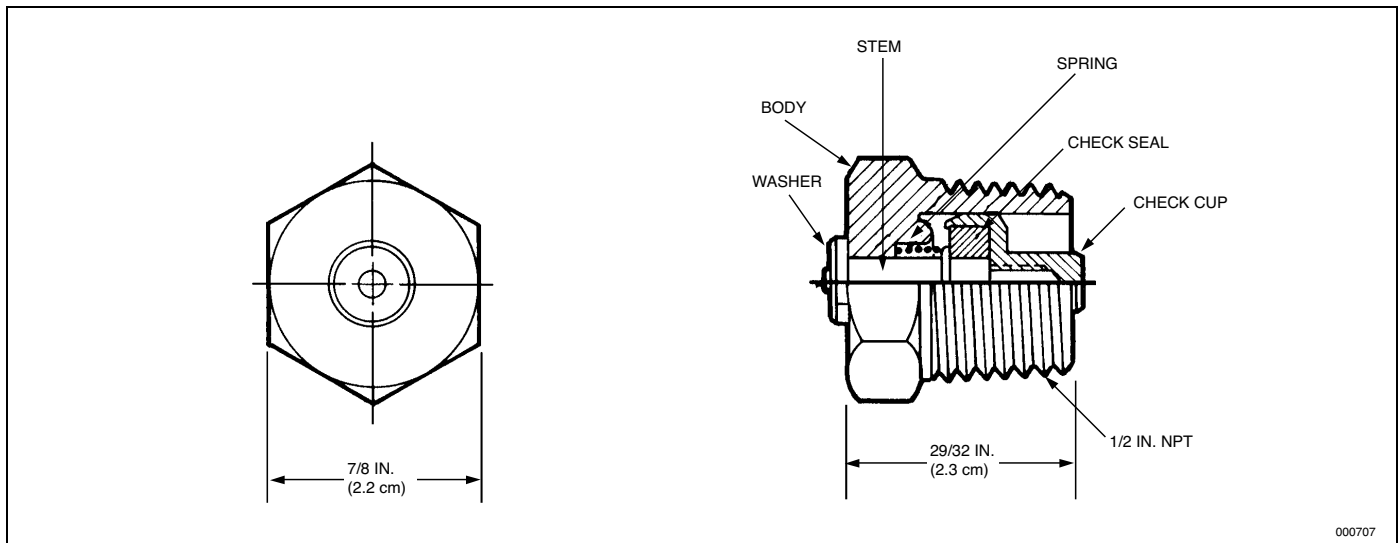

ANSUL and INERGEN are trademarks of Ansul Incorporated or its affiliates.