

















What to Do?				
Clean Power Wheelchairs Often	Head	n Hardware: Irest ng Components	Adjust as Needed	
Inspect for W Tear	ear &	Inspect Cushions and Backrests	Be Proactive with Replacement Componen including batteries	
permobil				

Maintenance and inspection schedule	Daily	Weekly	Monthly	Yearly
Check battery level indicator and charge if necessary.	×			
Check that the joystick panel and other control panels are not damaged.	×			
Make sure all removable parts are securely fastened.	×			
Check positioning belts for wear and make sure buckles work.	×			
Check tires and inflate as necessary.		×		
If the wheelchair is equipped with lights and turn signals, make sure they are operational and clean.		×		
Clean the wheelchair and upholstery.			×	
Check upholstery, seating, headrest, arm pads and calf pads for wear.			×	
Check that the brake release and the brake release lever work properly.			×	
Complete inspection, safety check and service performed by an authorized wheelchair dealer.				Х

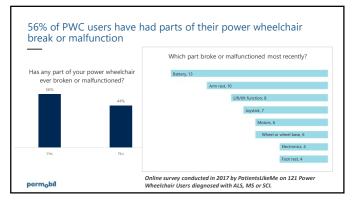

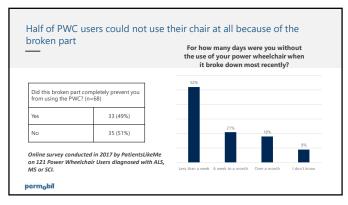





36 37



Clean Manual
Wheelchairs Often
Seating Components
Caster/Forks
Tire Pressure


Inspect for Wear & Inspect Cushions, Seat
Tear

Inspect Cushions, Seat
Sling and Backrests
Upholstery

38 39


Inspection Item	Initially	Weekly	3 Months
Rear Tires Check for proper inflation as per sidewall of pneumatic tire Inspect for cracks, wear and flat spots	V	√	
	V	√	
Camber Tube/Axle Sleeves • Make sure camber plug clamps are securely tightened • Make sure camber plugs are secure in camber plug clamps and axle sleeves are secure in camber plugs	7	77	
Handrims Inspect for signs of rough edges or peeling Make sure handrims are securely attached to rim	1		7 7

Inspection Item	Initially	Weekly	3 Months
General Make sure chair rolls straight (does not drag or pull to one side) Inspect for loose/missing/broken/worn/damaged hardware	1	*	
Rear Wheels Inspect for cracked, bent or broken spokes Make sure all spokes are uniformly tight Inspect hubs and rims for cracks and wear Inspect for Trueness' (excessive side movement when wheel lifted and spun indicates lack of "trueness")	7777	V	1
Quick-Release/Quad-Release Axles • Make sure axles are free of dirt and lint • Wipe axle with cloth using either a "dry" silicone spray or a "dry" Tellon* -based lubricant • Make sure that axles lock properly in axle sleeve	1	√1	1

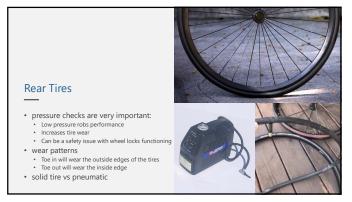



42 43

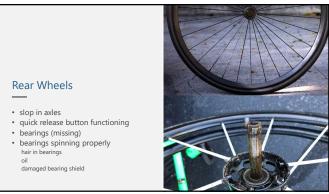



44 45

Caster Tires

• excessive wear on tires



Caster Wheels

- bearing issues
 hair, needs oil, bearing seals
- loose axles missing screws hardware loose



46 47

Caster Forks

- loose forks
 bearing maintenance
 oil them
 replace if needed
- forks not spinning freely overtightened fork stem unit bent fork stem



Frame Components

- upholstery: seat or back screws frayed seat sagging sling
- footrest angle adjustment loose footrest clamps loose



48 49

Frame Accessories

- side guard brackets rattling/rubbing
 wheel locks
- wheel locks adjusted correctly
 armrests
- armrests
 brackets
 height adjusted
 armrest pads tight



WC User's Responsibility

"CMS considers it reasonable to expect that beneficiaries will perform the maintenance."

University of Pittsburg, 2017 http://www.upmc-sci.pitt.edu/wmtp-landing

Responsibilities of User

- Read and use the owner's manual
- Perform routine maintenance
- Cleaning
- Tighten wheel locks
- Tighten loose bolts and nuts



50 51









54

