


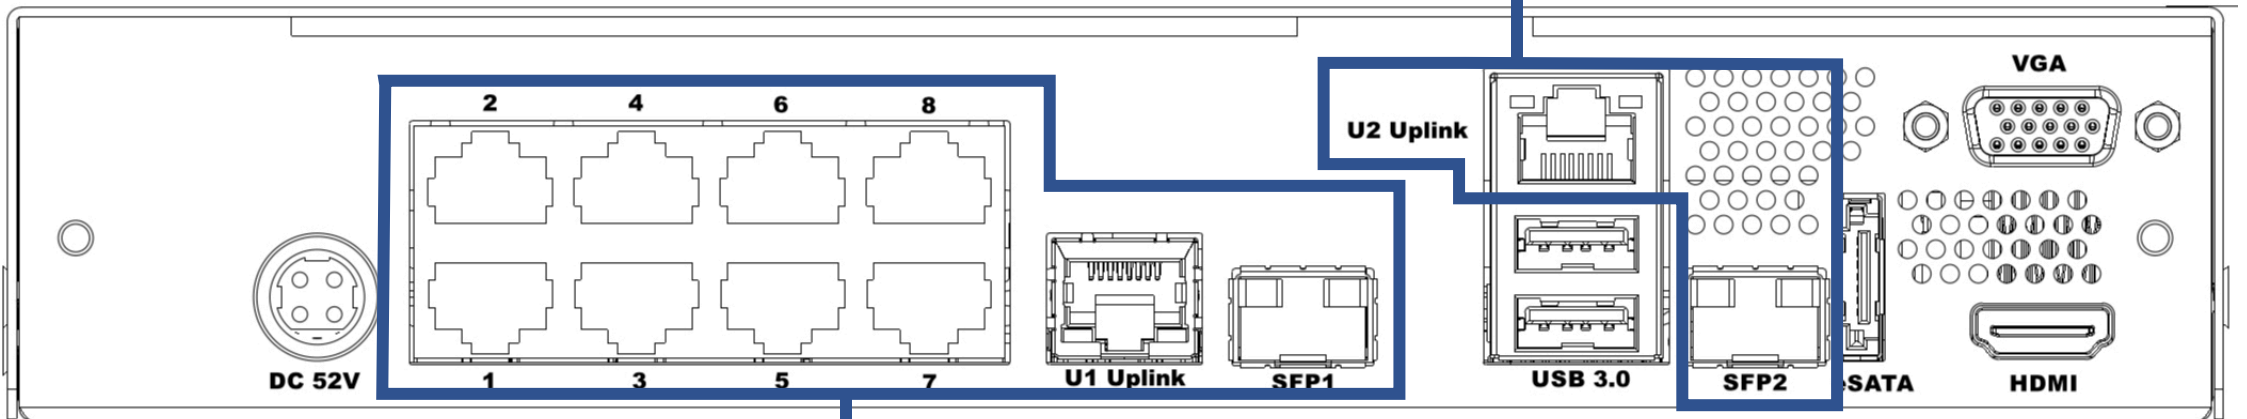

U2 – Data Uplink for SERVER

Used to connect SERVER to Distribution Switch
1Gb Copper AND SFP

Two independent connections



U1 – Data Uplink for DEVICES

Used to connect DEVICES to Distribution Switch
1Gb Copper OR SFP

Only one of the links can be active at any time

Installation Notes: If there is trouble displaying video, boot unit with no output connected, wait 1 minute, then connect video output