 
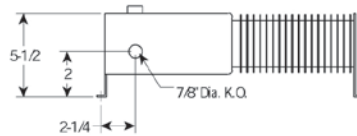 


# Type CPHH — Pumphouse Utility Heater

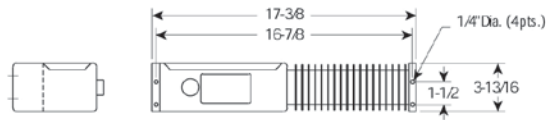

## Specifications

Model	Volts	Watts	Amps	BTUH	Length (In.)	Weight (Lbs.)	Stock	PCN
CPHH-50011	120	500	4.2	1707	17-3/8	5.0	S	350190
CPHH-50031	208	375	1.8	1280	17-3/8	5.0	S	350203
CPHH-50031	240	500	2.1	1707	17-3/8	5.0	S	350203

## INSTALLATION

**WARNING: Hazard of Electric Shock. Disconnect all power before installing heater.**

**WARNING: Hazard of Electric Shock. Any installation involving electric heaters must be effectively grounded in accordance with the National Electrical Code.**

**WARNING: This heater is not intended for use in hazardous atmospheres where flammable vapors, gases, liquids or other combustible atmospheres are present**

**as defined in the National Electrical Code. Failure to comply can result in explosion or fire.**

1. Check that the electrical service is the same on the nameplate.
2. Determine desired mounting location per instructions on nameplate.
3. Remove connection box cover.
4. Bring in correct fused electrical service to appropriate knock-out. Suitable for 75°C field wiring.

 
## WIRING

Electric wiring to heater must be installed in accordance with the National Electrical Code and with local codes by a qualified person.


**WARNING: Use copper conductors only.**

1. Wire per appropriate wiring diagram below, connecting ground wire to green ground screw.
2. On 120V units, the thermostats must be in the hot line.
3. Fasten heater to wall using four wood screws or screw anchors.
4. Replace connection box cover.

### Wiring Diagrams —

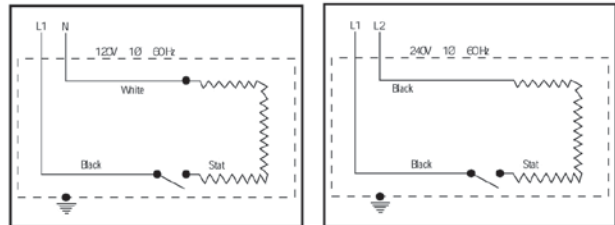

DISTRIBUTED BY

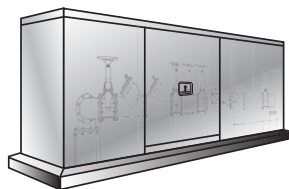 

**SAFE-T-COVER®**  
by Hydrocowl