



1

- A Connect *coax cable* to your over-the-air antenna or in-house QAM feed.
- B Connect *coax cable* to the SnapStream Encoder (QAM/ATSC). See diagram.

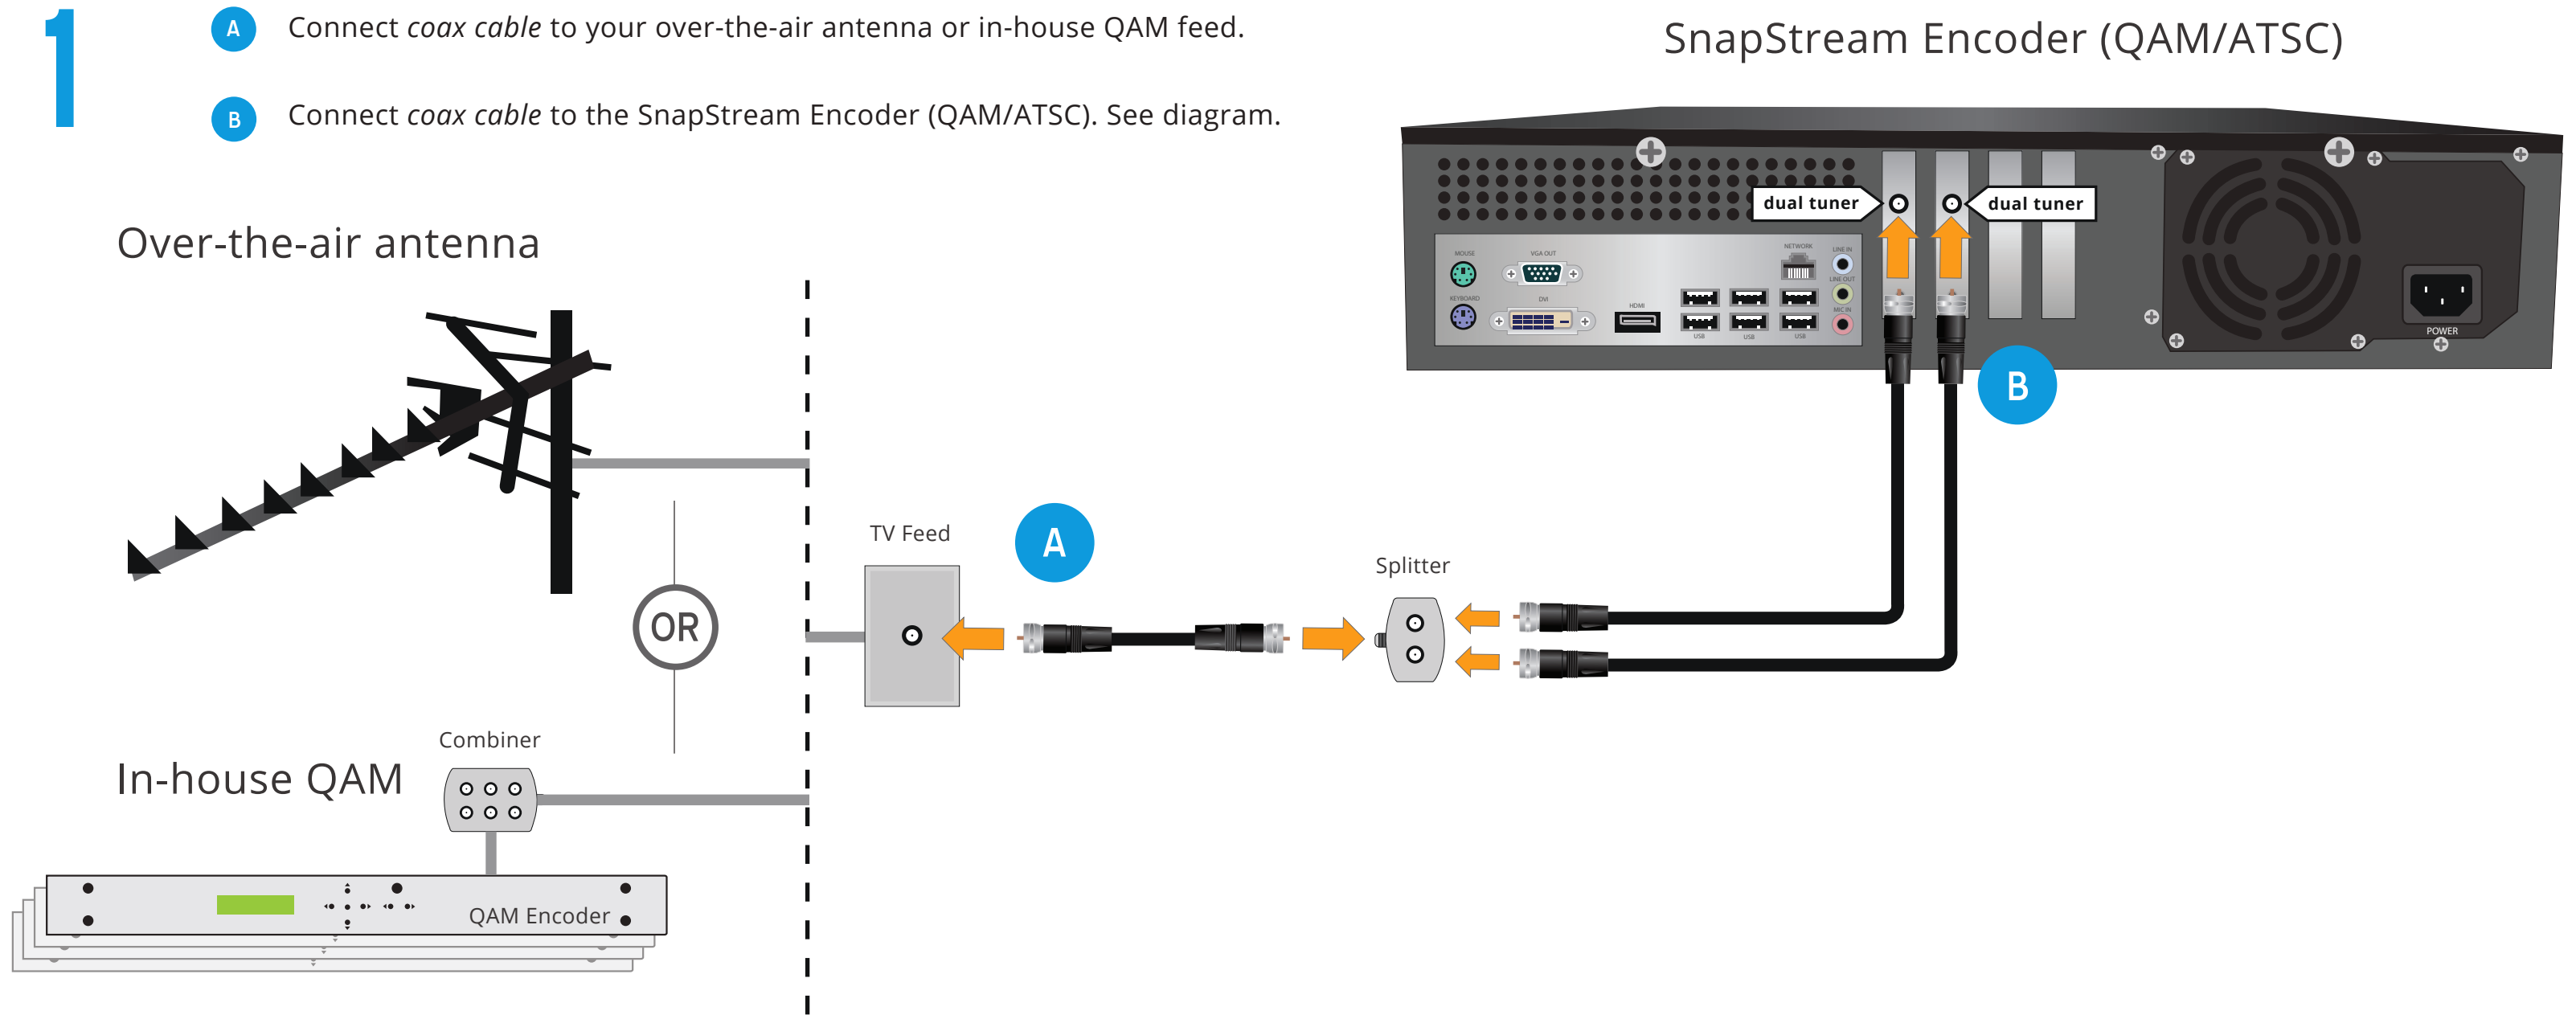

2

- A Connect the SnapStream Encoder (QAM/ATSC) to your organization's network switch via ethernet cable.
- B Connect the SnapStream Encoder (QAM/ATSC) to power and turn it on.

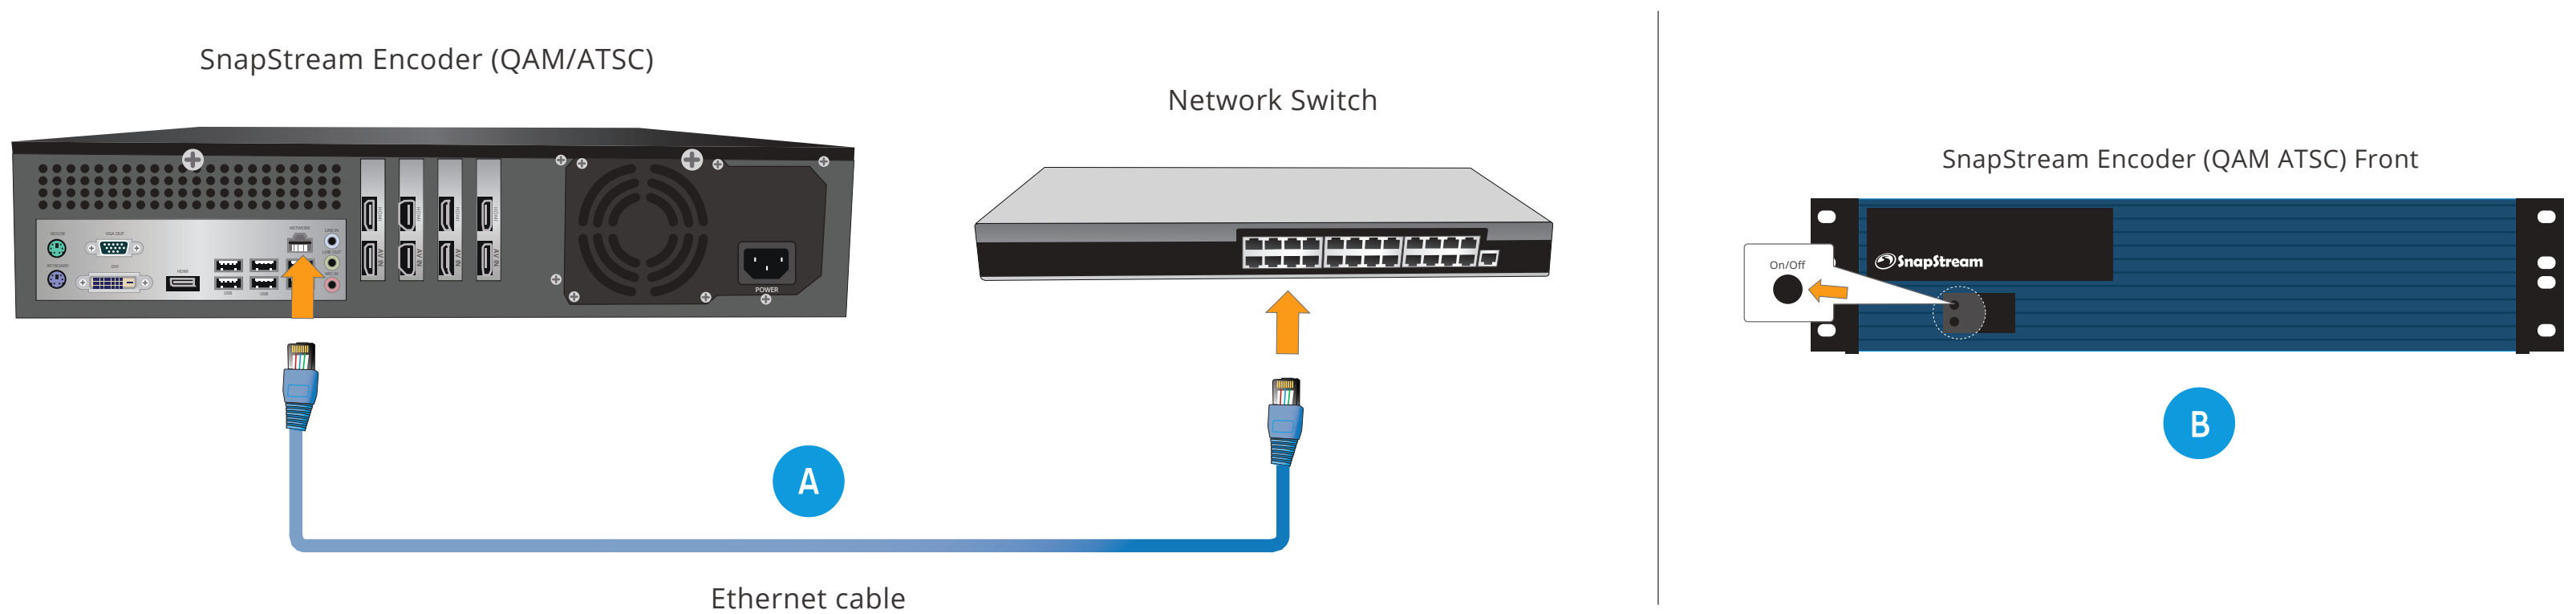

3

Set-up SnapStream Cloud



A To set-up SnapStream Cloud, contact Support


Phone: **+1 (877) 696-3674**

Email: **support@snapstream.com**


OR

Set-up SnapStream Enterprise/Pro

A Connect SnapStream to *power* and to your *network*.

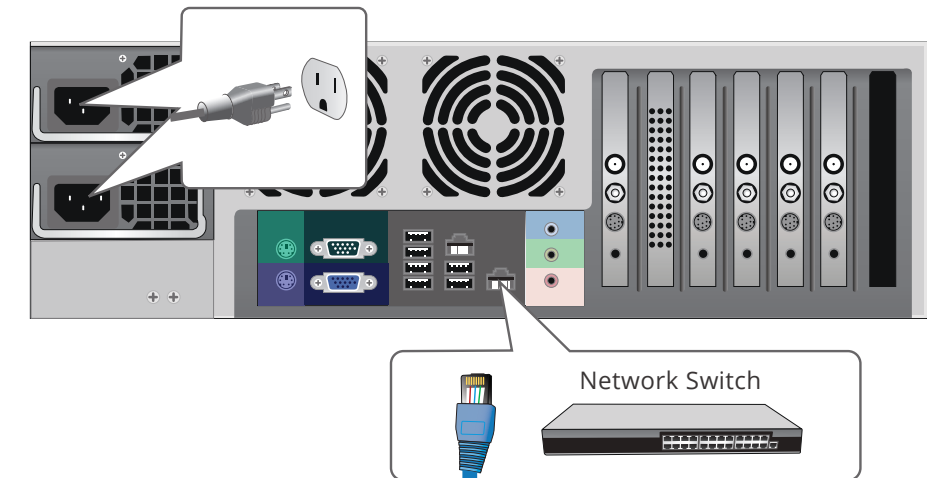

B Connect a *keyboard*, a *monitor*, and a *mouse* to SnapStream for initial testing.

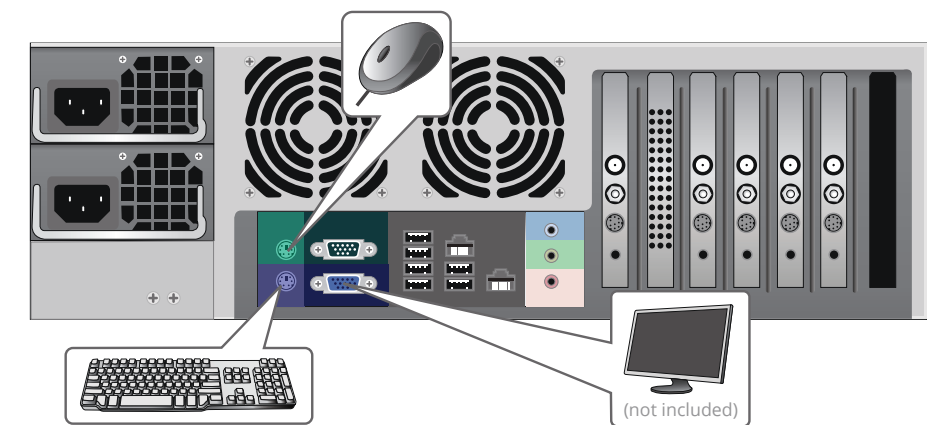

C Turn SnapStream on.





4

Open a Web browser and connect to SnapStream by *name* or *IP address*.

Log in to start using SnapStream.

Username: **administrator**

Password: **snapstream**

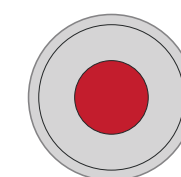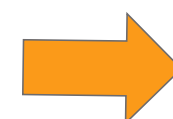

Record TV




Search TV



TV to Twitter & Facebook



Watch TV

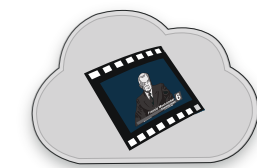

Clip TV