

How To Check The ELD Readiness Report And Turn On ELD Functionality For Your Fleet

ELD Readiness Report

Your fleet must check the ELD Readiness Report before enabling ELD functionality. This report helps your Fleet and Safety Administrators ensure that all ELD-required information is filled out. Any missing information will be highlighted.

NOTE: The ELD Readiness Report is for each individual fleet and does not run across multiple fleets.

TO ACCESS THE ELD READINESS REPORT:

Big	Road	Dashboard Driv	ers Trucks	Reports Fleet Q Eric Co	ob 🗸	Messages	•			Click on the Fleet tab.
☆ ●	Settings Users	ELD Readiness Report						_		
	Incoming Removed Trucks	Report for Trucks Show UMBER LICENSE VIN LOG TYPE					y trucks with issues ELD READY			
\$	Billing	North221 VIN is required This truck requires a DashLink to be installed				Electronic Log No				
	ELD Readiness Report Trucks Drivers Fleet	Titan 3C4PDCEG9 Report for Drivers			ET309647	DashLink-AOBRD	Yes	2 Click on ELD Read tab in the left hand	Click on ELD Readiness Repo tab in the left hand sidebar.	
		FIRST NAME LAST NAME EMAIL		EMAIL	Show only driven the second seco		vers with issues ELD READY			
		Wayne	Lang	wayne.lang.3091@gmail.com	1235790900	Arkansas	Yes			
		Marcus License number Issuing state is r Driver needs to	Little is required required update Bigroad	marcus.little.3091@gmail.com			No			
		Eric License number Issuing state is r Driver needs to	Cobb is required required update Bigroad	eric.cobb.3091@gmail.com			No			
		Report for Fleet								

You can switch between the Trucks, Drivers, and Fleet reports by clicking on the appropriate tabs underneath the ELD Readiness Report. Trucks and Drivers can be filtered by just trucks and drivers that have issues.

When reviewing the ELD Readiness Report, the Safety Manager and Administrator will be able to see which ELD-required information is missing. Any missing details will be listed in blue text. Missing information should be filled out before enabling ELD functionality.

How To Guide

(1)

HOW TO ADD MISSING INFORMATION TO THE ELD READINESS REPORT:

Items that say **NO** beside them have missing information. Click on the blue text to see what information is missing.

2 You will be taken to a page that shows you what information is missing. Add missing details.

3 Click Save.

FOR TRUCKS, THE ELD READINESS REPORT WILL ENSURE THAT THE FOLLOWING INFORMATION IS IN PLACE:

- The vehicle has DashLink ELD enabled.
- The vehicle has a unique VIN.

NOTE: If the vehicle has a duplicate VIN with another vehicle in the fleet, it will need to be corrected to ensure it has a unique VIN.

FOR DRIVERS, THE ELD READINESS REPORT WILL ENSURE THAT THE FOLLOWING INFORMATION IS IN PLACE:

- Driver first and last name.
- Driver license number.
- Driver license issuing state.
- The driver's license number and issuing state are unique to them.
- The driver is using the required version of the BigRoad Mobile App. Drivers must be using Version 21 or higher of the BigRoad Mobile App. If a driver has multiple devices they log in with, they need to ensure that all devices have been updated to Version 21 or greater.

FOR FLEETS, THE ELD READINESS REPORT WILL ENSURE THAT THE FOLLOWING INFORMATION IS IN PLACE:

- Name of the fleet.
- Fleet DOT number.
- Address of the fleet.



Turning On ELD Functionality For Your Fleet

Once the required information is in place for your fleet, ELD functionality can be enabled.

TO ENABLE ELD FUNCTIONALITY FOR YOUR FLEET:



NOTE: Turning on ELD functionality for a fleet does not automatically change any trucks in your fleet to ELD-equipped. It allows you to start adding ELD vehicles to your fleet and/or change existing AOBRD and electronic logging (eLog) trucks to ELD. Once you have enabled ELD, you can switch trucks over to ELD on an individual basis.





TO SWITCH VEHICLES OVER FROM AOBRD AND ELOG TO ELD:

- Click on the **Trucks** tab.
- 2 Click on the vehicle you would like to enable ELD for.
- 3 Click Edit.
- 4 Select **ELD** from the **Log Type** section.
- 5 Click Save.
- 6 All ELD trucks will automatically have Unidentified Driving enabled as required by the FMCSA.

NOTE: Once you switch a truck to ELD you can't switch that truck back to AOBRD. All ELD vehicles running an ELD must have access to a copy of our ELD Driver Card (printed copy or digital) and at least 8 days of blank logs in the cab.

