Setup Instructions for Winegard Manual Tuning Satellite Antenna^{††} & DISH Receiver

Setup | Installation | Receiver Activation Software Version L551RGND-N

TABLE OF CONTENTS

First-Time Setup Subsequent Setup Page 2 Page 7

First-Time Setup of Winegard Manual Tuning Satellite Antenna⁺⁺ & DISH Receiver

Setup | Installation | Receiver Activation

Software Version L551RGND-N

INSTRUCTIONS	ESTIMATED SETUP TIME
STEP #1	

DO NOT hook up your Winegard manual tuning satellite antenna at this time.

Step #2	

Power up TV and ViP®211k Receiver.

STEP #3	

Installation Wizard: Program TV Remote to Receiver – Follow the on-screen instructions by pressing 'RECORD' on your DISH remote and then selecting 'Continue'



20 MINUTES

Installation Wizard: Download Software

STEP #4

tep 2	of 5 This step will take 10-25 minutes.
a) Ge	tting software from satellite Status: In Progress
b) Lin	dating the receiver Statuc
b) Up	dating the receiver Status: Please do not disturb or unplug the receiver while this message appears on screen.

Installation Wizard: Download Software - Select 'Continue'



STEP #6

20 MINUTES

Installation Wizard: Download Software (Second Scan)



STEP #7

Installation Wizard: Download Software Error Message - Select *#* on your DISH remote



STEP #8

Point Dish – Connect your Winegard manual tuning satellite antenna to your receiver.



++ For Winegard models: TR6100, TR6018, CarryOut MP1

STEP #10

- Point Dish Enter your zip code using your DISH remote in the 'Zip Code' field.
 - Then, select your dish system by scrolling on your DISH remote in the 'Dish System' field.
 - This will give you the coordinates to position your Winegard manual tuning satellite antenna; follow those coordinates.
 - The green status bar at the bottom of this screen will indicate which satellite (110, 119, 129) you have found. If it does not automatically enter the satellite information in the 'Satellite' field, enter it manually with your DISH remote.
 - Select 'Check Switch'

Installation Summary – Select 'Test'

olling on n' field.	dish Point Dish
position	To calculate Dish 500 Peak Angles, Enter your ZIP Code and select satellite 110 or 119
e	Zip Dish Transponder Satellite Modulator
of this 10, 119,	55901 500 11 119 Check Switch Help Help
mation	Azimuth: 208 Elevation: 34 Skew: 111
lly with	0 10 25 50 75 100 125
	Locked - EchoStar 119 West Signal Strength: 32
	20 MINUTES

d sh Installation Summary d sh Installation Summary Tue, May 22 Tue, May 22 Satellite Input Attention 058 Port: Satellite: Please wait while your switch installation is checked. Trans X Device: Currently doing test # 5 of 38 Status **Reception Verified** Switch: None **O** SuperDISH ☐ Alternate SuperDISH Alternate Details Test Done Help Details Test Done Help **STEP #11**

Installation Summary – Select 'Done'

If using TR6100, you should see all three satellites at this step (110, 119, 129)

dish Installatio	Installation Summary				
	Sa	tellite Input			
Port:	1				
Satellite:	119				
Trans:	OK				
Device:					
Status:	Rece	eption Verified			
Switch:	Switch: None				
SuperDISH Alternate Details Test Done Help					

NOTE: If you see an X in the place of the satellite information (110, 119, 129) at this step, select 'Done' and reposition your satellite antenna, following the instructions starting at Step #5.

Point Dish – Select 'Done'

Er	To calculate D nter your ZIP Code a	ish 500 Pea Ind select s	tk Angles, atellite 110 or 11	9		Enter you	r ZIP Code ar	sh 500 Peak nd select sat	Angles, ellite 110 or 1	19
Zip	A	ttention		78) or	Zip Code	Dish System	Transponder	Satellite		Modulator
	Now scanning	for available ease wait.	satellites	itch	55901	500		▲ 119 ▼		eck Switch Done Help
						Azimuth	: 208 Elev	ation: 34	Skew: 11	1
	25 50	75	100	125	0	10 25	50	75	100	125

STEP #13

055 Popup – Select 'Yes'



STEP #14

25 MINUTES

Installation Wizard: Download Software

ep 2 of 5 This step will take 10-25 minutes.	Step 2 of 5 This step will take 10-25 minutes.
a) Getting software from satellite Status: In Progress	a) Getting software from satellite Status: Complete
b) Updating the receiver Status:	b) Updating the receiver Status: In Progress
Please do not disturb or unplug the receiver while this message appears on screen.	Please do not disturb or unplug the receiver while this message appears on screen.
When complete, the receiver will power off and restart before continuing to the next step.	When complete, the receiver will power off and restart before continuing to the next step.

Installation Wizard: Set Video Resolution - Select your desired resolution and then select 'Test' and 'Save'




Installation Wizard: Connect Receiver to Ethernet or Phone – Select 'Continue'



NOTE: Connecting Ethernet or Phone is not required; it will automatically sequence through if you choose not to connect.



Installation Wizard: Activate Receiver

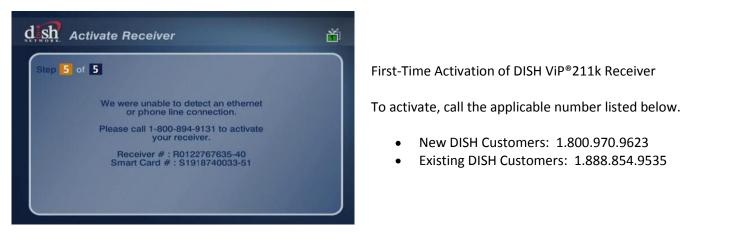

Subsequent Setup of Winegard Manual Tuning Satellite Antenna⁺⁺ & DISH Receiver

Setup | Installation | Receiver Activation

Software Version L551RGND-N

INSTRUCTIONS ESTIMATED SETUP TIME STEP #1

DO NOT hook up your Winegard manual tuning satellite antenna at this time.

STEP #2

Power up TV and ViP[®]211k Receiver.

STEP #3

Select 'Menu' from your remote. From the Main Menu page, select '611' on your remote control number pad.



Step #4


Point Dish – Connect your Winegard manual tuning satellite antenna to your receiver.

	To Enter you	o calculate Di r ZIP Code a	sh 500 Pea nd select sa	k Angles, atellite 110 or 1	19
Zip Code	Dish System	Transponder	Satellite		Modulator
			119	Ch	eck Switch
00000	500	$\overline{\mathbf{\nabla}}$		C	Done
				C	Help
	Azimuth	: N/A Elev	vation: N/A	A Skew: N/	A
0	10 25	50	75	100	125
Loci	ked - Echo	Star 119 Wes	it	Signal Streng	ath: 34

Step #5

<u>Point Dish</u> – Enter your zip code using your DISH remote in the 'Zip Code' field.

- Then, select your dish system by scrolling on your DISH remote in the 'Dish System' field.
- This will give you the coordinates to position your Winegard manual tuning satellite antenna; follow those coordinates.
- The green status bar at the bottom of this screen will indicate which satellite (110, 119, 129) you have found. If it does not automatically enter the satellite information in the 'Satellite' field, enter it manually with your DISH remote.
- Select 'Check Switch'

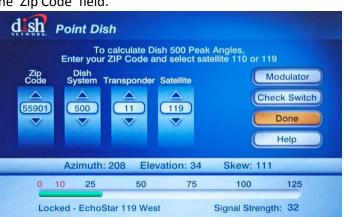

Step #6

Installation Summary – Select 'Test'

dish Installation Summary	Tue, May 22	dish Installation Summary	Tue, May 22
Satellite Input Port: 1 Satellite: 1 Trans: X Device: 1 Device: 1 Status: Reception Verified Switch: None SuperDISH Alternate Details Test Done	Help	Attention Please wait while your switch installation Currently doing test # 5 of SuperDISH Example 1 Attention Details	
Step #7			

Installation Summary - Select 'Done'

If using TR6100, you should see all three satellites at this step (110, 119, 129)

d sh Installation Summary	Tue, May 22 Point Dish To calculate Dish 500 Peak Angles, Enter your ZIP Code and select satellite 110 or 119
Port: 1 Satellite Input	Zip Cool Attention 378 or itch
Trans: OK Device: Image: Comparison of the second	Now scanning for available satellites Please wait.
Contraction Contra	Help

NOTE: If you see an X in the place of the satellite information (110, 119, 129) at this step, select 'Done' and reposition your satellite antenna, following the instructions starting at Step #5.

STEP #8

Select 'Done' on your DISH remote, and then select 'Cancel' from the Main Menu three (3) times.

dish Point Dis	h	
To Enter your	calculate Dish 500 Pea ZIP Code and select s	ak Angles, atellite 110 or 119
Zip Dish Code System T	ransponder Satellite	Modulator
55901 500		Check Switch
	V	Done
and the second s	and the second second	Help
Azimuth:	208 Elevation: 34	Skew: 111
0 10 25	50 75	100 125
Locked - EchoS	tar 119 West	Signal Strength: 32

535 Popup: Acquiring Signal



330 Popup: Downloading Program Guide

