

<html><head></head><body><pre style="word-wrap: break-word; white-space: pre-wrap;">Wireless configuration - 18.06.2009

Default configuration example for the wireless part on the SX-200-1213, SX-500-1033, SX-550-1701, SX-560, SX-600-1003

```
set nwrk speed 54
set nwrk mode infrastructure
set nwrk enc WPA
set nwrk authtype PSK
set nwrk radio 802.11b-g
set nwrk ssid [SSID]
set nwrk inap PAP
set nwrk id anonymous
set nwrk wpapsk [WPA-PSK]
set nwrk regdom DEI
```

Please adjust the part with [SSID] and [WPA-PSK] with your values from the AP. Without the [].

You can configure any device via console (if available) or via telnet: telnet 192.0.0.192 for example.

For encryption types: please refer to http://www.silexeurope.com/media/manuals/silex-Console-Commands_1_12.pdf

3.3 SET NW ENC

Sets WLAN Encryption Mode. Supported modes are none, 64 bit WEP, 128 bit WEP, and TKIP (WPA).

```
SET NW ENC [DIsable | 64 | 128 | WPA | WPA2 | WPA2-WPA | Dynamic WEP ]
(default = Disable)
```

Other settings like IP settings etc. are also available in the console commands manual.

If you need help on this please contact us on support@silexeurope.com

- silex support team

</pre></body></html>