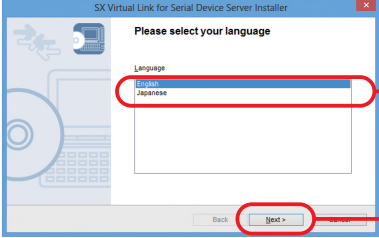


SX Virtual Link for Serial Device Server Installation

This document explains how to install SX Virtual Link for Serial Device to a Windows PC. Follow the instructions below to install SX Virtual Link for Serial Device.

1 Double-click **Cosetup.exe** contained in the **SX Virtual Link for Serial Device Server** you have downloaded.

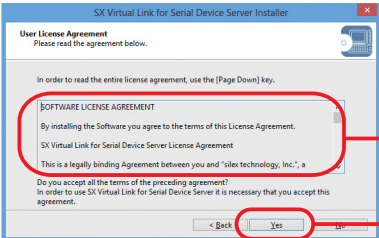
* If the User Account Control screen is displayed, click **Yes** or **Continue**.

2  Click **English**.


Click **Next**.

3  Click **Next**.

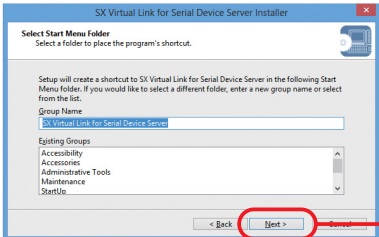
Click **Next**.

4  Read the agreement.

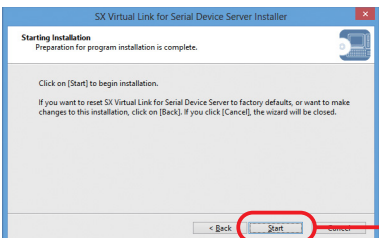
Click **Yes**.

5  Click **Next**.

Click **Next**.

6  Click **Next**.

 
Click **Next**.

7  Click **Start**.

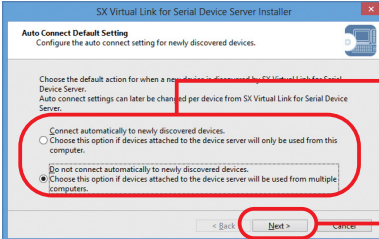
Click **Start**.

8  Click **Install**.

9  Click **Install**.

10  Click **Yes**.

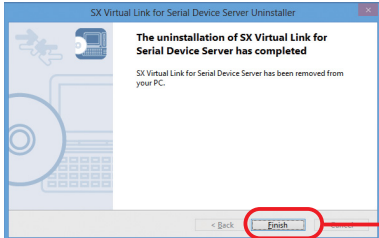
Click **Yes**.

11  ① Select the action you wish to take when new devices are discovered.

② Click **Next**.

If **Connect automatically to newly discovered devices** is selected, SX Virtual Link for Serial Device Server will automatically connect the new devices when they are detected. Select this when you are sure that you will be the only user of the serial device.

If **Do not connect automatically to newly discovered devices** is selected, you will manually connect the new devices by selecting it on SX Virtual Link for Serial Device Server. Select this when you want to share the serial device with other users.

12  Click **Finish**.

Click **Finish**.

Customer Support

USA : silex technology america, Inc.

E-mail : support@silexamerica.com

URL : http://www.silexamerica.com/

Phone : 1-866-765-8761

Europe : silex technology europe GmbH

E-mail : support@silexeurope.com

URL : http://www.silexeurope.com/

Phone : +49-(0)2151-65009-0