


### PRODUCT DATA SHEET

Part Number: **NX90T1.5** Right angle adapter with self seizing contact and test point, 1.5" Extension

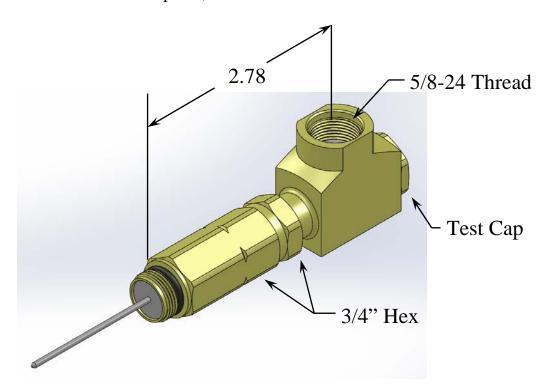

# **Operation Specification:**

Bandwidth 0 MHz to 1 GHz

Impedance 75 Ohms

Return Loss

Better than -30 dB to 1 GHz
Insertion Loss

Less than 0.10 dB to 1 GHz

Operating Voltage Rating 90 Volts (@ 60 Hz continuous AC)
Operating Current Rating 20 Amps (@ 60 Hz continuous AC)

Operating Temperature Range -40° to +140° F

## **Tooling Requirements:**

- Two (2) <sup>3</sup>/<sub>4</sub>" wrenches
- Suitable wrenches for installing pin connector
- Cutters for pin of connector


Document Number: Revision C Page 1 of 2




#### INSTALLATION INSTRUCTIONS

#### NX90T1.5

- 1. Loosen the equipment seizure screws.
- 2. Measure and trim the pin of the Right Angle Adapter according to equipment manufacturer's specification.
- 3. Thread the Right Angle Adapter into the equipment housing approximately 4 turns.
- 4. Trim the pin of the connector to 3/4". Use the width of the Right Angle Adapter as a pin trim guide.
- 5. Hand tighten the pin connector into the Right Angle Adapter. Wrench tighten an additional 1/8 to 1/4 turn while holding the adapter stationary with another wrench.
- 6. Install the prepared cable into the pin connector and fully tighten per the connector installation instructions.
- 7. Hand tighten the jam nut of the Right Angle Adapter to the equipment housing while holding the adapter stationary, then further tighten the port nut 1/8 to 1/4 turn with a wrench.
- 8. Tighten the seizure screw within the equipment housing according to the manufacturer's specification.

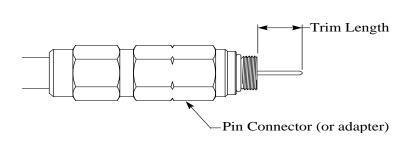

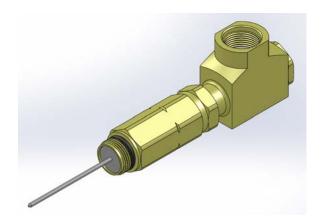

Document Number: Revision C Page 2 of 2