

Resetting the CODE on the wireless *Code Dodger Keypad*

Tools you will need:

- 1) A step-ladder, or stool, to reach the Electric Garage Door Operator hanging from the ceiling
- 2) A clear path between the step-ladder, or stool, to the Keypad

Prep Work: Locate the *Learn Code Button and Radio Signal Indicator Lamp* on your Electric Operator.

- On the PYTHON model they are under the Lens Cover on the bottom right hand corner as you face the light bulb.
- On the PHANTOM model they are on the rear flange of the right hand side panel as you face the garage door with the Operator in front of you.

Erase existing CODE

- Slide the Keypad cover half way up, or to the middle of No 5 key.
- With one hand press & hold buttons "PROG" and "8" while with the other hand slide up the cover to just past the indicator lamp.
- The indicator lamp will blink once and go out.
- Close cover fully

Programming the Keypad to open ONE door.

- Slide the keypad cover up to past the indicator lamp, which will blink once & go out.
- Press sequentially: [3-5-7-"PROG"]. The indicator lamp will blink once per second.
- Enter your PIN (up to 8 digits) and press the "PROG" button. The indicator lamp will blink twice per second.
- Close cover fully.

- Slide cover up to just past the indicator lamp.
- Go the Operator hanging from the ceiling and press the *Learn Code Button*: the adjacent Radio signal indicator lamp will start blinking.
- Quickly go to the keypad and enter the PIN you previously selected.
- Press the "SEND" button. Nothing will happen just then.
- Press the "SEND" button again to confirm the code. Nothing will happen again.
- Press the "SEND" button a third time. THE DOOR WILL CLOSE.
- Close cover fully.

Test for normal operation.

- Slide cover up to just past the indicator lamp. **Wait for indicator lamp to go out before pressing any buttons.**
- Enter PIN. Indicator lamp blinks with each key pressed.
- Press and Hold the "SEND" button. The door will move.
- Close cover fully.