

Installation of Weight Block

Graphical Symbols



This lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user of the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



	CAUTION RISK OF ELECTRIC SHOCK, DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER, NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		

Important Safety Instructions



PLEASE READ AND KEEP THESE INSTRUCTIONS. OBSERVE ALL WARNINGS AND FOLLOW ALL INSTRUCTIONS CONTAINED IN THESE SAFETY INSTRUCTIONS AND THOSE ON YOUR TELEVISION. RETAIN THESE INSTRUCTIONS FOR FUTURE USE.



Electrical energy can perform many useful functions. This unit has been engineered and manufactured to assure your personal safety. However, improper use can result in potential electrical shock or fire hazards. In order not to defeat the safe-guards incorporated on this receiver, observe the following basic rules for its installation, use and servicing. Your television is fully transistorized and does not contain any user serviceable components. Removal of the cabinet cover may expose you to dangerous voltages. Refer all servicing to qualified service personnel.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.
8. Do not install near any heat source such as radiators, heat registers, stove, or other apparatus (including amplifiers) that produce heat.

9. Only use attachments/accessories specified by the manufacturer.
10. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



11. Unplug this apparatus during lightning storms or when unused for long period of time.
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNING – To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.



WARNING – OXYGEN ENVIRONMENT: Do not use in any oxygen tent or oxygen chamber. Such use may cause a fire hazard.

Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus

CLEANING – Clean the exterior of this television by removing dust with a lint-free cloth. For further cleaning, use a soft cloth or paper towel dampened with water.

DISINFECTING – Do not immerse this TV, rather clean with a soft damp cloth. To avoid damage to the surface of the television, test a small portion of the TV's cabinet with any new disinfectant to verify that the disinfectant will not discolor or soften the enclosure.

REMOVING THE P-9

PROCEDURE



1. REMOVE 7/16 ACORN NUT FROM SAFTY PIN
2. REMOVE SAFTY PIN FROM THE NOSE
3. **WARNING:** REINSTALL SAFTY PIN IN ARM LOCKING HOLE PRIOR TO PERFORMING THIS PROCEDURE
4. LIFT NOSE COVER

1.



2.



3.



4.



5. SLIDE CONNECTOR COVER BACK AND DISCONNECT CABLE
6. REMOVE NUT USING 7/16 WRENCH, AND DISCARD
7. REMOVE RETAINING PLATE, AND DISCARD
8. SLIDE THE P-9 STRAIGHT FORWARD

5.



6.



7.



8.




INSTALLING THE NEW TV

PROCEDURE

1. REMOVE ALLEN HEAD CAP SCREW FROM THE NOSE USING A 3/16 ALLEN WRENCH, AND DISCARD
2. INSTALL THE NEW TV PER THE NEW TV INSTRUCTIONS

1.

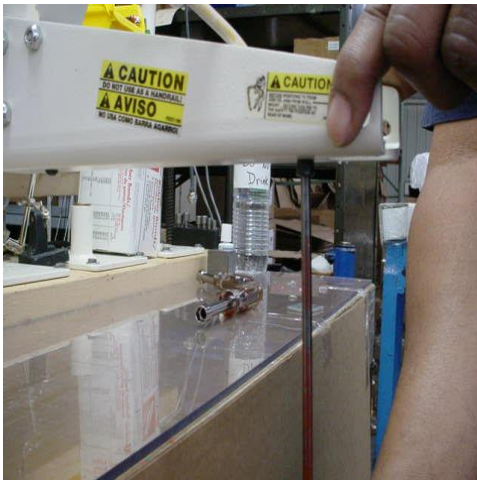

2.



7.



3. RECONNECT CABLE AND TIGHTEN WITH (2) 7/16 WRENCHES
4. SLIDE CONNECTOR COVER OVER THE OTHER COVER
5. INSERT PDI-530-WEIGHT

7.



8.



6. PLACE CABLE INTO NOSE AS SHOWN
7. INSTALL SUPPLIED NOSE COVER CLIPS, FOLLOWING INSTRUCTION PD196-098.

9.



10.



8. INSTALL SUPPLIED SCREWS IN FRONT OF NOSE TO HOLD NOSE COVER IN PLACE (IF ARM COVER KIT IS TO BE INSTALLED, FOLLOW INSTRUCTIONS FOR PIN STORAGE WHEN USED WITH COVER KIT).

11.



9. RE-ADJUST ARM FOR PROPER BALANCE

FOR MORE INFORMATION

IF YOU HAVE ANY QUESTIONS, PLEASE FEEL FREE TO CONTACT PDI'S
ENGINEERING DEPARTMENT AT 937-743-6010