



**PD108-206 Universal Remote**

**INTRODUCTION**

The PD108-206 Universal Programming Remote Control allows menu adjustments to many of the PDI arm and wall mounted televisions. This remote will also control additional television brands. See the accompanying owner’s manual for a complete listing of compatible codes. This instruction sheet assumes you have correctly installed the two “AAA” batteries.

**REMOTE PROGRAMMING**

1. Press and hold the **Code Search** button until the red indicator stays on. Release the **Code Search** button. The red indicator blinks and then stays lit.
2. Press the **TV** button on the remote control.
3. Locate the appropriate model television from the Code Table and enter the three-digit number using the remote’s keypad. Note: after a valid code entry the red indicator turns off. For an invalid code entry the red indicator flashes.
4. With the TV turned ON, press the **CHAN +** button. If the TV responds, no further programming is required.

**CODE TABLE**

<b>MODEL</b>	<b>CODE</b>	<b>NOTES</b>
PDI-Z9TV (All Versions)	0714	
PDI-P9TV	NONE	Not Supported - 1
PDI-Z13TV (All Versions)	0714, 0115	
PDI-P10LCD	NONE	Not Supported - 2
PDI-P15LCD (All Versions)	0807	3
PDI-P20LCD (All Versions)	0807	3
PDI-P23LCD (All Versions)	0807	3
PDI-P32LCD (All Versions)	0807	3

**NOTES**

1. Order programming remote part PD108-213.
2. Order programming remote part PD108-412.
3. Press the “**SUBTITLE / CC**” button on the remote to activate the TV’s setup menu.