

These instructions are provided as a quick start for programming the PDI-P23LCDC television. The instructions assume you have installed the TV on the wall, correctly wired and connected a compatible pillow speaker, and have the programming remote control in hand. See the User's Manual for details.

Channel Setup

The TV offers three different programmable channel banks or Service Levels. Programming is only accomplished using the handheld remote control.



Signal

Four different tuning types are available depending upon the healthcare facilities signal style. Selection of the correct signal type is required for the TV to recognize all possible channels and before any channel programming can begin.

- 1. Press the SETUP button to display the SETUP MODE menu.
- 2. Press the CH▲ / CH▼ button to select Signal.

Channel Setup		Auto Program	
Signal Auto Program Add/Delete Channels Clear Service Level Copy Service Level Parental Control Power on Channel Channel Lock Channel Memory Override	Cable STD	 Mode Channel Sequence Free Basic Premium 	Analog On Interleave A+ Programmed Blank Blank
Position: ▲ ▼ Exit: SETUP	Next: ৰ ►	Position: ▲ ▼ Exit: SETUP	Next: ◄

- 4. Press the CH▲ / CH▼ button to select Mode.



- 6. Press the CH▲ / CH▼ button to select the Channel Sequence menu item.
- 8. Press the CH▲ / CH▼ button to select the Service Level you wish to program. The menu displays the current programming status of each level as either Programmed or Blank. NOTE: A Programmed service level can also be re-programmed if desired.
- 9. Press the VOL► button to start auto programming.
- 10. A confirmation menu will appear before proceeding. Press either the CH▲ to start auto programming. Press CH▼ button to cancel the operation. The TV will now search all available channels. Auto programming may require several minutes to complete.
- 11. Press the SETUP button to return to normal TV viewing.

SOUND SETUP FOR PILLOW SPEAKER OPERATION

Internal Speaker Enable

The speaker's inside the TV's cabinet can be turned on or off for either different TV Service Level or Source modes. Note: Turn Off the TV's internal speaker to guarantee sound to an attached pillow speaker.

Sound		Internal Speaker Enable	
 Equalizer Balance AVL Surround Minimum Volume Maximum Volume Power on Volume Internal Speaker Enable HDMI Audio Port Composite / S-Video Sound Mode 	► 0 Enabled Disabled 0 100 Last ► HDMI L+R	TV Free Service Level TV Basic Service Level TV Premium Service Level Composite Video S-VIDEO Component1 Component2 HDMI PC-ANALOG FM RADIO	Speaker Enabled Enabled Enabled Enabled Enabled Enabled Enabled Enabled Enabled
Position: ▲ ▼ Exit: SETUP	Next: ◀ ►	Position: ▲ ▼ Exit: SETUP	Next: ৰ ►

- 1. In the Sound menu, press CH▲ / CH▼ button to select the Internal Speaker Enable menu item.
- 2. Press the CH▲ / CH▼ button to select the desired Service Level(s) or Sources.
- 3. Press VOL ◄ / VOL ► to Disable.
- 4. Press the SETUP button to return to the preceding menu.



Minimum Volume

Sets the minimum volume level the TV can reach. Setting this to any value other than 0 guarantees that some level of sound will always be heard in the pillow speaker when the TV is operating.

- 1. In the Sound menu, press the CH▲ / CH▼ button to select Minimum Volume.
- 3. Press the SETUP button to return to the preceding menu.

Power On Volume

Sets the initial volume the TV starts with upon powering on. Once the TV is on, the volume can be set to any allowable level.

- 1. In Sound menu, press the CH▲ / CH▼ button to select Power on Volume.
- 3. Press the SETUP button to return to the preceding menu.

Sound				
∎ Equalizer ■ Balance	►			
	Enabled			
Surround	Disabled			
Minimum Volume	0			
Maximum Volume	100			
Power on Volume	Last			
Internal Speaker Enable	►			
HDMI Audio Port	HDMI			
Composite / S-Video Sound Mode	L+R			
Position: ▲ ▼				
Exit: SETUP	Next: ৰ ►			

ADDITIONAL INSTRUCTIONS

Additional programming instructions can be found in the television's user manual. Please refer to document number PD196-099 for further details.