



CAUTION: Disconnect the TV's AC Power Cord from the wall outlet before installing the DVD module. Failure to do so may result in catastrophic damage to the module and/or the TV.

NOTE: The PD251-005 DVD Module is designed for installation in the PDI-P19LCDC TV and PDI-P19W TV models. Installation in any other model TV is not supported.


Tools Needed	
Item	Description
1	ESD Wrist Band
2	Safety Glasses
3	#1 Phillips Screw Driver

1. Observe all standard Electrical Discharge (ESD) procedures. The human body must maintain ground potential when touching the sensitive electronic components inside the television. The best way to achieve this is by wearing an appropriate wrist strap. The wrist strap will have a wire to earth ground to discharge any body potential. The ground wire **MUST** contain a series resistor of at least 1MΩ (1 million ohms) for YOUR PERSONAL SAFETY.
2. Always wear Safety Glasses to prevent injury from debris.

DVD Module Kit PD251-021 Components			
Item	Qty	Description	Part Number
1	1	DVD Module	PD251-005
2	1	Connector Cable	PD106-631 (used only with P19W installation)
3	1	Bracket	PD181-732 (used only with P19W installation)
4	4	Screws	PDISEMS63225 (will use only 1 in P19LCDC installation)
5	1	Grill Cover	PD130-229 (used only with P19W installation)

Installation Instructions for installing in the PDI-P19LCDC



1. Disconnect the TV's AC Power Cord from the outlet.
2. Remove the Security Screw from the filler Module.
3. Slide the Filler Module out and remove it from the TV.

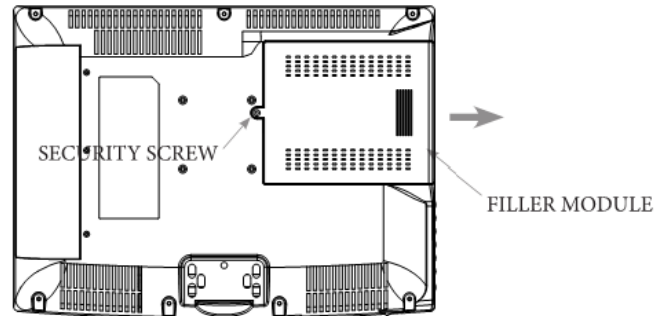


4. Locate the DVD Interface Ribbon Cable inside the TV's cabinet. Extend the Ribbon Cable and attach to the PD251-005 DVD Module's recessed connector port located beneath the mounting ear.

NOTE: There is a polarity notch on the ribbon cable and the mating connector on the DVD module. Be sure they are aligned to ensure proper connection.

5. Slide the DVD module into position taking care to insert the module's mounting feet into the keyed openings.

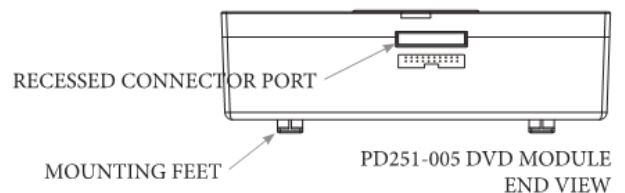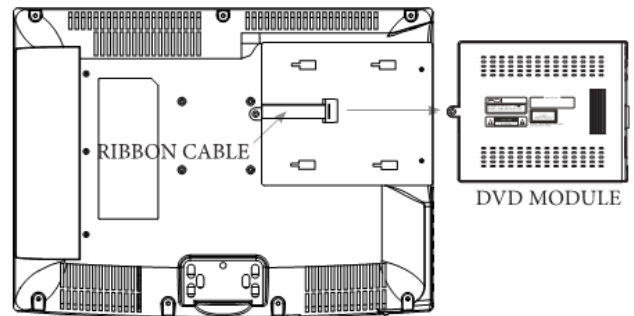


6. Secure the DVD module in place with the Security Screw.
7. Connect the TV's AC Power Cord.

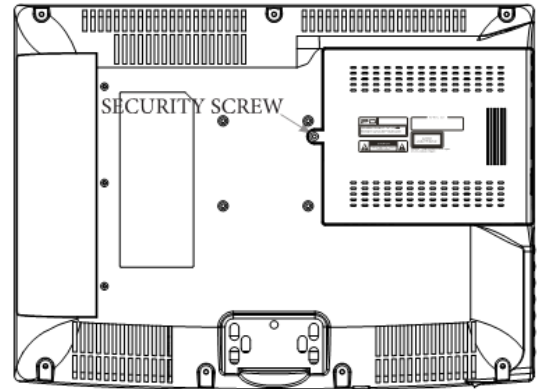


Enable DVD Module

1. Turn the TV On, and with the PD108-427 remote control (packed with the DVD module), activate the Setup Menu. The TV's Setup Menu is activated by pressing the key sequence **OK, 7, 5, 3, 1** on the remote control.
2. From the SETUP menu, press **▲** or **▼** to highlight Sources.
3. Press **▶** to select it.
4. Press **▼** to highlight SLOT DVD.
5. Press **◀** or **▶** to change the source status to Enable.
6. To exit, press OK until programming menus disappear.

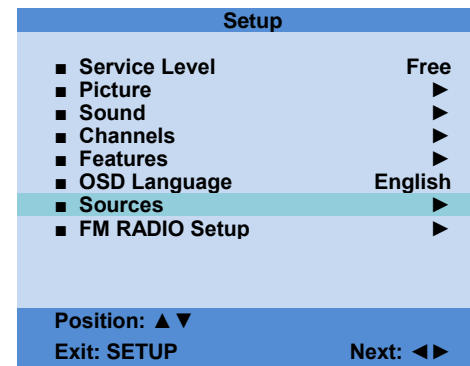


Disc Playback

1. Press the TV/AV button on the remote or TV's keypad and switch the TV to DVD mode. Insert DVD disc and verify correct operation.
2. Gently insert the disc into the slot, with the label side facing the same direction as the front of the TV.
3. The disc will be drawn into the unit and loaded automatically.
4. Press the **▶ Play** button to start playback.
NOTE: Playback might start automatically when the disc is inserted.
5. During the playback, Press **■ Stop** button twice to cancel Last Memory (Last Memory remembers the last place stopped on a disc, so it can be returned to by pressing Play.)
6. During playback, press the **⏸ Pause** button once to pause the playback; press it repeatedly to start step-by-step playback and then press the **▶ Play** button to resume normal playback.
7. During playback, press the **⏭** button to go to the next chapter. Press the **⏮** button once to return to the beginning of the current chapter; press it twice to go to the previous chapter.
8. With the PD108-427 remote control, use the number buttons to enter a desired chapter.
9. During playback, press the **⏭** button to activate fast forward playback; press the **⏮** button to activate fast backward playback. During fast playback, press the **▶ Play** button to resume normal playback.
NOTE: The FFD/RWD speeds are x2, x4, x8, x16, x32.
10. Press the MUTE button to turn the sound on and off.
11. VOL +/- to control the volume level.

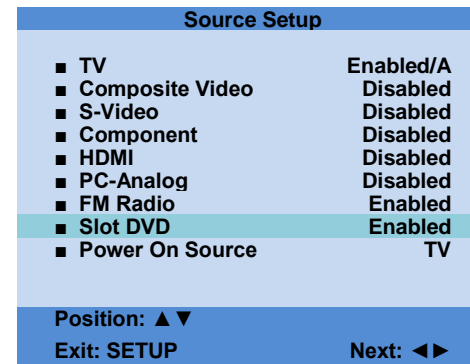

Label side

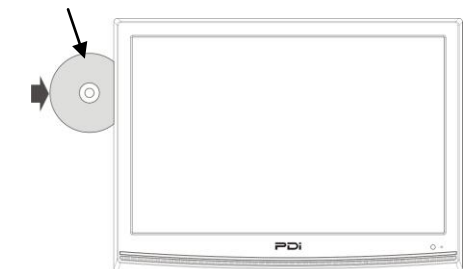




Tools Needed	
Item	Description
1	ESD Wrist Band
2	Safety Glasses
3	5/16" Hex Allen Wrench
4	#1 Phillips Screw Driver
5	#2 Phillips Screw Driver

1. Observe all standard Electrical Discharge (ESD) procedures. The human body must maintain ground potential when touching the sensitive electronic components inside the television. The best way to achieve this is by wearing an appropriate wrist strap. The wrist strap will have a wire to earth ground to discharge any body potential. The ground wire **MUST** contain a series resistor of at least 1MΩ (1 million ohms) for YOUR PERSONAL SAFETY.
2. Always wear Safety Glasses to prevent injury from debris.

DVD Module Kit PD251-021 Components			
Item	Qty	Description	Part Number
1	1	DVD Module	PD251-005
2	1	Connector Cable	PD106-631
3	1	Bracket	PD181-732
4	4	Screws	PDISEMS63225
5	1	Grill Cover	PD130-229

Instructions for installing in the P19W



1. Remove the Center cover from the back of the TV. Remove both side covers.
2. Remove Grill Cover (PD130-231) at bottom of TV.
3. Remove EMI Shield.
4. Plug connector cable (PD106-631) into the TV.
5. Route the connector cable through the slot.
6. Replace EMI Shield. Be careful not to pinch any wires.
7. Remove orange sticker and insert connector cable into DVD module.
8. Place DVD module in lower left corner of back of TV.
9. Insert Bracket PD181-732 over DVD module, with tabs facing bottom of TV, and secure with four PDISEMS63225 screws.
10. Install Grill Cover PD130-229 using screws removed from Grill Cover PD130-231.
11. Replace side and center covers on back of TV.

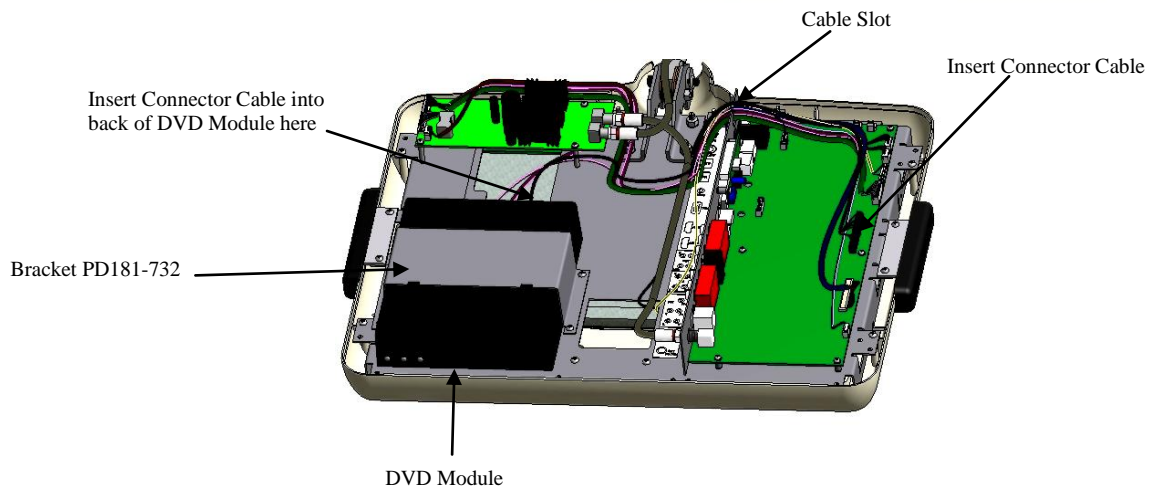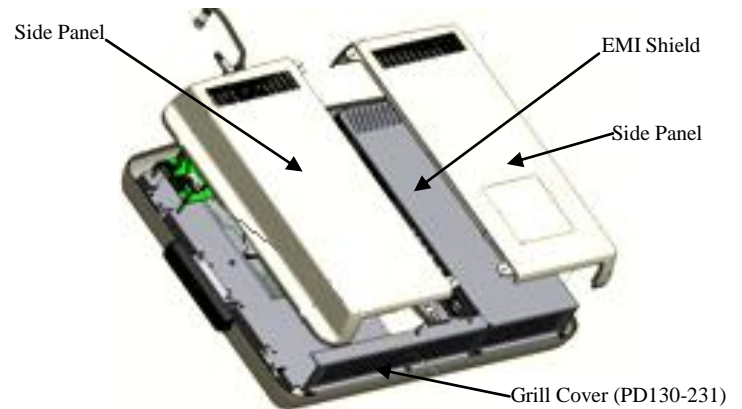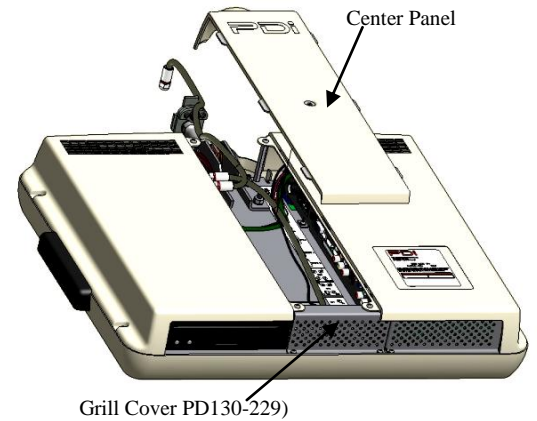

Enable DVD Module

Now that you have the DVD Module installed, it needs to be enabled by using the programming menus. After the DVD Module is enabled, it is ready for use.

1. Plug the Power Cable into power supply.
2. Turn the TV On, and with the PD108-427 remote control (packed with the DVD module), activate the Setup Menu. The TV's Setup Menu is activated by pressing the key sequence **OK, 7, 5, 3, 1** on the remote control.
3. From the SETUP menu, press ▲ or ▼ to highlight Source Setup.
4. Press ► to select it.
5. Press ▼ to highlight SLOT 1.
6. Press ◀ or ▶ to change the source status to Enable.
7. To exit, press OK until the programming menus disappear.

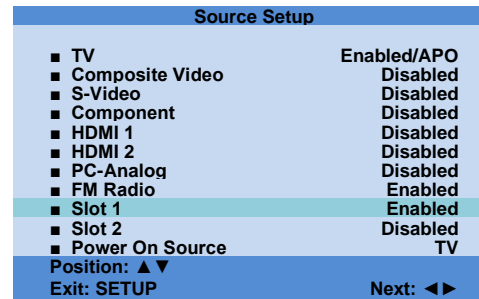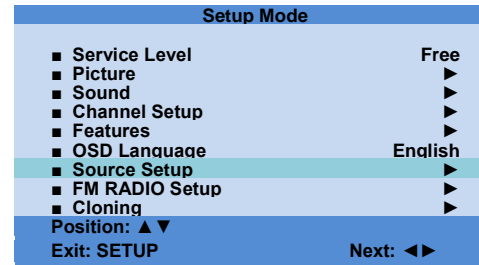**Disc Playback**

Patients may use a compatible pillow speaker or the PD108-427 remote control.

NOTE: Some pillow speakers may not have all the DVD control functions that are listed below. (Consult the pillow speaker manual for the model that will be attached to this unit.)

1. Use the **TV/AV** button on the TV, pillow speaker (if available) or remote to select the DVD mode.
2. Gently insert the disc into the slot, with the label side facing the same direction as the back of the TV.
3. The disc will be drawn into the unit and loaded automatically.
4. Press the ► **Play** button to start playback.

NOTE: Playback might start automatically when the disc is inserted.
5. During playback, press the ■ **Stop** button once to stop playback and then press the ► **Play** button to resume. Press the ■ **Stop** button twice to stop playback completely.
6. During playback, press the || **Pause** button once to pause the playback; press it repeatedly to start step-by-step playback and press the ► **Play** button to resume normal playback.
7. During playback, press the ►► button to go to the next chapter. Press the ◀◀ button once to return to the beginning of the current chapter; press it twice to go to the previous chapter.
8. During playback, press the ►►► button to activate fast forward playback; press the ◀◀◀ button to activate fast backward playback. During fast playback, press the ► **Play** button to resume normal playback.

NOTE: The FFD/RWD speeds are x2, x4, x8, x16, or x32.

9. On the PD108-427 remote control, the OK button and the directional buttons that surround it can be used to select the menu item choices on a DVD. (e.g. Scene Selection and Bonus Features.). Use the four directional buttons to move to the desired menu item, and press the OK button to select it.

**TROUBLESHOOTING****TV Will Not Turn On**

1. Verify the AC Power Cord is plugged into the AC Wall Outlet.
2. Allow a 15 second boot-up period following first connection of AC power.

Slot Source Does Not Show DVD

1. DVD was installed with the AC Power Cord plugged into the outlet. To remedy, disconnect the AC power cord for 15 seconds, then re- connect the AC power cord. Enable the SLOT DVD Source.
2. Verify the DVD module Interface Ribbon Cable is fully seated to the DVD module.