 
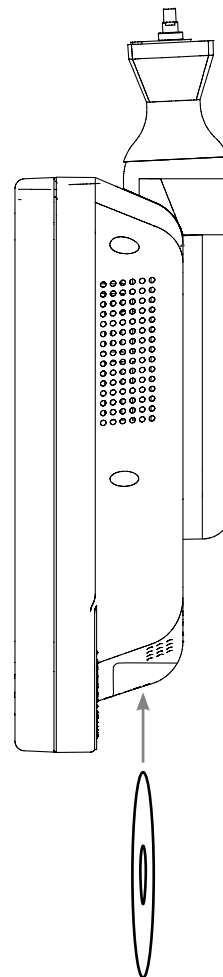 


# Operation of the PDI-P15X with Optional Internal DVD Player

 
Document Number: PD196I169R1

The model PDI-P15X-CN0050A television incorporates an **optional** internal DVD player. This model is easily identified by either examination of the keypad or DVD slot located on the bottom rear of the cover. The number keys provide DVD control when the TV is in DVD playback mode.

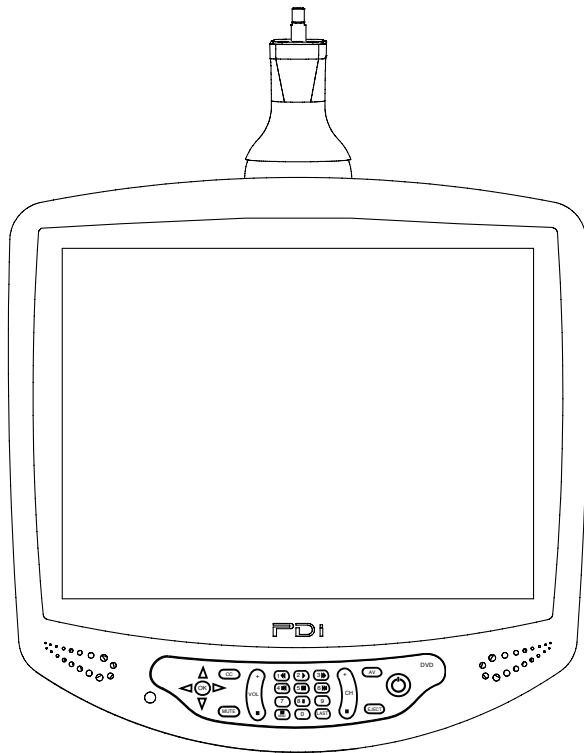

Key	Description
⏮ 1	Fast Rewind
2 ▶	Play
3 ▶▶	Fast Forward
⏮⏮ 4	Previous Track
5 ■	Stop
6 ▶▶▶	Next Track
8	Pause
MENU	Displays Menu
EJECT	Eject DVD
OK	Enter


← LABEL

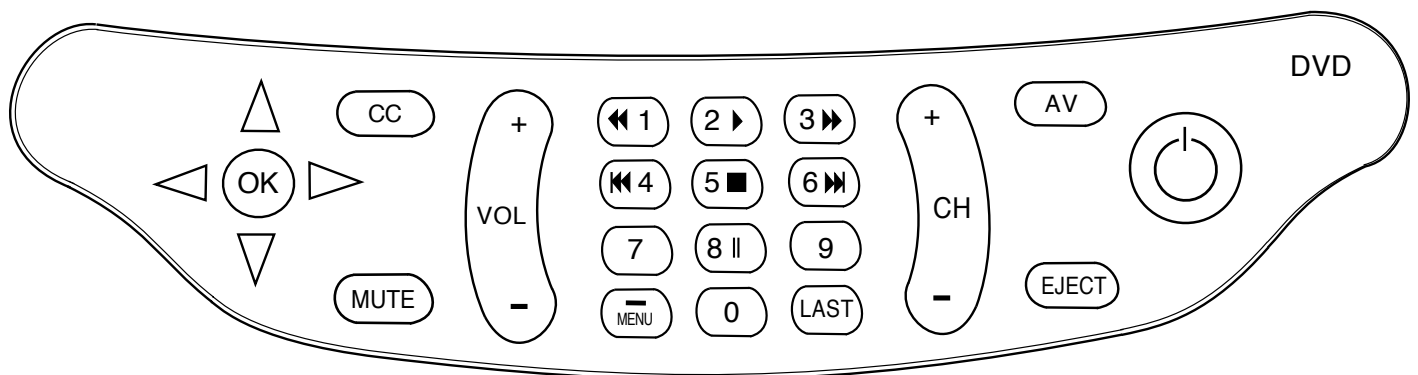

## Operating the TV's DVD Player

### DVD Mode and Load Disc

 1. Turn on the TV.
2. Switch the TV to DVD mode by pressing the AV button repeatedly until the DVD logo appears on the screen.

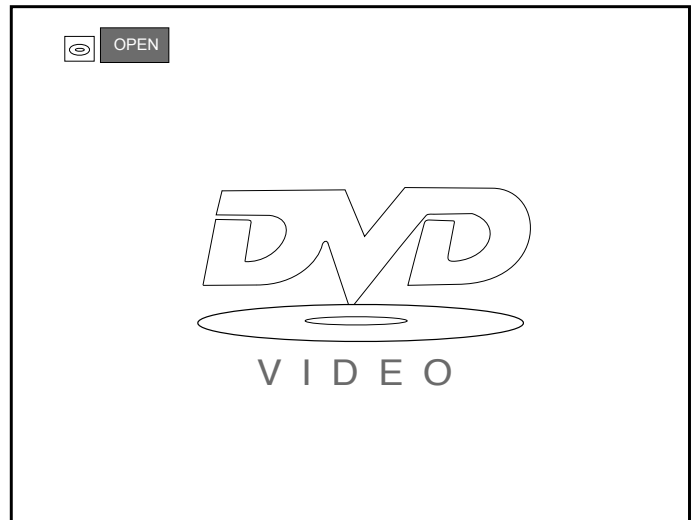


3. Insert the DVD disc into the TV's Disc slot. The DVD disc label faces the front of the TV. The shiny side faces toward the rear of the TV.

The DVD disc screen status should change to **LOADING** and then the movie's disk menu should appear.

If the DVD disc fails to load, eject the disc, and verify that the label faces the front of the TV.

A dirty or scratched disc may fail to play.

NOTE: the player will not play Blu-Ray discs.

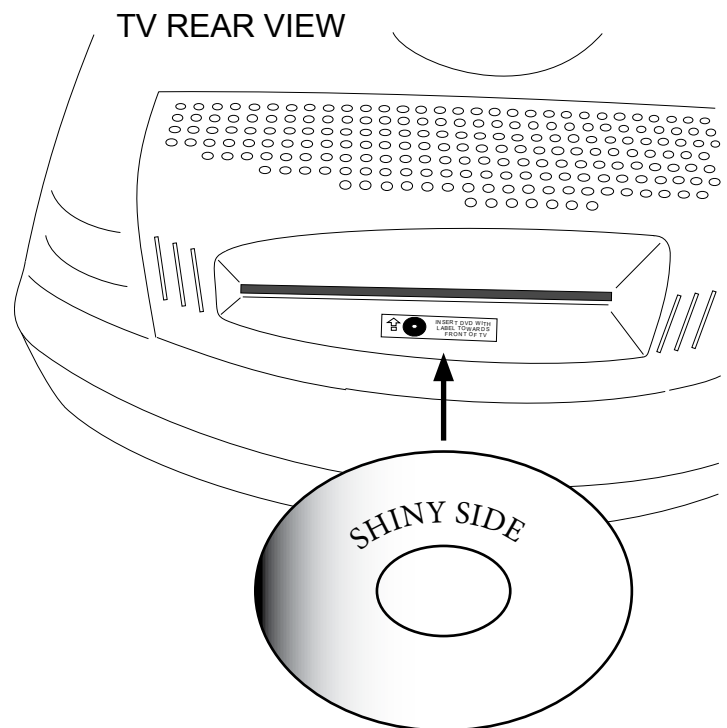


*DVD Playback and Menu Navigation*

The number keys provide DVD control when the TV is in DVD playback mode.

Key	Description
◀◀ 1	Fast Rewind
2 ▶	Play
3 ▶▶	Fast Forward
◀◀ 4	Previous Track
5 ■	Stop
6 ▶▶▶	Next Track
8	Pause
MENU	Displays Menu
EJECT	Eject DVD
OK	Enter



*Navigating DVD Menus*

The OK button and the directional buttons that surround it can be used to select the menu item choices on a DVD. Use the four directional arrows to move to the desired menu item and press the OK button to select that item.

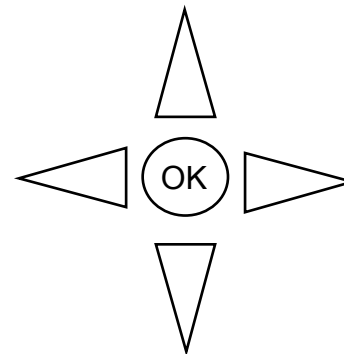

*Ejecting the DVD*

Press the EJECT button to remove a DVD disc.  
NOTE: the TV must be in DVD mode to enable DVD control functions.

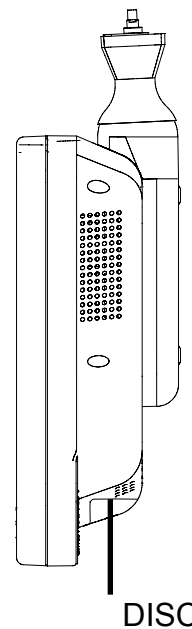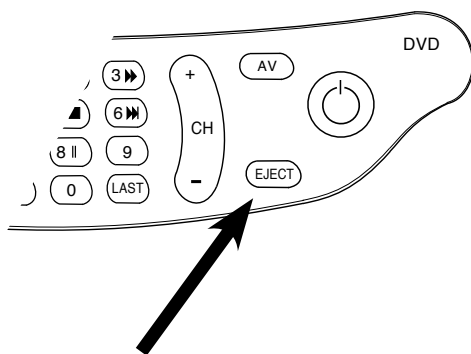

*Returning to Normal TV Viewing*

Press the AV button at any time to return to Normal TV viewing mode.