

Quick Reference to On-Screen Menus

AVAILABLE MENUS

Your TV is menu operated, that is, adjustments that can be made to the TV appear on the screen in a list of choices you can make. The <ADJUST>, SELECT, and MENU push-buttons have not been labeled to discourage patient operation. On certain PDi models the installer must enable these push-buttons via the BUTTON ENABLE switch located behind the recessed service panel on the television's rear cabinet. A service cover must be removed to gain access to the button enable switch. Once enabled, pressing the MENU button repeatedly, will choose between available menus. The menus are either Setup or Video.

MENU OPERATION EXAMPLE

MENU



Press MENU repeatedly until the desired menu is shown. This example shows choosing the SETUP Menu.


AUTO CH. SEARCH
ADD/DEL/BLNK
-> CH. LABEL
TIMER SETUP
CLOCK SET
CAPTIONS

SELECT



Press SELECT (SEL) repeatedly until the desired option is highlighted. This example shows choosing TUNING BAND.

-> AUTO CH. SEARCH
ADD/DEL/BLNK
CH. LABEL
TIMER SETUP
CLOCK SET
CAPTIONS

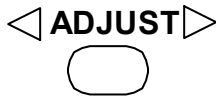

Press ADJUST (ADJ) Left/Right to access the submenu for TUNING BAND.
Press ADJUST (ADJ) Left/Right again to adjust the TUNING BAND.
Wait a few seconds and the TV will return to normal operation.

-> AUTO CH. SEARCH
ADD/DEL/BLNK
CH. LABEL
TIMER SETUP
CLOCK SET
CAPTIONS

PRESS SELECT TO CHANGE INPUT
OFF AIR ANTENNA
CABLE-TV INPUT
PRESS <ADJ> TO BEGIN SEARCH

Setup Menu Description

AUTO CH. SEARCH Finds all available channels and stores them in the memory of the TV for access by CHANNEL (CH) Up/Down. Use AUTO CH. SEARCH only when you first install your TV, or when you add or delete additional channels from your cable system.

CH. (Channel) ADD/DEL Lets you add channels to and remove channels from the active channels found when using the AUTO CH. SEARCH option. In this way you can customize the channels that are accessed through CHANNEL (CH) Up/Down.

TUNING BAND Allows for setting the TV channel selector (tuner) to match your antenna or cable-TV system. If you are having difficulty tuning channels, the TUNING BAND may have to be set manually to match your viewing needs.


AUTO FINE TUNE Lets your TV compensate for variations in broadcast and cable-TV frequencies. If you are having difficulty tuning channels, the AUTO FINE TUNE may have to be set manually to match your viewing needs.

CLOCK SET Sets the clock in the TV to the correct time.

CAPTIONS Displays closed captions (CC) or informational text when available on the selected channel.

(OVER)

VIDEO MENU

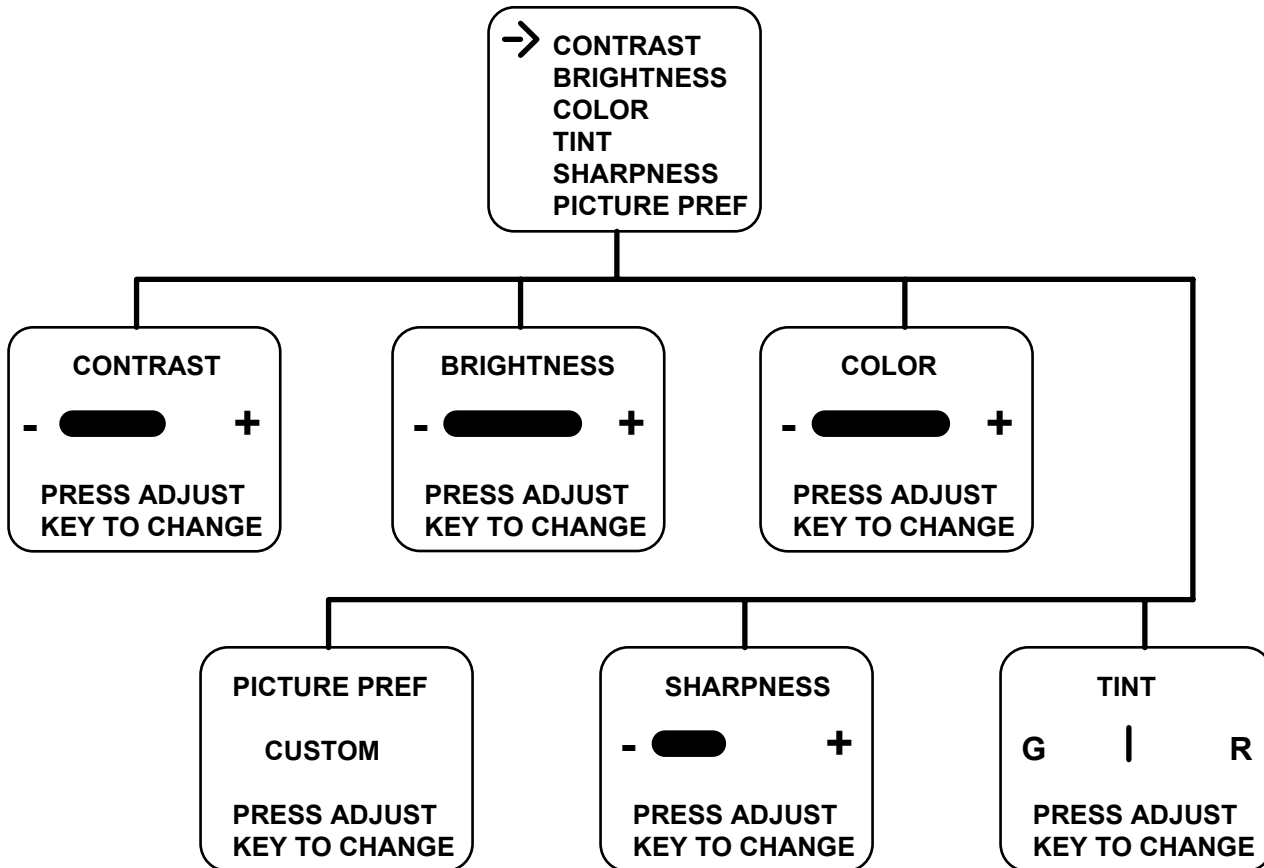

CONTRAST Adjusts the overall contrast and color level of the picture.

BRIGHTNESS Adjusts the brightness level of black areas in the picture.

COLOR Adjusts the intensity of the colors in the picture.

TINT Adjusts the color of the flesh tones, where G is Green and R is Red.

SHARPNESS Adjusts the clarity of the edges of objects for the clearest picture quality.

PICTURE PREF. Lets you decide if you want to use your own CUSTOM video settings, or the factory set PRESET video (Preference) settings.

To Use Video Settings

1. Select video setting to be adjusted with SELECT button.
2. Press ADJUST (ADJ) Left/Right until the most pleasing picture is seen.

NOTE: Any adjustment made to these settings while PICTURE PREF. is in PRESET mode will automatically store the current settings as the CUSTOM setting.

To Use PICTURE PREF. (Preference)

Press Adjust (ADJ) Left/Right to select status.

Remember (PDi models with button enable switch)

Always return the BUTTON ENABLE switch to the OFF position and replace the service panel after completion of TV programming and video setting. Patients who have active access to the menu and adjustment buttons will reprogram the TV and possibly mis-adjust video settings causing a service call.