



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

**CAUTION**

RISK OF ELECTRIC SHOCK,  
DO NOT OPEN!



**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL**

**THIS INSTALLATION SHOULD BE MADE BY A QUALIFIED SERVICE PERSON AND SHOULD CONFORM TO ALL LOCAL CODES. READ AND FOLLOW THE SAFETY INSTRUCTIONS BEFORE ATTEMPTING THIS INSTALLATION.**

**Note to CATV installer.** This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry into the room as practical.



**WARNING: OXYGEN ENVIRONMENT DO NOT** use in an oxygen tent or oxygen chamber. Such use may cause a fire hazard.

**WARNING:** To avoid the hazards of fire or electric shock, **DO NOT** expose this TV to rain or moisture.



**DANGER: ARM RECOIL HAZARD** The safety brake pin must remain in the SAFETY BRAKE PIN HOLE whenever the television set is removed from the arm or when the arm is removed from the wall bracket to prevent the arm from springing open.

**INSTALL ARM & TV**

This Arm is specifically designed to support a P10 Series LCD or similar weight television. Use of the arm with any other sized TV is NOT recommended.

- Place the arm's base pin into the wall bracket. The base pin should seat snug in the wall bracket.
- Tighten the wall bracket pilfer screw if so equipped.
- Remove the two retainer screws from the cover and open the nose cover.
- Insert the TV swivel completely in the arm's clevis (slot). Align the swivel retainer plate's mounting hole over the arm's mounting hole. Thread the 3/4" Socket Head Screw through the retainer plate and into the arm's nose. Tighten.
- The cable from the arm should be joined with the television cable, wrench tightened, and the connection covered by sliding the plastic boot sections into mating position.
- Remove the safety brake pin from the parking brake hole and secure to the plastic H-Clip inside the nose.
- Close the nose arm cover and line up the cover pin holes on the sides. Secure the nose cover using the retainer screws.
- Connect the coaxial cable at the base of the arm to the wall bracket "F" fitting. Tighten with wrench.
- Cycle the arm once or twice to check for free movement – if stiff, a slight loosening of the single friction screw will free the movement. **DO NOT LOOSEN MORE THAN 1/16 TURN.**
- Power the TV and verify correct operation. Refer to the instructions packed with the TV for programming and operation details.

Plastic covers may also be installed on the arm. Please refer to the instructions packed with the covers for installation directions.

