

**User
Manual**

PDI-P15LCDB-ARM & PDI-P15LCDB-WR



PDi[®]

Communication
Systems, Inc.
40 Greenwood Lane
Springboro, Ohio
45066

PH: 937-743-6010
FX: 937-743-5664

<http://www.pdiarm.com>

**Model PDI-P15LCDB
LCD TV
Computer Monitor**
Better Solutions Are Within Reach[®]

WARNINGS



WARNING:

To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



This lightning flash with arrowhead symbol, within an equilateral is intended to alert the user of the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

NOTE TO CABLE TV INSTALLER

This reminder is provided to call the cable TV systems installer's attention to Article 820-40 of the National Electrical Code. The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical.

MAINTENANCE AND SERVICING

Never remove the back cover of the TV, this can expose you to high voltage and other hazards. If the TV does not operate properly, unplug it and call an authorized service center or PDI.

CLEANING

Clean the exterior of this television by removing dust with a lint-free cloth.



RAIN AND MOISTURE

WARNING: To avoid the hazards of fire or electrical shock, DO NOT expose this television to rain or moisture.



OXYGEN ENVIRONMENT

WARNING: Do not use in any oxygen tent or oxygen chamber. Such use may cause a fire hazard.




WET LOCATION

Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

PRODUCT MODIFICATION

Do not attempt to modify this product in any way without written authorization. Unauthorized modification could void the user's authority to operate this product.

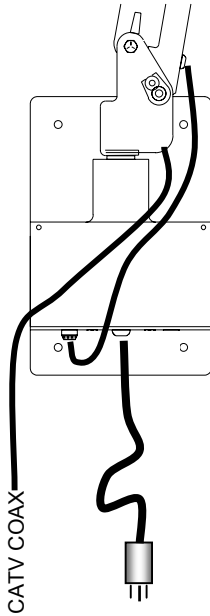

POWER

Arm Mounted

This set operates from a PDI-771-LCD power supply when arm mounted. The supply is housed in the support arm wall bracket.

- Connect the arm power cord that exits the base of the support arm.
- Connect the power cord to an AC outlet.
- Connect the hospital CATV coax. **NOTE:** Do not connect to a powered coax! Damage will result to the TV.

Wall Mounted

The wall mount version is powered using an external brick style power supply mounted to the wall bracket.

In the event of thunderstorms or power outages, please unplug the AC plug from the wall outlet and unplug the cable TV coax. Do not allow anything to rest upon or roll over the power cord, and do not place the set where the power cord is subject to damage.

REGULATORY INFORMATION

FCC

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential or commercial installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



UNDERWRITERS LABORATORIES

This device is safety tested and listed by the Underwriters Laboratories as a product for use in both the United States and Canada.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do no block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat source such as radiators, heat registers, stove, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the hospital grounding-type plug. A hospital plug has two blades and a third grounding prong. The third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long period of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Copyright, Disclaimer, and Trademarks

COPYRIGHT

PDI Communication Systems, Inc. claims proprietary right to the material disclosed in this user manual. This manual is issued for user information only and may not be used to manufacture anything shown herein. Copyright by PDI Communication Systems, Inc. All rights reserved.

DISCLAIMER

The author and publisher have used their best efforts in preparing this manual. PDI Communication Systems, Inc. make no representation or warranties with respect to the accuracy or completeness of the contents of this manual and specifically disclaim any implied warranties or merchantability or fitness for any particular purpose and shall in no event be liable for any loss of profit or any other damages. The information contained herein is believed accurate, but is not warranted, and is subject to change without notice or obligation.

TRADEMARKS

All brand names and product names used in this manual are trademarks, registered trademarks, or trade names of their respective holder. *PDI* and *Better Solutions Are Within Reach* are registered trademarks of PDI Communication Systems, Inc., Springboro, Ohio.

Contents

WARNINGS	2
IMPORTANT SAFETY INSTRUCTIONS	4
Copyright, Disclaimer, and Trademarks	4
Contents	5
Supplied Accessories	6
Arm Installation	7
Wall Installation	9
Remote	12
Controls	13
Connections	13
Menu Tree	17
Programming Channels	19
Picture	20
Sound	21
Special	23
Parental Control	26
MPAA Rating	27
Service Setup	29
Radio Control	31
Picture Setup in PC Mode	32
Product Specifications	33
Troubleshooting	34
Model PDI-P15LCDB TV Limited Warranty	35


Supplied Accessories

The follow accessories are provided with the Product.

1. AC Cord (Wall Mount Model Only)




2. AC/DC Adaptor (Wall Mount Model Only)

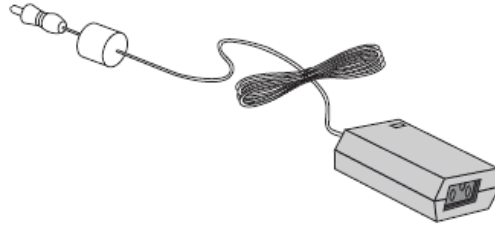


3. Owner's Manual



4. Pillow Speaker Cable (Wall Mount Model Only)

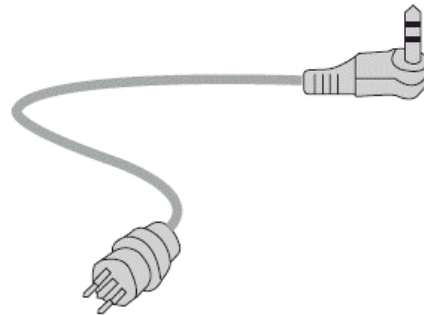

5. Brackets (Wall Mount Model Only)

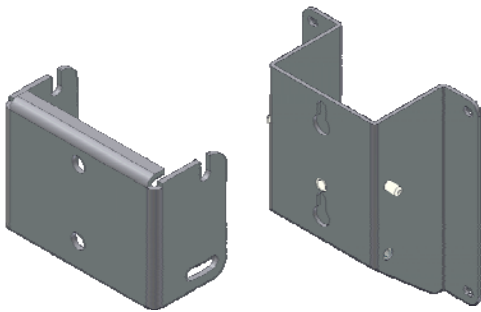

Arm Installation

LOCATION GUIDELINES

The PDI-P15LCDB-ARM TV is intended for entertainment purposes and should be installed in a non-hazardous area in accordance with the National Electrical Code (NEC), ANSI/NFPA 70.

The PDI-P15LCDB-ARM TV is designed to be mounted and supported on either a PDI 405 or 500 series support arm. Select a location that is near an AC wall outlet and that does not expose the TV to bright room lights or sunlight if possible.

CABLE SYSTEM GROUNDING


The coax cable system connected to the PDI-P15LCDB-ARM TV should be grounded in accordance with the National Electrical Code, ANSI/NFPA 70. The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical.

SUPPORT ARM

The PDI-P15LCDB-ARM is designed to mount to either a 405 or 500 series support arm that is pre-strung with an LCD power cable and RF coax cable. Computer display functionality requires an arm pre-strung with a compatible VGA computer cable.


Attach Monitor to Arm

- Fasten mounting plate "A" to mounting channel "B" using (4) #10 flat washers and (4) 10-32 nylock hex nuts provided.
- Connect the Antenna cable to the "ANT."
- Connect the power cable to "DC 12V".
- For computer operation connect computer VGA cable to "PC/DTV IN" and audio cable to "PC AUDIO IN".

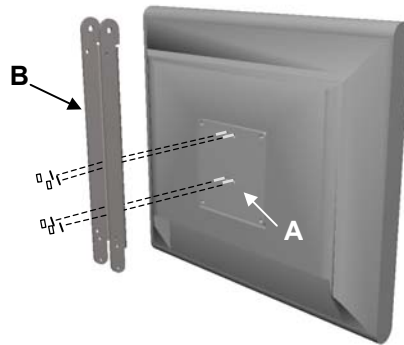

Cable Cover

- Position cable cover "C" into mounting channel "B".
- Attach cable cover with (4) #8x32 screws.

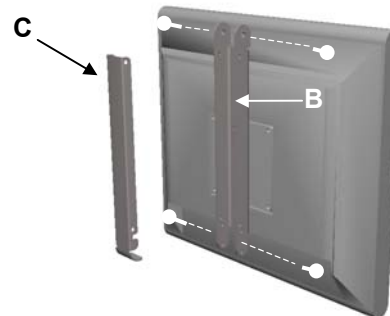

Align Bottom Cover

- a. Insert studs "D" into slots "E", being careful to not pinch any wires.




Attach Bottom Cover

- a. Align (4) holes in "B" and "C". Install (4) 10-32 x 3/8 Phillips head machine screws.



Power and Signal Connections

1. Connect the ARM POWER CABLE that exits the base of the arm to the power connector on the bottom of the power supply.
2. Connect the CATV RF CABLE to the hospital's cable system. NOTE: Do not connect to a powered coax! Damage will result to the TV.
3. Plug the AC Plug to the wall outlet.

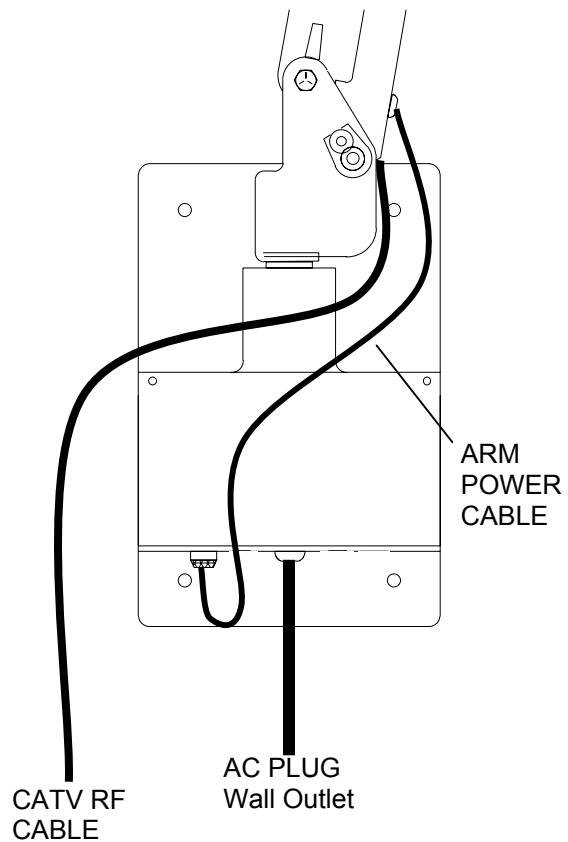

Wall Installation

LOCATION GUIDELINES

The PDI-P15LCDB-WR TV is intended for entertainment purposes and should be installed in a non-hazardous area in accordance with the National Electrical Code (NEC), ANSI/NFPA 70.

The PDI-P15LCDB-WR is capable of being mounted with several commercially available mounting brackets utilizing the 100 mm VESA hole pattern. The PDI-P15LCDB-WR TV is able to be wall mounted at the foot of a patient's bed with the supplied bracket. Select a location that is near a AC wall outlet and that does not expose the TV to bright room lights or sunlight if possible. The LCD TV also requires connection of both CATV cable signal and across-room wiring for the pillow speaker.

OSHPD (State of California Only)


The combined weight of the PDI-P15LCDB-WR TV, wall mount, and power supply totals less than 20 pounds. At the time of this writing, the involvement of a written, submitted, reviewed, and approved plan by OSHPD is not required to install the PDI-P15LCDB TV in the state of California. However, the installer and architect in charge should verify current regulatory compliance.


CABLE SYSTEM GROUNDING

The coax cable system connected to the PDI-P15LCDB-WR TV should be grounded in accordance with the National Electrical Code, ANSI/NFPA 70. The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical.

WALL MOUNTING THE LCD TV WITH THE SUPPLIED BRACKET

1. Select a location on the wall approximately 7 inches below the ceiling. Position the Wall Bracket and locate two mounting holes. Secure the bracket to the wall (mounting hardware is not included).
2. Position the Back Mount on the LCD TV cabinet. Attach with four M4 screws provided.
3. Mate the Back Mount to the Wall Bracket making sure the pivot bolts are retained in the "L" shaped slot. Secure with two 10x32 pilfer screws.
4. Slide the Power Pack into the metal holster. Connect the DC Power Plug into the "DC 12V" connector on the back of the TV. Connect the AC line cord.
5. The TV's tilt can be adjusted by loosening both Pilfer Screws, adjusting tilt, and then tighten.

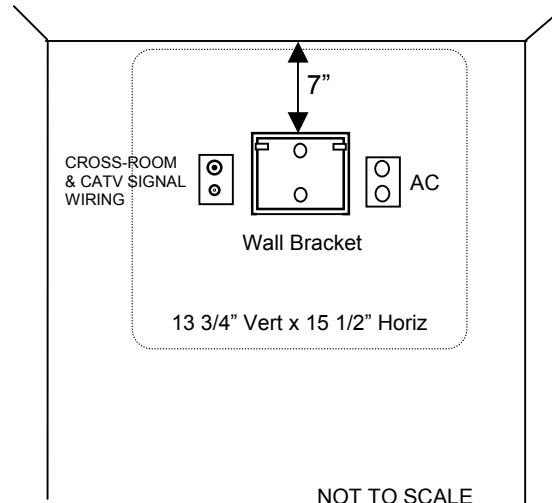

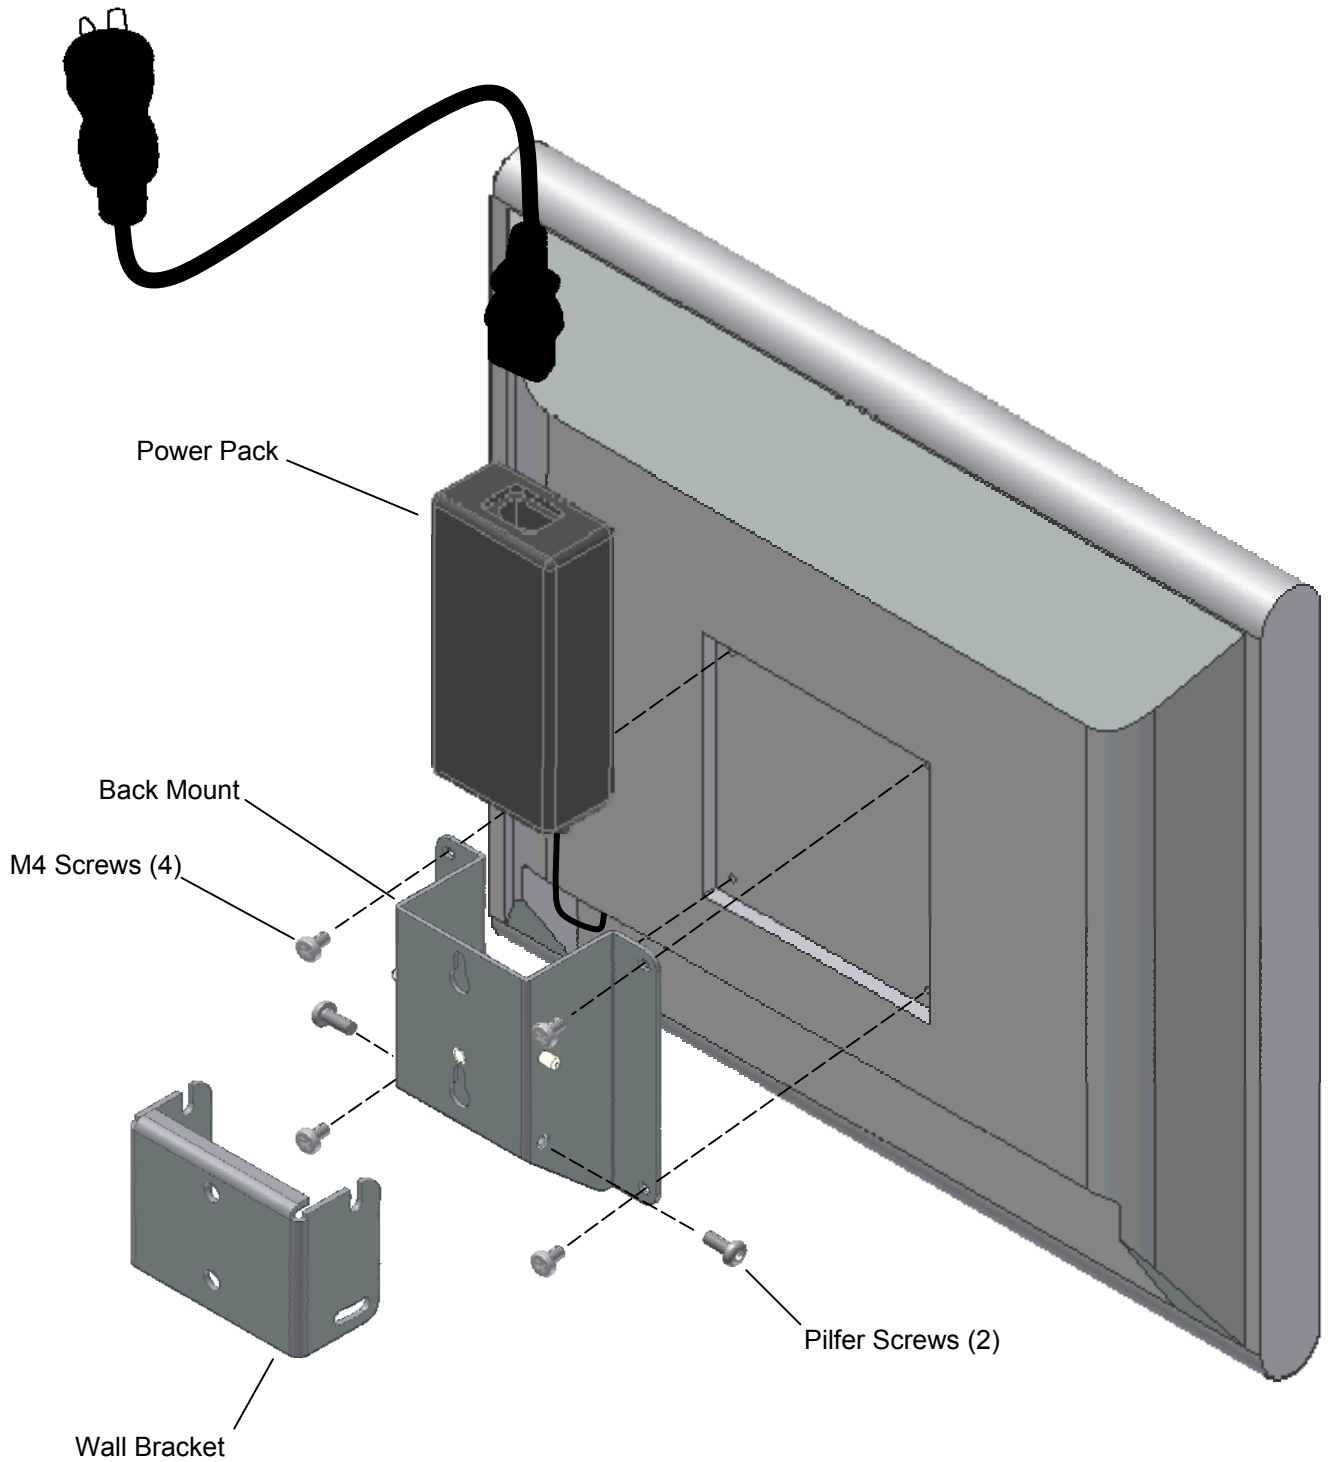


Installation Exploded View

ACROSS-ROOM WIRING


A ¼" stereo style pillow speaker (pendant control) jack is located on the TV's connector panel on the backside. The PDI-P15LCDB is designed to work with either a digital pillow speaker or a single-button analog (switch-style) pillow speaker. The PDI-P15LCDB also supports certain style pillow speakers with a number pad for direct channel access. The following pillow speakers have been tested with the PDI-P15LCDB. Please contact the pillow speaker vendor directly for an additional listing of models and available options.


Make	Analog	Digital	Digital Direct Access
Curbell	3103-001	3D0103096000ZM0-001	D0108-A0Z-R0001
Medtek	A1833-087	A1871-085T	A1552-087D, A1871-087D,
Crest		XL031E0AXXXZ1N1 XL031E1AJ00Z1N1	XL031X0AXXXZ1N1 XL031X1AJ00Z1N1

Use type SJ cord or better for the across room wiring between the TV and the bedside pendant control. A pin-out is provided below.



WARNING: DO NOT connect the pillow speaker circuit Common to earth ground. Grounding of the Common will defeat the isolation circuitry of the PDI-P15LCDB and possibly expose the patient to harmful shock currents should a wiring fault occur.

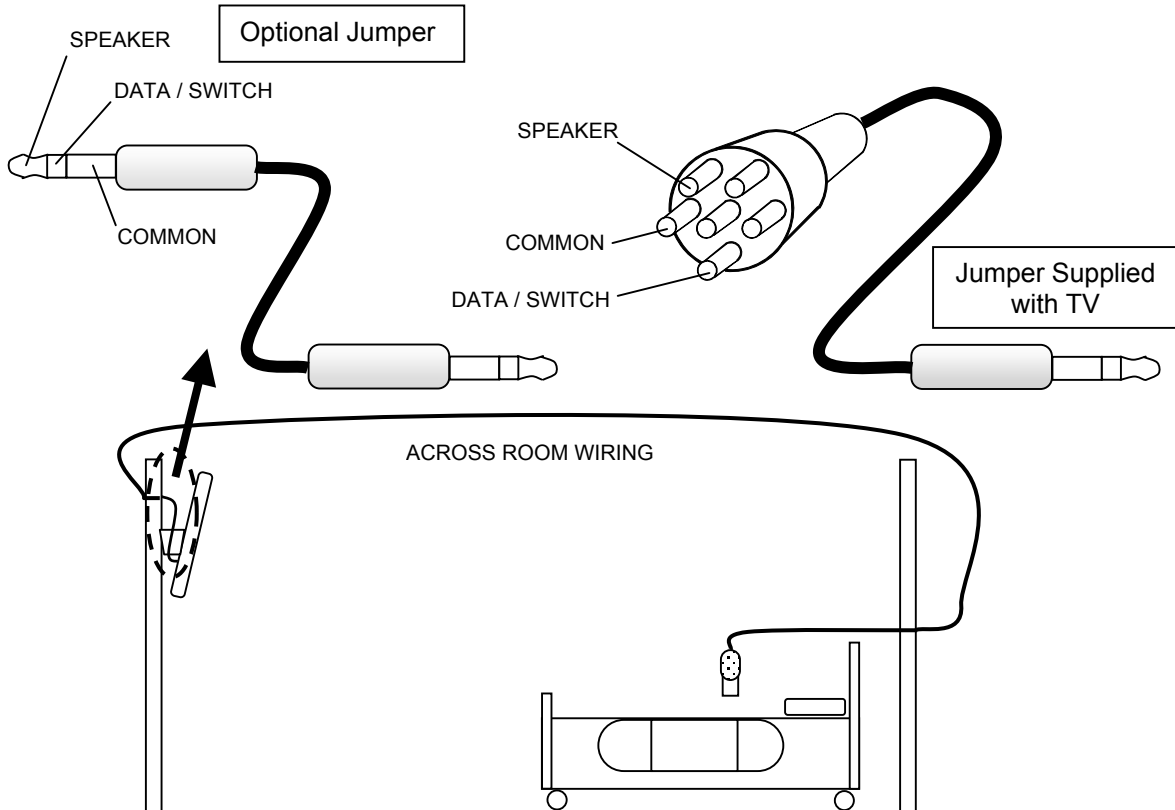




CAUTION Installer. This product is not provided with a pendant control. It is expected that the institution (or hospital) will provide one for attachment to the Pillow Speaker Jack on the back of the TV. As part of the installation, examine the pendant control to verify whether a marking similar to the one below appears on it:
'CAUTION – Risk of fire if used in oxygen-enriched atmosphere – return to hook or holder after use.'

Remote

BATTERY INSTALLATION

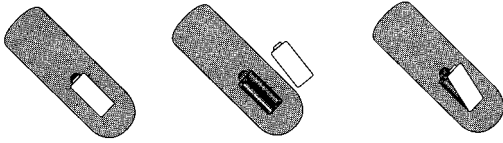


1. Pull the battery cover upward in the arrow direction to remove.
2. Insert two “AAA” batteries. Observe the correct polarity.
3. Replace the battery cover.

USING THE REMOTE

1. Make sure there are no objects between the remote control and its sensor.
2. Don't store the remote control near a heater or damp place.
3. A strong impact to the remote control may cause damage and operational failure to the remote.
4. Fluorescent lights, sunlight, or other strong light directed on the front of the TV may interrupt the remote signal. In this case, position the TV away from the light in another direction to restore operation of the remote control.


FUNCTIONS

All TV functions can be controlled using the remote control. Some functions can also be adjusted with the buttons on the front panel of the set.

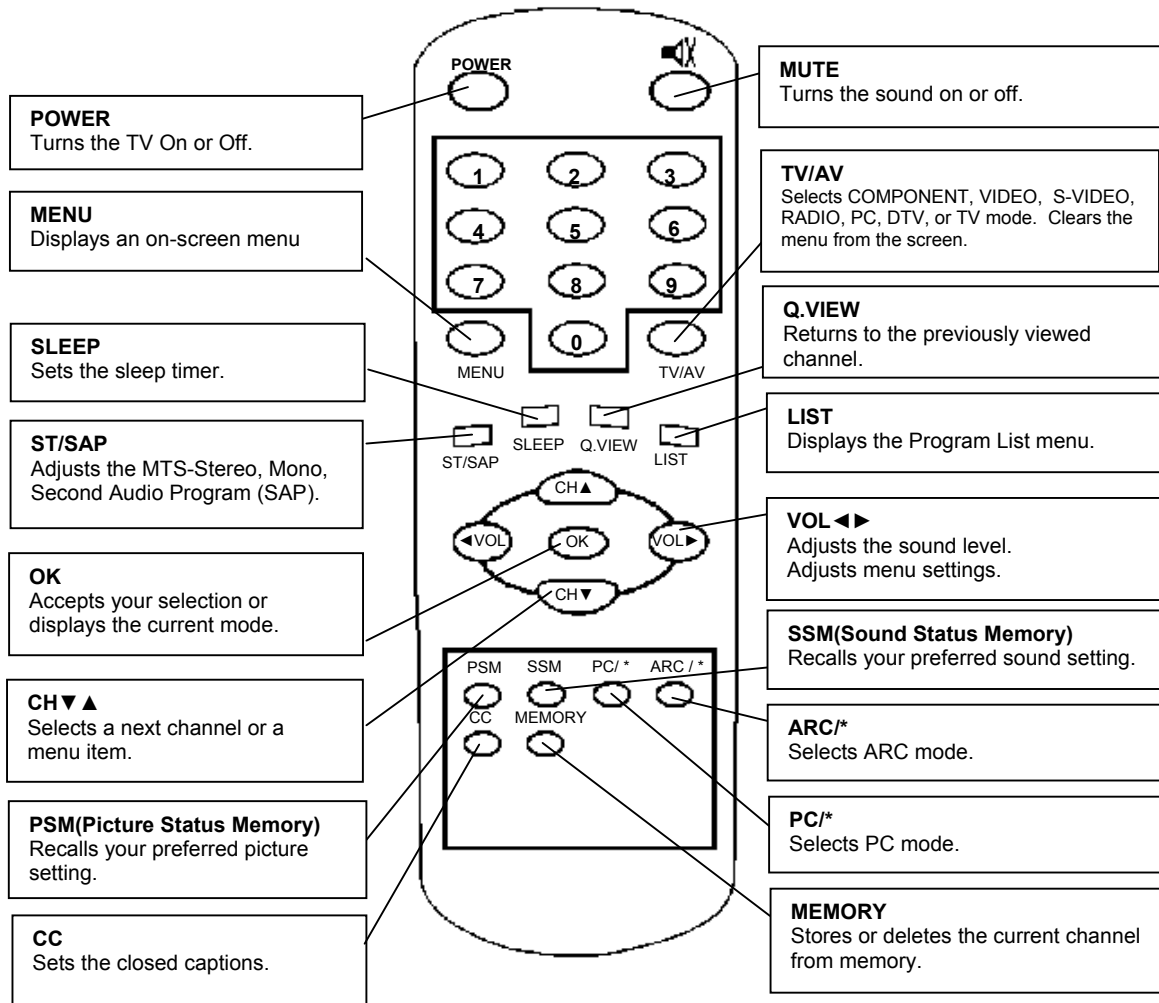

Controls


1. **CC** – Sets the Closed Caption mode.
2. **▼CH ▲** – Selects a TV channel or a MENU item when the on screen menu is active.
3. **POWER** – Turns the TV On and Off. Illuminates red when the TV is Off. Illuminates green when the TV is On. Flashes when a IR remote control signal is detected by the TV.
4. **◀VOL ▶** - Adjusts the internal TV speaker or headphone volume up or down. Also adjusts a selected menu item when the on screen menu is active.
5. **TV/AV** – Selects either TV, VIDEO, S-VIDEO, RADIO (only if Radio is activated via the Setup Menu). The TV/AV button can be disabled using the remote control to prevent patient and visitor tampering – see the “Special” menu and “Lock” instructions elsewhere in this manual for details.

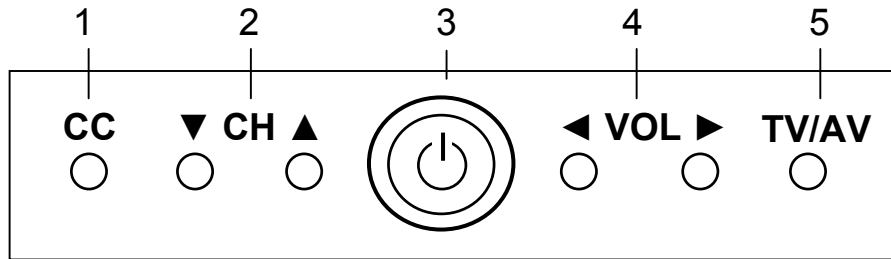

Connections

Connection Panel


The connection panel is located on the back of the TV and provides connections to external equipment.

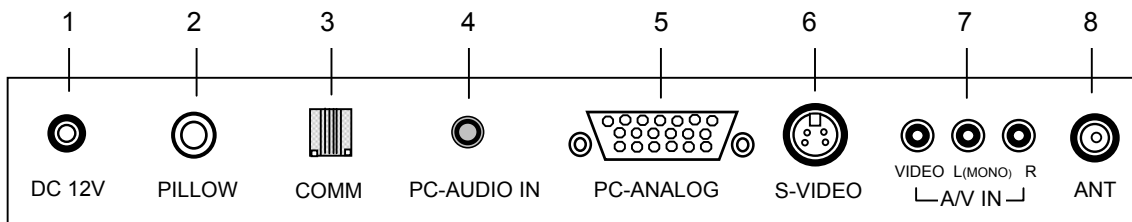


1. **DC 12V** – Power Input Jack.
2. **PILLOW** – Pillow Speaker Jack.
3. **COMM** – CCI / Cloner Port.
4. **PC-AUDIO IN** – PC Audio Input Jack.
5. **PC-ANALOG** – Computer Video Input D-Sub Jack.
6. **S-VIDEO** – Input connection for S-Video signal.
7. **A/V IN** – Video and audio input jacks.
8. **ANT** – Hospital Cable TV Input.

ANT.

Connect the hospital's cable signal to this fitting.


	CAUTION: Some hospital cable systems provide power voltage on the coaxial cable. The P15LCDB is NOT designed to be powered over a coaxial cable. Do NOT connect to a powered coaxial cable. Damage will result to the TV.
---	---

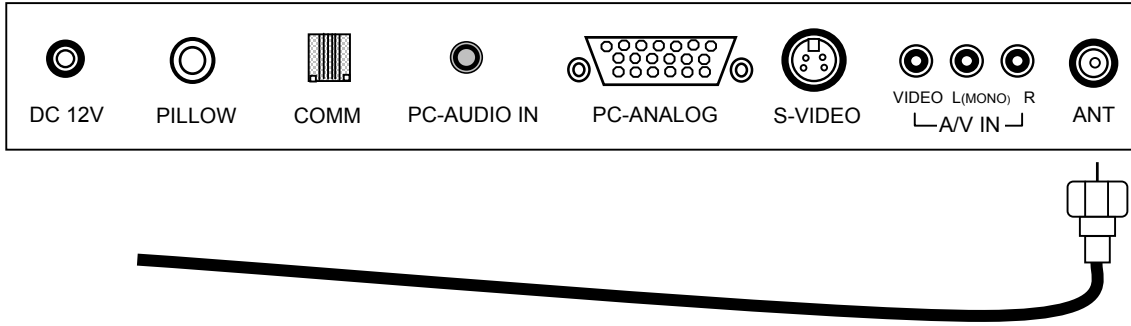

A/V IN (VCR, DVD, Game Box, etc)

1. Connect the audio outputs from the device's (L, R) to the A/V IN on the TV. Connection is color coded.
2. Connect the video output from the device to the A/V IN on the TV. Connections are color coded.
3. Select VIDEO mode by pressing the TV/AV button repeatedly. The TV/AV button can be disabled using the remote control to prevent patient and visitor tampering – see the “Special” menu and “Lock” instructions elsewhere in this manual for details.

Operate the device and check for a displayed picture with sound.

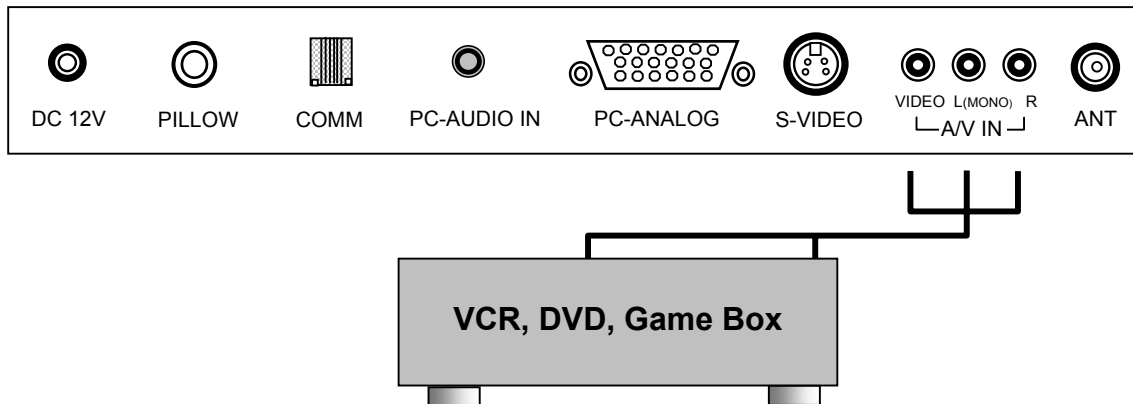


S-VIDEO (VCR or DVD)

Many VCR's & DVD's provide S-Video signals to provide improved picture quality.

1. Connect the S-VIDEO output to the S-VIDEO input on the TV.
2. Connect the audio cables to the L(MONO) R A/V IN inputs of the TV.
3. Select S-VIDEO mode by pressing the TV/AV button repeatedly. The TV/AV button can be disabled using the remote control to prevent patient and visitor tampering – see the “Special” menu and “Lock” instructions elsewhere in this manual for details.


Press the PLAY button on the VCR or DVD.

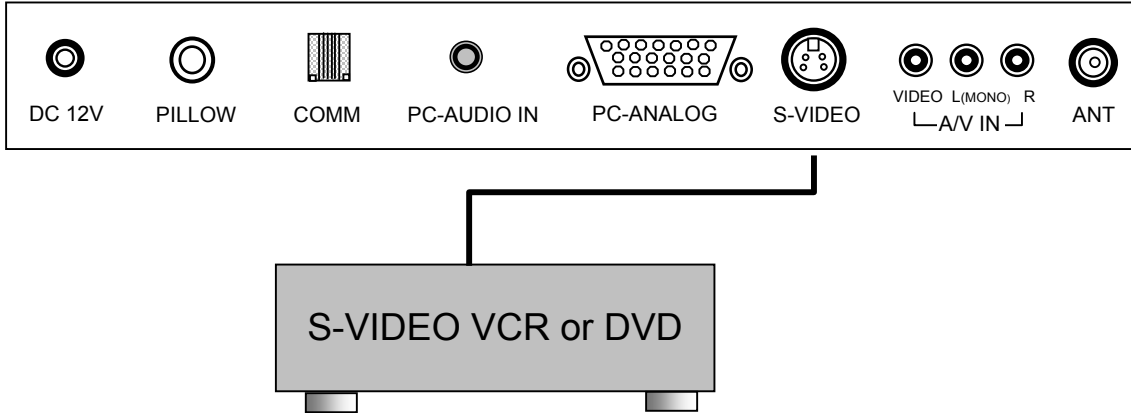

COMPUTER

The PDI-P15LCDB is designed to also be used as a computer monitor. NOTE: If mounted on a support arm, the arm must be pre-strung with a compatible VGA computer cable to utilize this feature.

1. Connect the VGA computer cable to the PC-ANALOG jack on the set.
2. Connect the PC Audio In cable from the PC to the PC AUDIO IN of the set.
3. Press the TV/AV button to select PC mode. The TV/AV button can be disabled using the remote control to prevent patient and visitor tampering – see the “Special” menu and “Lock” instructions elsewhere in this manual for details.
4. Switch on the PC. The PC screen should appear on the set.

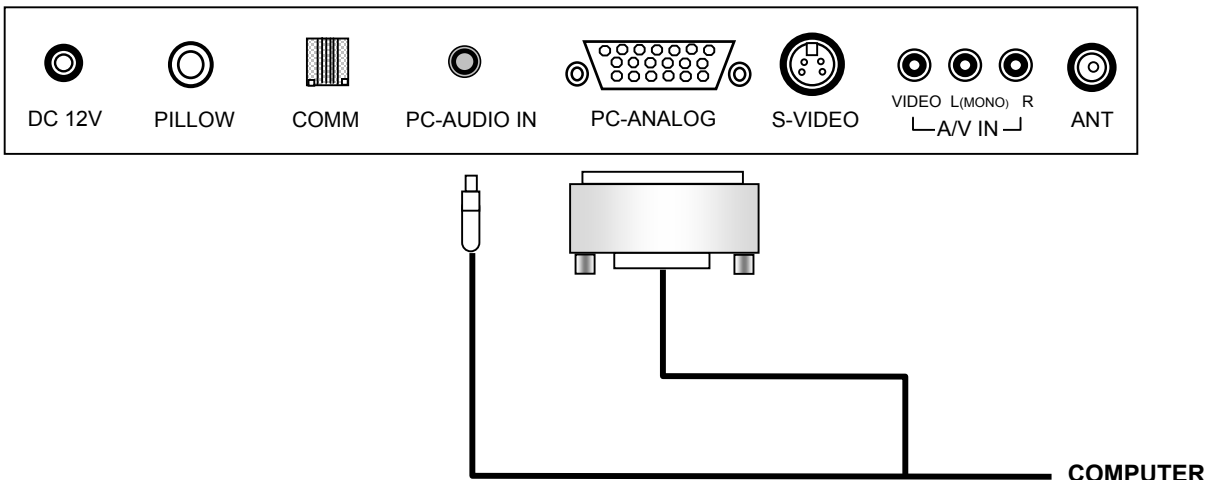


MODE	RESOLUTION	HORIZONTAL FREQUENCY (Khz)	VERTICAL FREQUENCY (Hz)
VGA	640x480	31.5 Khz	60 Hz
	640x480	37.9 Khz	72 Hz
	640x480	37.5 Khz	75 Hz
	720x400	31.4 Khz	70 Hz
SVGA	800x600	35.1 Khz	56 Hz
	800x600	37.9 Khz	60 Hz
	800x600	48.1 Khz	72 Hz
	800x600	46.9 Khz	75 Hz
XGA	1024x768	48.4 Khz	60 Hz
	1024x768	56.5 Khz	70 Hz
	1024x768	60.0 Khz	75 Hz
DTV	720 x 480p	31.5 Khz	60 Hz
	720 x 576p	31.2 Khz	50 Hz
	1280 x 720p	45.0 Khz	60 Hz
	1280 x 720p	37.5 Khz	50 Hz
	1920 x 1080i	33.7 Khz	60 Hz
	1920 x 1080i	28.1 Khz	50 Hz

NOTE:

1. If the set is cold, there may be a small “flicker” when the set is switched ON. This is normal, there is nothing wrong with the set.
2. Some dot defects may appear on the screen, like Red, Green or Blue spots. However, this will have no impact or effect on the monitor performance.


COMM

The “COMM” port provides interconnectivity to 2nd part control boxes including the PDI cloner (model PD108-311). Please refer to the device’s specific instructions for details.

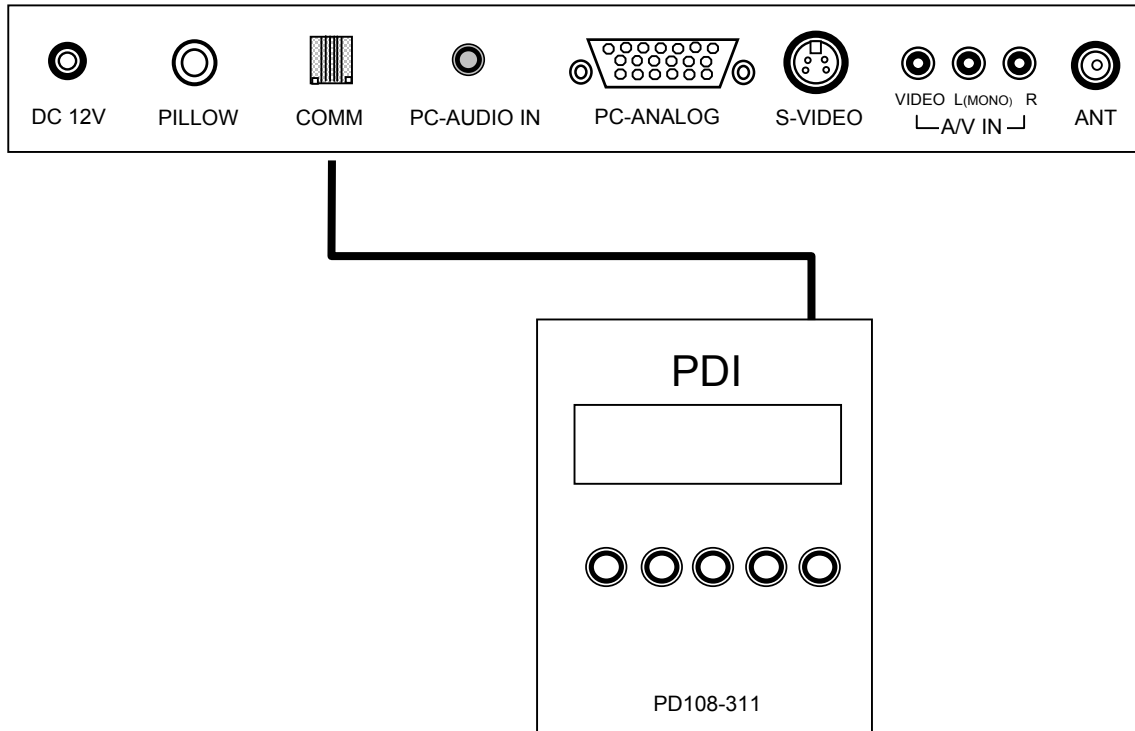


Menu Tree

The on screen menus are navigated by first pressing the **MENU** button on the remote and then using the **CH ▲▼** button to select the desired menu.

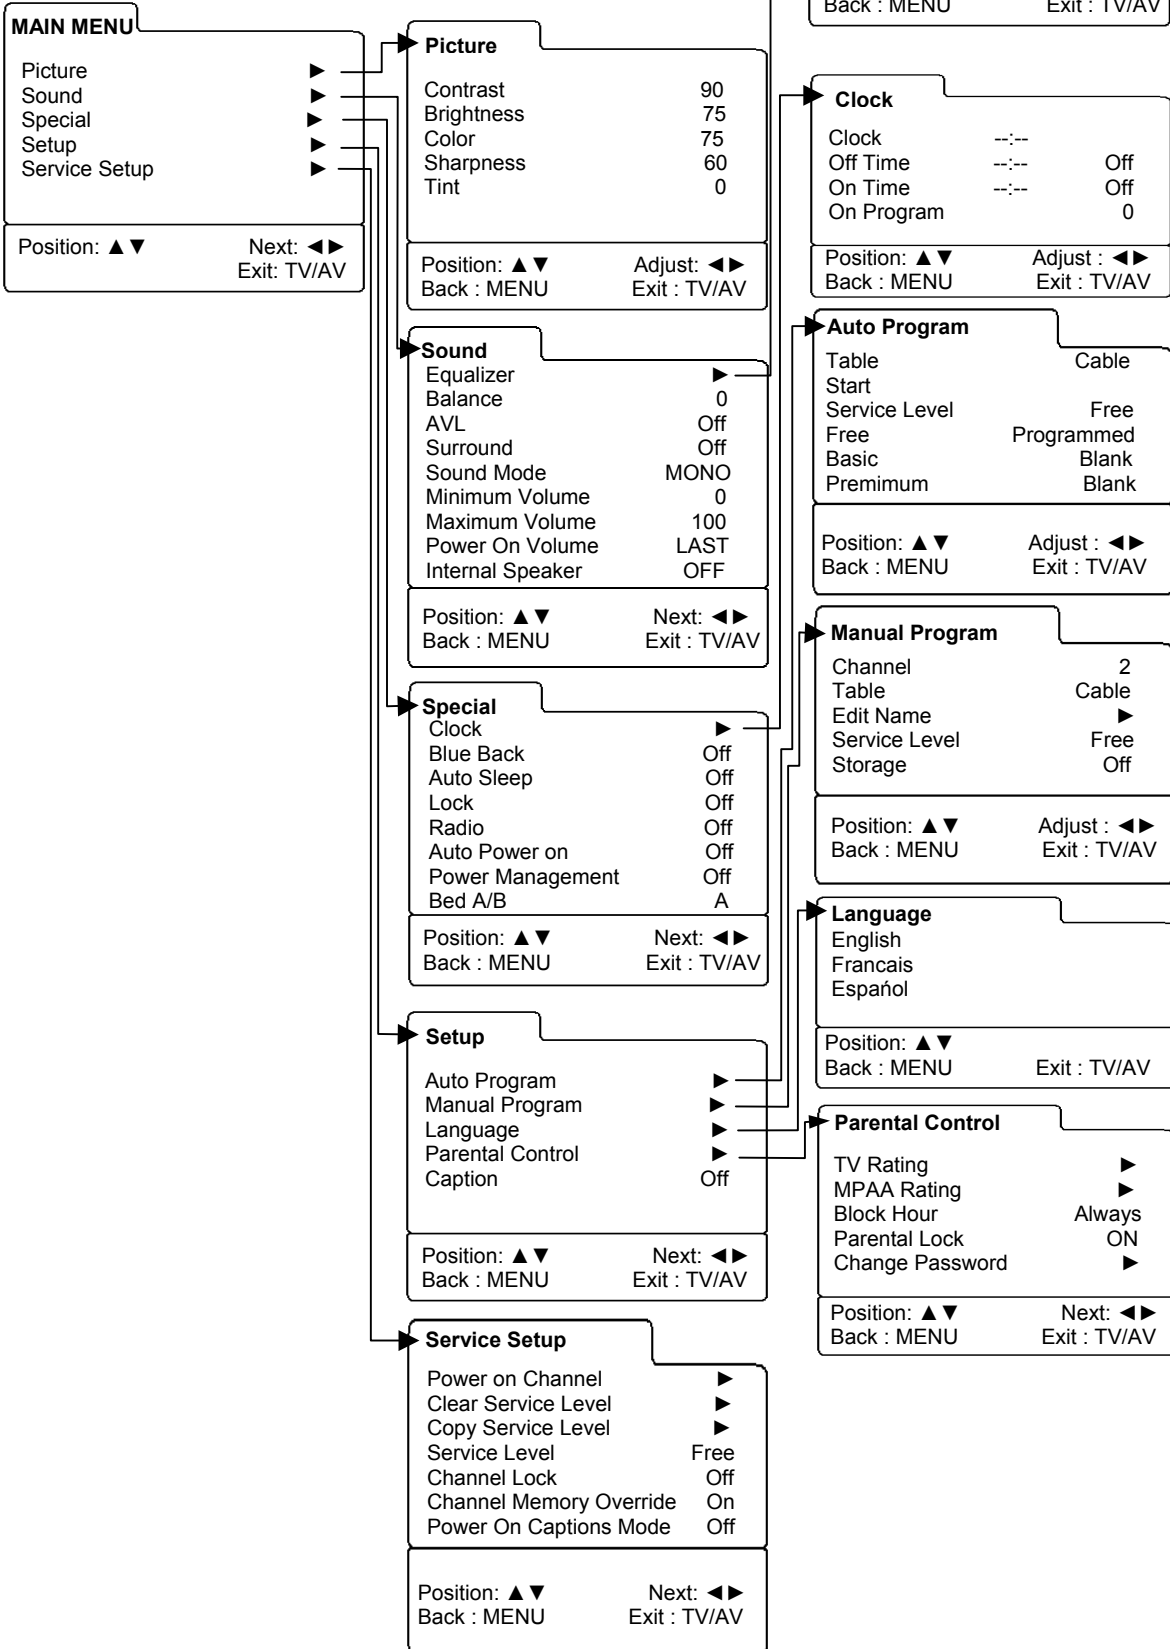

MENU TREE - Service Setup

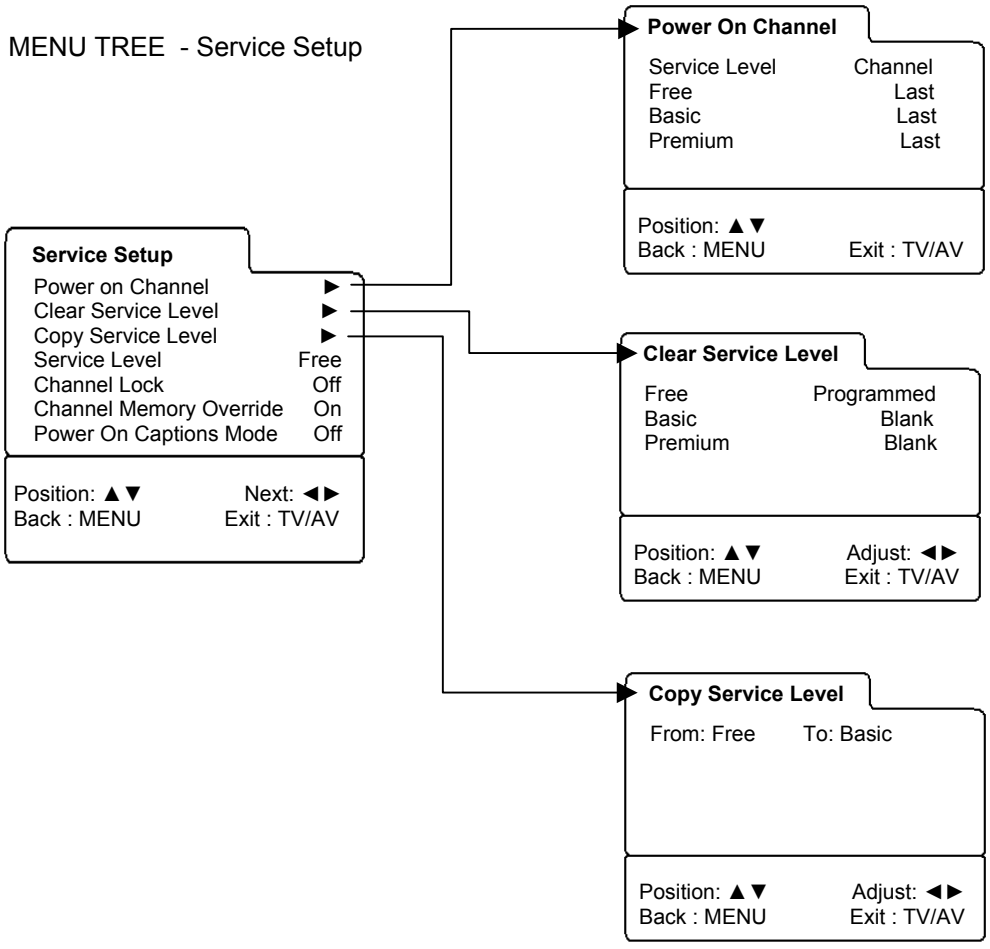

Programming Channels

Three different Service Levels (banks) are available to hold channels: Free, Basic, and Premium. A Disable Service level is provided to remove the TV from service. Channels can be programmed using either an Automatic or Manual method.

AUTO PROGRAM

Automatically memorizes all the receivable channels on a hospital's cable TV system. Press the **MENU** button on the remote.

1. Select the **Setup** menu.
2. Select **Auto Program**.
3. Press the **CH▲▼** button and select **Table**.
4. Select the TV cable system in your hospital with the **VOL◀▶** button.

NOTE: Table = V/UHF is used for a cable system that has a master antenna and usually can only receive local TV Stations.

Table = Cable is used when a hospital cable system has both local and satellite TV channels available.

Table mode = Cable is most common in hospital TV systems.

5. Select the desired **Service Level** to be programmed.
6. Select the **Start** menu item with the **CH▲▼** button.
7. Press the **VOL◀▶** button to start Auto Programming. The TV will now search all available channels looking for signals and memorizing those channels that are active. Occasionally, strong over-the-air stations sneak onto the cable system. To remove unwanted channels see Manual Program.
8. Press the **MENU** button to finish auto programming.
9. Press the **TV/AV** button to return to normal TV viewing.

Auto Program	
Table	Cable
Start	
Service Level	Free
Free	Programmed
Basic	Blank
Premium	Blank
Position: ▲▼ Adjust : ◀▶	
Back : MENU Exit : TV/AV	

HINTS

- Press the **CH▲▼** buttons to check the memorized channels after auto programming is finished.
- If you press the MENU button during auto programming, the function will stop and only channels programmed up to that point in time will remain.
- The auto programming function can memorize only those channels which are active at the time of programming. For example, a hospital educational channel may not be actively playing a tape and would not be memorized using auto program. See the Manual Program section for adding and deleting channels.
- Each service level is listed showing their current condition as either Programmed or Blank.


MANUAL PROGRAM

Manual Program allows you to manually add or delete channels within a particular Service Level and also add or edit channel name labels.

1. Tune to the channel you wish to add or delete. Press the **MENU** button.
2. Select the **Setup** menu.
3. Select the **Manual Program** menu.
4. Press the **VOL◀▶** buttons or directly enter the channel numbers using the remote control.
5. Press the **CH▲▼** buttons to select **Table** if necessary. Usually Table does not require adjustment.

Manual Program	
Channel	2
Table	Cable
Edit Name	▶
Service Level	Free
Storage	On
Position: ▲▼ Next: ▶▶	
Back : MENU Exit : TV/AV	


- Press the **CH▲▼** buttons to select **Edit Name**. Press the **VOL◀▶** button repeatedly to edit the channel's name label. You can use the numbers 0 to 9, the alphabet letters A to Z (capital or lower case), a blank, and hyphen (-) in the name label field.
- Select Storage On or Off with the **VOL◀▶** button. With Storage On, the current channel will be stored into the currently selected TV's Service Level and made available for patient viewing. However, the deleted channel can still be viewed by directly entering the channel's number using the IR remote control's keypad.
- Press the **TV/AV** button to return to normal TV viewing.

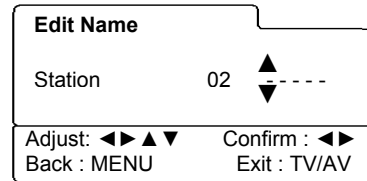

PROGRAM LIST

Program List shows a display of the Programmed Channels stored in the TV's memory. Free, Basic, and Premium service levels are shown together for comparison. Program List is read-only information, but allows selection of the currently highlighted channel if desired. Editing of channels must be done using either Auto Program or Manual Program.

- Select the **Setup** menu.
- Press the **CH▲▼** button select Program List.
- To select a channel in on the Program List, use the **CH▲▼** or **VOL◀▶** buttons. The set switches to the chosen channel number.

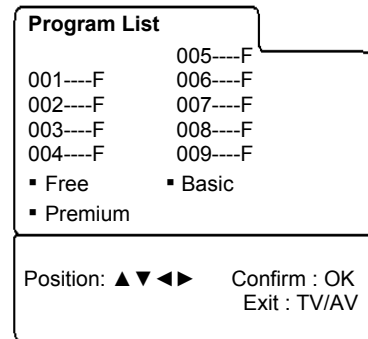


Picture

You can adjust picture Contrast, Brightness, Color, Sharpness and Tint to the levels you prefer using the on screen menus or select PDI factory preset picture modes using the remote control.


USER PICTURE CONTROL

- Press the **MENU** button.
- Select the **Picture** Menu.
- Press the **CH▲▼** button to select a picture item.
- Press the **VOL◀▶** button to adjust the picture item to the desired level.
- Press the **TV/AV** button to store the picture values in the User mode.

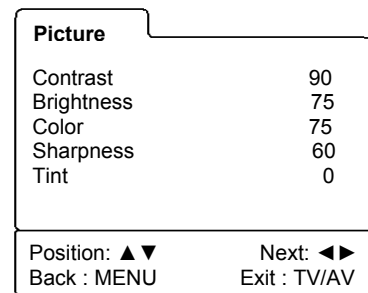

PSM – PICTURE STATUS MEMORY

 - Press the **PSM** button on the remote to view the current picture mode.
- Press the **PSM** button repeatedly to select another **PSM** setting. The **PSM** setting will cycle and the picture's factory parameter settings will change accordingly.



Dynamic	Vivid Picture Appearance
Standard	Standard Picture Appearance
Mild	Softer Picture Appearance
Game	External Video Game Appearance
User	Manual Picture Setup



3. Press the **OK** button on the remote to select the currently displayed picture mode.

Sound

You can adjust the sound using Equalizer levels via the on screen menus or select PDI factory preset sound modes using the remote control.

EQUALIZER

1. Press the **MENU** button on the remote.
2. Select the **Sound** menu.
3. Press the **CH▲▼** button and select **Equalizer**.
4. A listing of available frequency bands and current settings will be displayed. The Flat, Music, Movie, and Speech settings are factory preset sound modes and can not be adjusted. Select **User** to adjust and customize the sound equalization.
5. Press the **VOL◀▶** button to select the desired sound band.
6. Press the **CH▲▼** button to adjust the strength of sound for that particular sound band. Alternately, press **VOL◀▶** to select the next desired sound band and adjust with the **CH▲▼** button.
7. Press the **MENU** button to return to the preceding Menu and the **TV/AV** button to return to normal TV viewing.

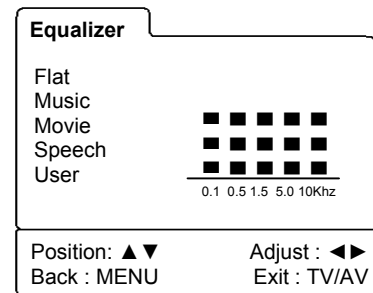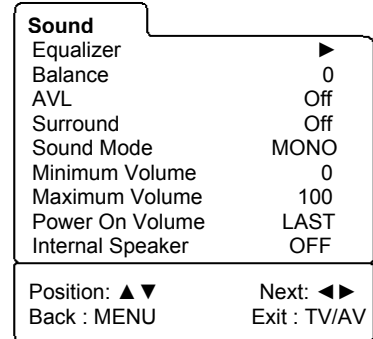

BALANCE

Adjusts the sound balance from the left and right speakers mounted in the TV. Balance has no effect on the Pillow Speaker.

1. Press the **MENU** button.
2. Select **Sound** from the menu.
3. Press the **CH▲▼** button and select Balance.
4. Press **VOL◀▶** to adjust the sound balance from the TV.
5. Press the **MENU** button to return to the preceding Menu and the **TV/AV** button to return to normal TV viewing.

AVL (Automatic Volume Level)

Automatic Volume Level control is available through this setting. With the AVL set to On, the TV's volume will be limited to one loudness. This feature prevents sound blasting during commercials.

1. Press the **MENU** button.
2. Select **Sound** from the menu.
3. Press the **CH▲▼** button and select **AVL**.
4. Press **VOL◀▶** to select **On** or **Off**.
5. Press the **MENU** button to return to the preceding Menu and the **TV/AV** button to return to normal TV viewing.

SOUND MODE

You can select the type of sound generated by the television.

1. Press the **MENU** button.

2. Select **Sound** from the menu.
3. Press the **CH▲▼** button and select Sound Mode.
4. Press **VOL◀▶** to select the type of sound generated by the television TV.

Stereo	Discrete left and right audio channels heard through both the left and right TV speakers.
Mono	Single channel of sound heard through both the left and right TV speakers.
SAP	Secondary Audio Program – Used for Bi-lingual programs. Note: The viewed program channel must be encoded with a SAP signal for this mode to work.

5. Press the **MENU** button to return to the preceding Menu and the **TV/AV** button to return to normal TV viewing.

Alternately, the type of sound can be set using the remote control's **ST/SAP** button.

Minimum Volume

Sets the minimum loudness level the patient may lower the volume. Setting this to any value other than 0 guarantees that some level of sound will also be heard when the TV is operating with lessen nuisance calls to hospital maintenance for “No Sound” complaints.

1. Press the **MENU** button.
2. Select **Sound** from the menu.
3. Press the **CH▲▼** button and select **Minimum Volume**.
4. Press the **VOL◀▶** button to select your preferred minimum volume. The factory default is 0.
5. Press the **MENU** button to return to the preceding Menu and the **TV/AV** button to return to normal TV viewing.

Maximum Volume

Sets the maximum absolute loudness that the user could adjust the TV. This setting is useful for the hard-of-hearing patient who causes disturbance. Also see ‘Captions’.

1. Press the **MENU** button.
2. Select **Sound** from the menu.
3. Press the **CH▲▼** button and select **Maximum Volume**.
4. Press the **VOL◀▶** button to determine your preferred maximum volume allowed. The factory default is 100.
5. Press the **MENU** button to return to the preceding Menu or the **TV/AV** button to return to normal TV viewing.

Power on Volume

The TV always turns on at this preset volume. Once the TV is on, the volume can be set to any allowable level. The factory default is LAST volume.

1. Press the **MENU** button.
2. Select **Sound** from the menu.
3. Press the **CH▲▼** button and select **Power on Volume**.
4. Press the **VOL◀▶** button to determine your preferred volume when the TV turns on. Setting the level to LAST causes the TV to remember the last volume level used by the TV prior to turning off.
5. Press the **MENU** button to return to the preceding Menu and the **TV/AV** button to return to normal TV viewing.

Internal Speaker

The internal television speaker can be disabled. This feature is popular for installations such as dialysis clinics that may require the use of headphones only.

1. Press the **MENU** button.
2. Select **Sound** from the menu.
3. Press the **CH▲▼** button and select **Internal Speaker**.
4. Press the **VOL◀▶** button to turn the internal speaker On or Off.
5. Press the **MENU** button to return to the preceding Menu and the **TV/AV** button to return to normal TV viewing.

Special

This menu provides access to special functions.

CLOCK

Setting the clock is necessary to use the various timer features of the TV. The TV can be programmed to turn itself On and Off at specified times. NOTE: On screen time display is not available with this model television.

1. Press the **MENU** button.
2. Select the **Special** menu.
3. Press the **CH▲▼** button to select **Clock**.
4. Press the **VOL◀▶** button to select the **Clock** menu.
5. Set the present times with the number buttons and the **CH▲▼** button on the remote control. Set a time value between 00:00 ... 23:59 (hours: minutes).
6. Press the **CH▲▼** button to select **On Program**. You can select the first displayed channel with the **VOL◀▶** button when the set is first switch on automatically.
7. Press the **TV/AV** button to return to normal TV viewing.

Note: The Clock must be set to the present time for the clock functions to operate properly.

Hints: Off and On times can also be set that allow the TV to turn OFF at a specified time or ON at a specified time to a specified On Program channel.

BLUE BACK

Channels that are empty without any signal will be expressed as a blue screen rather than a snowy picture.

1. Press the **MENU** button.
2. Select the **Special** menu.
3. Press the **CH▲▼** button to select **Blue Back**.
4. Press the **VOL◀▶** button to alternately turn Blue Back On or Off.
5. Press the **TV/AV** button to return to normal TV viewing.

AUTO SLEEP

If you select Auto Sleep = On, the set will automatically switch itself Off approximately ten minutes after a TV channel stops broadcasting. This feature helps reduce power consumption.

1. Press the **MENU** button.
2. Select the **Special** menu.
3. Press the **CH▲▼** button to select **Auto Sleep**.
4. Press the **VOL◀▶** button to select **On**.
5. Press the **TV/AV** button to return to normal TV viewing.

LOCK

Lock disables the television's TV/AV button and prevents patient and visitor tampering with the TV. Once a TV is Locked, the only way change the TV's mode is by using the remote control.

1. Press the **MENU** button.
2. Select the **Special** menu.

Special	
Clock	▶
Blue Back	Off
Auto Sleep	Off
Lock	Off
Radio	Off
Auto Power On	Off
Power Management	Off
Bed A/B	A
Position: ▲▼	Next: ◀▶
Back : MENU	Exit : TV/AV

Clock	
Clock	--:--
Off Time	--:-- Off
On Time	--:-- Off
On Program	1
Position: ▲▼	Adjust : ◀▶
Back : MENU	Exit : TV/AV

3. Press the **CH▲▼** button to select **Lock**.
4. Press the **VOL◀▶** button repeatedly to select **On** or **Off**.
5. Press the **TV/AV** button to return to normal TV viewing.

Note: With Lock On, the IR remote control will be the only means to access the TV's mode.

RADIO (Enabling)

You can listen to FM radio stations with the TV's internal radio provided that FM station signals are present on the hospital's cable system. To use the radio, the Lock feature must be off to enable the TV/AV button.

1. Press the **MENU** button.
2. Press the **CH▲▼** button to select the **Special** menu. Then press the **VOL◀▶** button.
3. Press the **CH▲▼** button to select Radio.
4. Press the **VOL◀▶** button to select Radio **On** or **Off**.

FM	WIZH
Mode:	Auto
STEREO	89.9 MHz
Equalizer:	
FLAT	

NOTE: When the setting is On, the radio is accessed using the TV/AV mode button. See Radio Mode elsewhere in this manual for details regarding programming radio stations into the TV.

AUTO POWER ON

The TV will turn On and stay On whenever electrical power is applied to the set. This feature is useful for activating the TV through a switch controlled wall outlet. When the wall switch is turned On and powers the outlet, the TV turn On also. This feature also can be used to prevent the TV from being turned off via the front TV power button.

1. Press the **MENU** button.
2. Press the **CH▲▼** button to select the **Special** menu.
3. Press the **CH▲▼** button to select Auto Power On.
4. Press the **VOL◀▶** button to select Auto Power On, On or Off.
5. Press the **TV/AV** button to return to normal TV viewing.

Power Management

The TV will automatically power Off after a specific period of viewer inactivity. This feature is useful for sleeping patients or custodial staff that might leave the TV running.

1. Press the **MENU** button.
2. Press the **CH▲▼** button to select the **Special** menu.
3. Press the **CH▲▼** button to select **Power Management**.
4. Press the **VOL◀▶** button to determine active time. Set to Off to disable this feature.
5. Press the **TV/AV** button to return to normal TV viewing.

NOTE: Auto Power On must be set to Off for this function to operate.

Bed A/B

This feature allows independent control of two televisions mounted in close proximity to each other via a de-featured handheld patient remote control. Bed A/B sets the TV's remote control code format for use with the PD108-310 patient remote control. The patient remote must also be set to the correct Bed code for proper operation.

 
1. Press the **MENU** button.
2. Press the **CH▲▼** button to select the **Special** menu.
3. Press the **CH▲▼** button to select **Bed A/B**.
4. Press the **VOL◀▶** button to select remote control A or B.
5. Press the **TV/AV** button to return to normal TV viewing.

Closed Caption

Closed captions allow viewers to read the dialogue and narration of TV program. To activate Closed Captioning:

1. Press the **MENU** button.
2. Select the **Setup** menu.
3. Press the **CH▲▼** buttons to select the **Caption** menu.

- Each time you press the **VOL ◀▶** button, the caption mode is displayed one by one as shown below.



- Press the TV/AV button to exit and return to normal TV viewing. Alternately, the captions can be set using the remote control's CC button or the TV's CC control button.

HINTS

- Closed captions will only appear if the TV program has been encoded with closed captioning information.
- Text modes may display a solid black box in the center of the TV's screen when activated.
- CC1 is the most common closed caption setting.


Parental Control

A parental control feature is available to restrict or block undesirable programs from appearing on the TV. This feature is of particular importance for TV's installed in pediatric wards.

TV Rating


Most television programs are now rated. TV Rating allows the TV to selectively present only programming content that is unblocked per its preset level. A program that is blocked, displays a black screen with a small title in the center stating the program's TV Rating. Set the TV Rating using the remote control.

1. Press the **MENU** button.
2. Select the **Setup** menu.
3. Press the **CH▲▼** button to select the Parental Control, then press the **VOL◀▶** button.
4. The Enter Password screen will appear if Parental Lock has been turned On. Enter your 4-digit password.

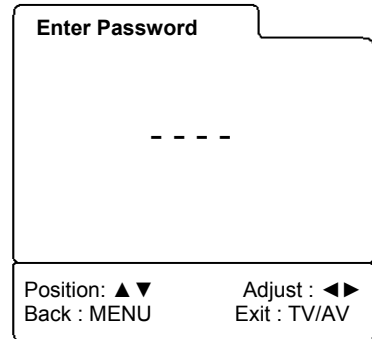


NOTE: The default input password for a new TV set is "0000".

5. After entering a valid password, the "Parental Control" screen will appear.
6. Use the **VOL◀▶** buttons to select the TV rating. Then press the **CH▲▼** buttons to select one of the six age-based categories in a column.

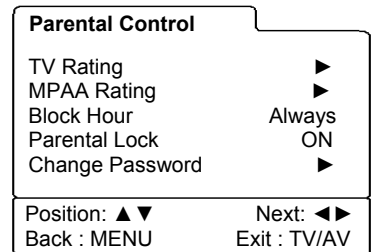

NOTE: These categories consist of two separate groups: TV-Y and TV-Y7 (young children through age 7), and TV-G through TV-MA (everybody else). The restrictions for these two groups work independently: If viewers include very young children as well as young adults, the TV rating is set separately for each age group (See next step).

7. At this point, one of the TV-Ratings is selected. Depending on your existing setup, a letter "U" or "B" will be highlighted (U=Unblocked, B=Blocked). While the "U" or "B" is highlighted, press the **CH▲▼** buttons to block or unblock the category.

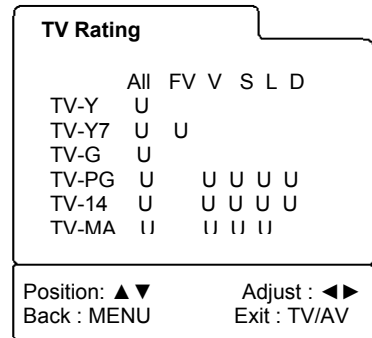

NOTE 1: The TV-Y7, TV-PG, TV-14 and TV-MA have additional options. See the next step to change any of the following sub-ratings:

FV : Fantasy Violence	D : Sexual Suggestive Dialog
L : Adult Language	S : Sexual Situation
V : Violence	

NOTE 2: The TV will automatically block certain categories that are "more restrictive". For example, if you block the "TV-YY" category, then TV-Y7 will automatically be blocked. Similarly, if you block the TV-G category, then all the categories in the "young adult" group will be blocked (TV-G, TV-PG, TV-14, and TV-MA). The sub-ratings (D, L, S, V) work together similarly.

8. How to set the FV, D, L, S and V sub-ratings.
 First select one of these TV-Ratings: TV-Y7, TV-PG, TV-14 or TV-MA. Next while the

TV-Rating is selected, repeatedly press the **VOL** buttons. This will cycle through the available sub-ratings (FV, L, S, D or V). A highlighted letter (“U” or “B”) will be displayed for each sub-rating. While the “U” or “B” is highlighted, press the **CH** buttons to change the sub-rating. To select a different TV-Rating, press the **CH** buttons with the cursor in the first column. Press the MENU buttons once to save the TV ratings.

NOTE: The television will automatically block certain categories that are “more restrictive”. For example, if you block the “L” sub-rating in TV-PG, then the “L” sub-ratings in TV-14 and TV-MA will automatically be blocked.

MPAA Rating

The MPAA rating system uses the Motion Picture Association of America (MPAA) system, and its main application is for movie ratings. To set the MPAA ratings,

1. Press the **MENU** button.
2. Select the **Special** menu.
3. Press the **CH▲▼** button to select the Parental Control menu, then press **VOL◀▶**.
4. If a password has been entered a Enter Password menu will appear. NOTE: the default password for a new TV is “0000”. After entering a valid password, the Parental Control menu will appear.
5. Press the **VOL◀▶** buttons to select the MPAA Rating. Then press the **CH▲▼** buttons to select particular MPAA Ratings. While a particular category is selected, press the **VOL◀▶** buttons to activate it. A highlighted letter (“U” or “B”) will be displayed. Press the **CH▲▼** buttons to change the setting.
6. If you wish to change the password, select the Change Password menu.
7. Enter your new password by re-entering the same 4 digits. Press the OK button to memorize your new password.

MPAA Rating	
G	U
PG	U
PG-13	U
R	U
NC-17	U
X	U
No Rating	U

Position: ▲▼ Adjust : ◀▶
Back : MENU Exit : TV/AV

NOTE: The television will automatically block any category that is more restrictive. For example, if you block the “PG-13” category, then “R” NC-17”, and “X” will automatically be blocked also.

Block Hour

Block Hour sets the hours you want Parental Control active. The setting range is from 1 to 99, or Always).

Parental Lock

With the Parental lock On, the Parental contro function is active.

Change Password

To change the password, from the Parental Control menu,

1. Select the change password menu.
2. Enter the password.
3. Select the Confirm Password line and then enter the same password again.
4. Press the OK button on the remote to memorize your new password.

Change Password	
Enter Password	- - - -
Confirm Password	- - - -

Back : MENU Exit : TV/AV

MOTION PICTURE ASSOCIATION OF USA (MPAA) RATING SYSTEM

Grade		Meaning
G	General Audiences	Content not offensive to most viewers
PG	Parental Guidance Suggested	Content is such that parents may not want their children to view the program.
PG-13	Parental Guidance suggested	Program is inappropriate for preteens, with a greater degree of offensive material suggested than a PG rated program
R	Restricted Viewing	Not for children under age 17. Strong elements of sex and/or violence.
NC-17	Restricted Viewing	Not for children under age 17 under any circumstances. Strong sexual content.
X	Hard Core Films	Same as NC-17 rating.
No Rating	No Rating	MPAA Not Rated

TV PARENTAL GUIDELINE RATING SYSTEM

Grade		Meaning
TV-Y	General Audience	Considered suitable for all children under 7 years old.
TV-Y7	Children 7 and over	Considered suitable for children over 7, may contain Fantasy Violence Scenes.
TV-G	Parental Guidance	Considered suitable for all audiences; children may watch unattended
TV-PG	Parents Strongly Cautioned	Suggested Unsuitable for younger children, may contain: Suggestive Dialog, Bad Language, Sex, and Violence Scenes.
TV-14	Parents Strongly Cautioned	Unsuitable for children under 14, may contain: strong Dialog, bad Language, Sex, and Violence Scenes.
TV-MA	Mature Audience Only	Adults only, may contain: strong Dialog, bad Language, Sex, and Violence Scenes.

Hints for Setting Parental Control

- Determine which rating you consider acceptable to the viewer. For example, if you choose TV-PG, all the more restrictive ratings will be automatically blocked; the viewer will not be able to see TV-PG, TV-14, or TV-MA rated programming.
- Do you want to block the auxiliary video source entirely? When Aux is set to Block the signal sent by equipment such as a VCR or DVD connected to the A/V IN input jacks will not be available.
- How many hours do you want Parental Control to be active? You can set the hours option for up to 99 hours. Select “Always” for continual Parental Control.
- Select a secret password in the Set Password option. Use the number keys on the remote. Don’t forget the password, it is the only way you can access the parental control menu and change rating selections, or turn Parental Control off.
- Do you want Parental Control to be active all the time? If not, you can turn it on or off with the Lock On/Off option.
- You can set different Parental Control viewing restrictions for general audiences and for children, both can be active at the same time.
- Simply specifying one content block such as Sex Scenes will not automatically block another content in the programs from appearing.
- Even if you choose to leave the Aux inputs unblocked, the ratings you specify will automatically restrict the program that appears from the video sources.
- You cannot disable Parental Control by disconnecting the TV from power. Block hours will automatically reset to the original block time setting specified if power is disconnected.

Service Setup

Power on Channel

The Power On Channel is used to determine the start up channel of each service level when the TV turns On. This feature is useful for selecting a hospital welcome or message channel for initial display.

1. Press the **MENU** button to select **Service Setup**.
2. Press the **CH▲▼** button to select **Power on Channel**.
3. A listing of service levels are shown with the current settings. Press the **CH▲▼** button to select the Service Level.
4. Press the **VOL◀▶** button to scroll through the available channels in the current Service Level. The channel selected for that Service Level will appear when the TV is powered on.
5. Press the **TV/AV** button to return to normal TV viewing.

NOTE: If power On Channel is set to "Last", the TV will tune to the last channel viewed when the TV last turned Off.

Service Setup	
Power on Channel	▶
Clear Service Level	▶
Copy Service Level	▶
Service Level	Free
Channel Lock	Off
Channel Memory Override	On
Power On Captions Mode	Off
Position: ▲▼	Next: ◀▶
Back : MENU	Exit : TV/AV

Power On Channel	
Service Level	Channel
Free	Last
Basic	Last
Premium	Last
Position: ▲▼	Exit : TV/AV
Back : MENU	

Clear Service Level

Erases a service level of programmed channels leaving it blank.

1. Press the **MENU** button.
2. Press the **CH▲▼** button to select the **Service Setup** menu.
3. Press the **CH▲▼** button to select **Clear Service Level**.
4. A listing of service levels are shown with the current settings. Press the **CH▲▼** button to select the Service Level.
5. Press the **VOL◀▶** button once to clear the Service Level. The Service Level will show Blank when erased.
6. Press the **TV/AV** button to return to normal TV viewing.

Clear Service Level	
Free	Programmed
Basic	Blank
Premium	Blank
Position: ▲▼	Adjust: ◀▶
Back : MENU	Exit : TV/AV

Copy Service Level

Copies programmed channels from one Service Level to another.

1. Press the **MENU** button.
2. Press the **CH▲▼** button to select the **Service Setup** menu.
3. Press the **CH▲▼** button to select **Copy Service Level**.
4. Press the **CH▲** button to adjust the From service level. Press the **CH▼** button to select the To service level.
5. Press the **VOL◀▶** button once to copy the Service Level. The display will change briefly showing Memorize when completed.
6. Press the **TV/AV** button to return to normal TV viewing.

Copy Service Level	
From: Free	To: Basic
Position: ▲▼	Adjust: ◀▶
Back : MENU	Exit : TV/AV

Service Level

The TV has four distinct channel memory tiers called Service Levels namely: Disabled, Free, Basic, and Premium. When Disabled is selected, the TV displays a black screen with the message “To use this TV Please contact a TV representative” for 10 seconds and then shuts itself off. The Free, Basic, and Premium Service Levels can be programmed with any combination of channels and selected independently using the Service Level menu.

1. Press the **MENU** button.
2. Press the **CH▲▼** button to select the **Service Setup** menu.
3. Press the **CH▲▼** button to select **Service Level**.
4. Press the **VOL◀▶** button once to change the current Service Level.
5. Press the **TV/AV** button to return to normal TV viewing.

NOTE: If a “Blank” Service level is selected, the TV displays a black screen with the message “No Channels Found, Please contact a TV representative” for 10 seconds and then shuts itself off.

Service Setup	
Power on Channel	▶
Clear Service Level	▶
Copy Service Level	▶
Service Level	Free
Channel Lock	Off
Channel Memory Override	On
Power On Captions Mode	Off

Position: ▲▼	Next: ◀▶
Back : MENU	Exit : TV/AV

Channel Lock

Channel Lock disables the **CH▲▼** buttons and direct channel access functions of the TV from all user inputs (TV control buttons, IR remote control, pillow speaker). The currently displayed channel will be locked and the only viewable channel when the TV is On. Set Channel Lock Off to restore normal control.

1. Press the **MENU** button.
2. Press the **CH▲▼** button to select the **Service Setup** menu.
3. Press the **CH▲▼** button to select **Channel Lock**.
4. Press the **VOL◀▶** button to turn Channel Lock On or Off.
5. Press the **TV/AV** button to return to normal TV viewing.

Channel Memory Override

Channel Memory Override blocks IR remote and Pillow Speaker direct access to channels not in the current service level. Turn Channel Memory Override On to allow IR remote access to channels outside of the current service level. The factory default of Off.

1. Press the **MENU** button.
2. Press the **CH▲▼** button to select the **Service Setup** menu.
3. Press the **CH▲▼** button to select **Channel Memory Override**.
4. Press the **VOL◀▶** button to turn On or Off.
5. Press the **TV/AV** button to return to normal TV viewing.

Power On Captions Mode

Power On Captions Mode memorizes the caption setting upon powering the TV Off. With this feature turned off, the TV will always power on with captions disabled. With this feature turned On, the TV will always power on with the captions set to its last setting when the TV was turned off.


1. Press the **MENU** button.
2. Press the **CH▲▼** button to select the **Service Setup** menu.
3. Press the **CH▲▼** button to select **Power On Captions Mode**.
4. Press the **VOL◀▶** button to turn on or off.
5. Press the **TV/AV** button to return to normal TV viewing.

Radio Control

You can listen to FM radio with the TV's internal radio provided FM radio Station signals are present on the hospital's cable TV system. The Radio must first be enabled in the Special menu. Radio is then added to the TV's signal source list and can only be accessed using the TV/AV button. Programming the radio is similar to programming TV channels.

Mode

Determines the method used to tune the Radio. With Mode set to Auto, the patient can tune only those FM stations preprogrammed in memory. With mode set to Manual, the patient can tune all FM radio frequencies including those with no stations.

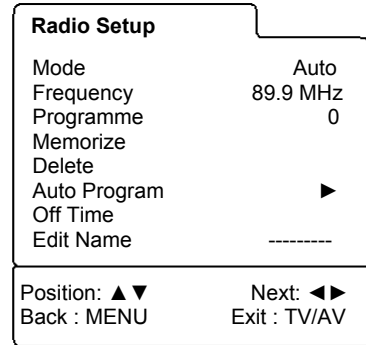

Frequency

Displays the currently tuned radio frequency. Press the **VOL ◀▶** button repeatedly to tune in the desire station manually.

Program

20 individual program memories are available to hold radio station frequencies. Stations programmed into memory are made available to the patient for listening by setting Mode to Auto. Press the **VOL ◀▶** button repeatedly to select the desired program memory number.

Memorize, Delete & Auto Program

Memorize stores a FM radio station frequency to a specific Program Memory number. Delete removes a stored frequency from a specific Program Memory number. Auto Program automates FM radio station programming.

Memorize


1. Press the MENU button to display the **Radio Setup** menu.
2. Press the **VOL ◀▶** button repeatedly to select **Mode Auto** or **Manual** tuning.
3. Press the **CH ▲ ▼** button and select **Frequency**. Then press the **VOL ◀▶** button repeatedly to tune in the desired station manually. If you press and hold the **VOL ◀▶** button 2 seconds or longer, the radio automatically changes present frequency to the next frequency.
4. Press the **CH ▲ ▼** button to select **Program**. Then press the **VOL ◀▶** button repeatedly to select program.
5. Press the **CH ▲ ▼** to select **Memorize**. Press the **VOL ◀▶** button to memorize the current frequency to Program memory.

Delete

6. To delete a frequency from Program memory, press the **CH ▲ ▼** button to select **Delete**. Select off with the **VOL ◀▶** button to delete the station.

Radio Auto Program

7. Press the **CH ▲ ▼** button to select Auto Program.
8. Press the **VOL ◀▶** button repeatedly to begin Auto Program. The radio automatically scans all available radio stations on the hospitals CATV cable system and memorizes them to Program Memory.

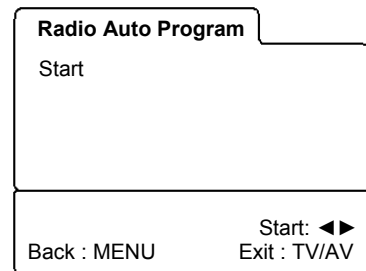

Off Time


Sets the amount of time the radio tuning status box appears on the TV screen. Once the patient tunes the TV's Radio to the desired radio station, the TV's screen blanks to black with radio

station sound only.

Radio Edit Name

Each programmed radio station can also be identified with a station label using up to 8 selectable alphanumeric characters.

1. Press the **CH▲▼** button to select **Edit Name**.
2. Then press the **VOL◀▶** button to edit radio name.
3. Press the **CH▲▼** button repeatedly. You can use the numeric 0 to 9, the alphabet A to z (capital and small letters), and a blank.
4. Press the **MENU** button to return to the prior menu.
5. Press the **TV/AV** button to exit and return to the patient's radio tuning status display.

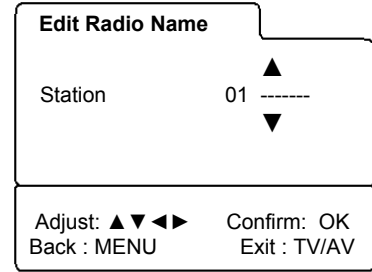


Picture Setup in PC Mode

Picture Adjustment

When the TV is placed in PC Mode, you can adjust the computer's displayed picture Contrast, Brightness, Temperature, Clock, Phase, and ARC (Aspect Ratio Control) to your own preferences.

1. Press the **TV/AV** button to select the PC mode.
2. Press the **MENU** button.
3. Select Picture.
4. Press the **CH▲▼** button to select the desired picture item.
5. Press the **VOL◀▶** button to make appropriate adjustments.
6. Press the **TV/AV** button to exit menu.

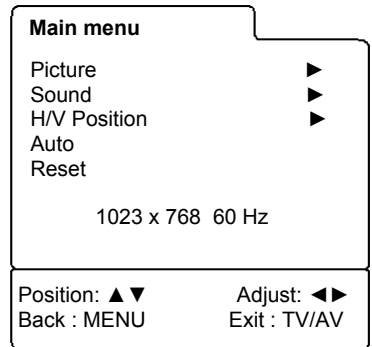

Contrast & Brightness

This function adjusts the picture's brightness and darkness.

Temperature


Temperature is a measure of the warmth of the image's color. Use either the 9300K or 6500 K setting.

Clock

This function minimizes any vertical bars or strips visible on the screen background. The horizontal screen size may also change with this setting. Note: The clock value changes with a change in the video resolution.

Phase

This function removes any horizontal noise and sharpens displayed characters.

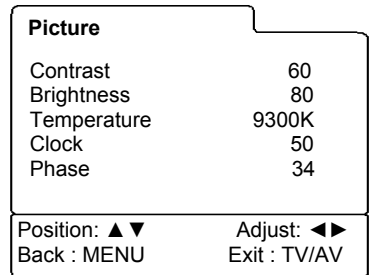

Position Adjustment

Adjusts the computer's screen's position left/right and up/down.

1. Press the **MENU** button.
2. Select the **H/V Position** menu.
3. Press the **CH▲▼** button to select the desired position item.

4. Press the **VOL ◀▶** button to adjust horizontal position and vertical position.
5. Press the **TV/AV** button to exit menu.

Auto

This function activates the automatic adjustment of the screen position, clock, and clock phase. The displayed image will disappear for a few seconds while the Auto configuration is in process.

Note: Signals from some graphics boards may not function properly. If the results are unsatisfactory, adjust your monitor's position, clock and clock phase manually.

Reset

Reset restores the television's computer display back to factory settings.

Resolution

The television's computer display supports multiple resolutions.

MODE	RESOLUTION	HORIZONTAL FREQUENCY (Khz)	VERTICAL FREQUENCY (Hz)
VGA	640x480	31.5 Khz	60 Hz
	640x480	37.9 Khz	72 Hz
	640x480	37.5 Khz	75 Hz
	720x400	31.4 Khz	70 Hz
SVGA	800x600	35.1 Khz	56 Hz
	800x600	37.9 Khz	60 Hz
	800x600	48.1 Khz	72 Hz
	800x600	46.9 Khz	75 Hz
XGA	1024x768	48.4 Khz	60 Hz
	1024x768	56.5 Khz	70 Hz
	1024x768	60.0 Khz	75 Hz
DTV	720 x 480p	31.5 Khz	60 Hz
	720 x 576p	31.2 Khz	50 Hz
	1280 x 720p	45.0 Khz	60 Hz
	1280 x 720p	37.5 Khz	50 Hz
	1920 x 1080i	33.7 Khz	60 Hz
	1920 x 1080i	28.1 Khz	50 Hz

NOTE:

1. If the set is cold, there may be a small "flicker" when the set is switched ON. This is normal, there is nothing wrong with the set.
2. Some dot defects may appear on the screen, like Red, Green or Blue spots. However, this will have no impact or effect on the monitor performance.
3. Non-supported resolutions are displayed at the nearest resolution.

Product Specifications

Model	PDI-P15LCDB	
Size	Horizontal 13 ¾ Inches	Thickness 2 ½ Inches
	Height 15 3/8 Inches	Weight 14 lbs.
Power Requirements	120 VAC, 1.1A, 60 Hz.	
Television System	NTSC	
Channels	VHF (2 ~ 13), UHF (14 ~ 69), CABLE (01 ~ 125)	
Display Panel	15 Inches (Diagonal), TFT-LCD	
Power Consumption	45 Watts	
Antenna Impedance	75 Ohms Unbalanced	
Audio Output	1.5 Watts per Channel	
External Inputs	Ant., DC 12V, PC/DTV IN, Component In, H/P, S-Video In, AV In, PC Audio IN	

Troubleshooting

Problem	Check Item
No Picture on screen and no sound from speakers	<ul style="list-style-type: none"> • Insert the AC power cord plug securely in AC power outlet. • Make sure the TV is not turned off. The front power button will illuminate RED if the TV is off. • Turn on the power button. The front power button will illuminate GREEN if the TV is ON.
No picture and No picture from external source (VCR, DVD)	<ul style="list-style-type: none"> • Check the brightness setting of the TV. • TV Lamp may have malfunctioned. • Select the External source using the TV/AV button on the TV. • Make sure the external source is connected correctly and is playing. • Verify the external source is not being blocked by a Parental Control setting.
Picture OK, but no sound from TV speakers	<ul style="list-style-type: none"> • Check the sound setting. • Verify the sound is not muted. • Verify that a pair of headphones is not connected. • If an external source is connected, verify that it is connected correctly.
Picture OK, but no sound from the pillow speaker	<ul style="list-style-type: none"> • Verify that the pillow speaker is plugged in. • Set the pillow speaker thumbwheel volume control to maximum. • Adjust the VOL ◀▶ button on the TV to increase the volume.
Picture is too light	<ul style="list-style-type: none"> • Check and adjust the COLOR and CONTRAST settings.
Picture is too dark	<ul style="list-style-type: none"> • Verify BRIGHTNESS setting is not too low. • TV lamp may have failed.
Remote control does not work	<ul style="list-style-type: none"> • Change the batteries • Make sure the TV's infrared window is not receiving strong light from fluorescent lamps.
The picture is spotted	<ul style="list-style-type: none"> • There may be interference from hospital equipment.
The TV displays "No Channels Available, Please contact a TV Representative".	<ul style="list-style-type: none"> • The TV is set to a Service level that is Blank. Program the blank Service Level with channels or switch to a service level that contains channels.
The TV turns On and then Shuts Off	<ul style="list-style-type: none"> • The TV is set to the Disabled Service Level. Change the Service Level.
The TV displays "To Use this TV Please Contact a TV representative", and then shuts Off.	<ul style="list-style-type: none"> • The TV is set to the Disabled Service Level. Change the Service Level.
Pillow Speaker does not control the TV.	<ul style="list-style-type: none"> • Verify the pillow Speaker is plugged in. Usually the pillow speaker will have sound if it si plugged in. • Connect the pillow speaker directly to the TV and verify that the across-room or bedside wiring is not faulted. • Try another pillow speaker.

Model PDI-P15LCDB TV Limited Warranty

PDI Communication Systems Inc., ("PDI") warrants, to the original purchaser only, that the PDI-P15LCDB will be free from defects in materials and workmanship, under normal use, for 2 year (730 days) from the date of original purchase. This warranty does not cover any other equipment that may have been included with PDI's shipment of this product.

After receipt of written notice of a defect or malfunction occurring during the warranty period, PDI will repair or replace goods returned to its Springboro, Ohio location, at its discretion, free of charge to the original purchaser, the whole or any component part of any product manufactured by PDI and found by PDI to be defective.

As a condition to obtaining warranty service, written notification must be received by PDI within at least ten (10) days after defect is first observed. Repair of said product requires it to be shipped to the PDI factory in Springboro, Ohio. All shipments shall be F.O.B. Springboro, Ohio, and all shipping and freight charges to PDI's factory shall be paid by the customer.

This warranty shall not apply to any PDI products subjected to improper use, negligence or accident; nor to tampering, alterations, or repairs by others, without PDI's specific prior written authorization. For information regarding authorized servicing and all other information pertaining to this warranty, please contact PDI COMMUNICATION SYSTEMS at 40 Greenwood Lane, Springboro, Ohio 45066 or phone 937-743-6010.

This warranty gives specific legal rights and you may also have other rights which vary from state to state.

PDI's liability under this warranty is limited to repair or replacement of defective products and parts as provided above. PDI shall not be liable for incidental or consequential damages.*

The warranty contained herein is in lieu of all other expressed or implied warranties, including any implied warranty of merchantability or fitness for any particular purpose. PDI neither assumes nor authorizes any person to assume, on its behalf, any other obligation or liability.

*Some states do not allow the exclusion of limitation of incidental or consequential damages or a disclaimer of warranties implied by law, so the above limitation or exclusion may not apply.



Communication
Systems, Inc.
40 Greenwood Lane
Springboro, Ohio 45066 USA

PH: 937-743-6010
FX: 947-743-5664