


Canon ImageRUNNER Advance: Create a Favorite

Save often used copy settings as a favorite on the Canon ImageRUNNER Advance model.


Create a Copy Favorite:

From the Main Menu

1. Select Copy from the Home screen.

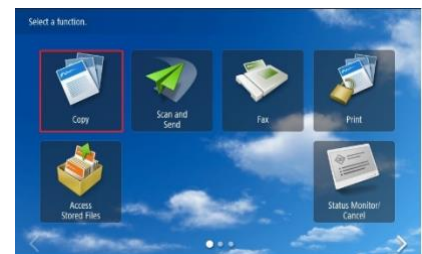

2. Choose features for the copy, for example:
 - a. Select FINISHING for Staple/Collate/Group
 - b. Select 2-SIDED for 1 side to 2 sides OR 2 sides to 2 sides
 - c. SELECT COLOR to choose from B & W or Auto Color

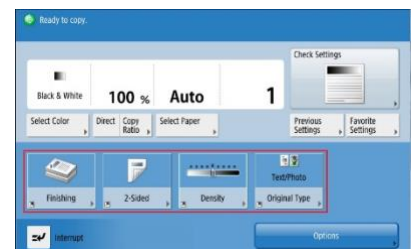


3. Select OPTIONS if necessary to add special features like making booklets, adding covers, frame erase, page numbering, job build, etc....




4. Click the Favorite Settings button.




5. Select an unregistered button and click Register.

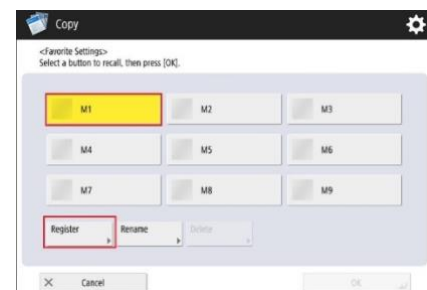

6. Review the settings listed and if they are correct, click Yes.

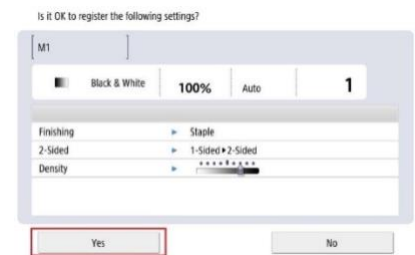

7. With the newly registered button selected, click Rename to label the button.

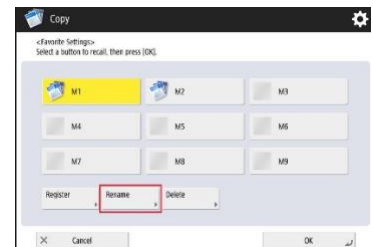

8. Enter the label in the name field.
You may enter up to 10 characters.

9. Click OK to confirm and close the naming window.



10. Click OK to save and close Favorites window.

