


Canon ImageRUNNER Advance: Printing on tab paper from a paper drawer


Printing on tab paper from the paper drawer requires a two-part set up. Setting up the paper drawer and printing from the print driver on the Canon ImageRUNNER Advance model.

On the Copier


1. Load the tab paper in the paper drawer.
2. Press the Setting and Registration button.
3. Select Preferences
4. Paper Settings
5. Paper Settings.

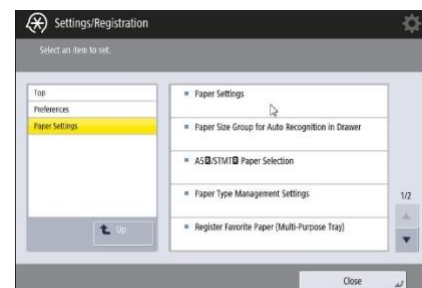

6. Select the Drawer where the tab paper resides.
7. Click Set to open the paper registrations.

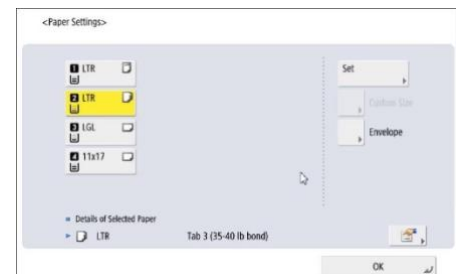



8. Click the details button if Tab 3 isn't among the listed paper types.
9. Click Tab 3
10. Click OK.
11. Close each window by clicking OK.

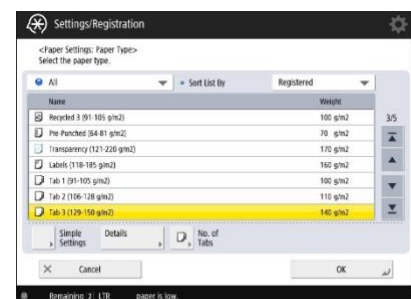

On the Computer:


1. Open the tab template document.
2. Click File>Print
3. Select the Canon printer.
4. Open the printer properties

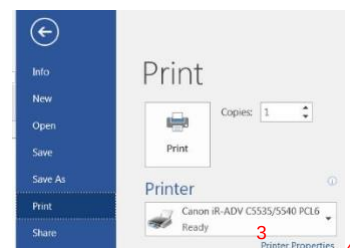

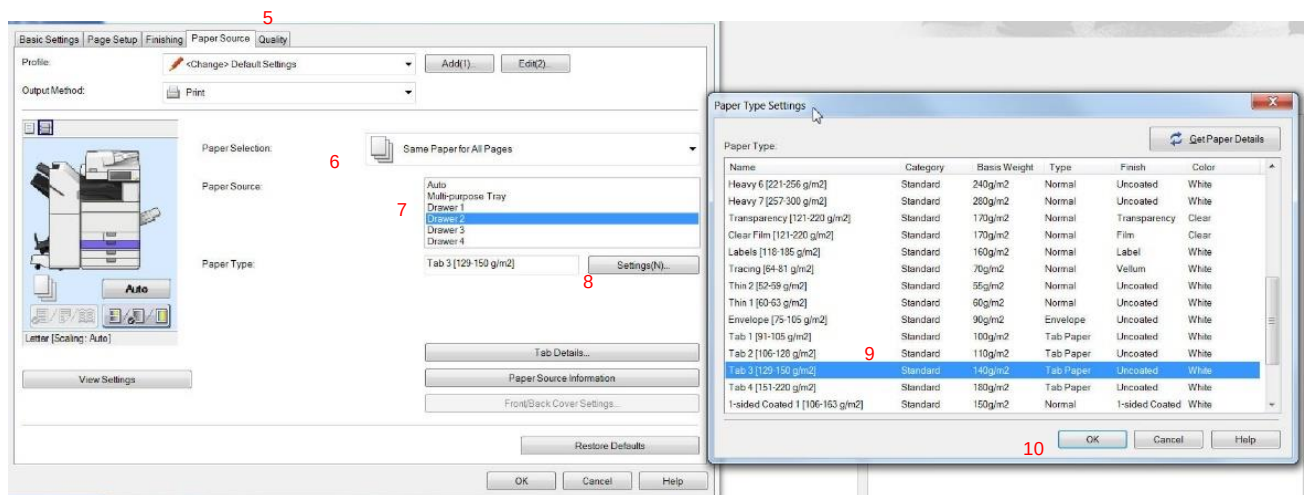



5. Click the Paper Source tab.
6. Set Paper Selection to Same Paper for all Pages
7. From the Paper Source list, select the drawer where the tab paper resides
8. Click the Paper Type Settings (N) button to select the paper type.
9. Scroll to Tab 3 and click to highlight.
10. Click OK.

11. Click Paper Source Information button
12. Click Get Paper Source Information button.
13. Click Yes to go out to copier to get the paper source information.
14. Click OK to confirm.

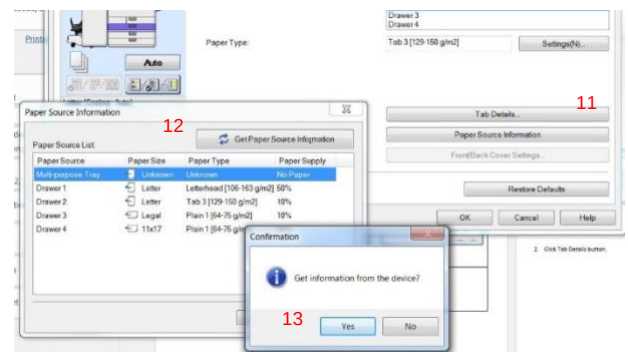

15. Click Tab Details button.
16. Adjust the offset Width to required width.
17. Click OK.

18. OK.

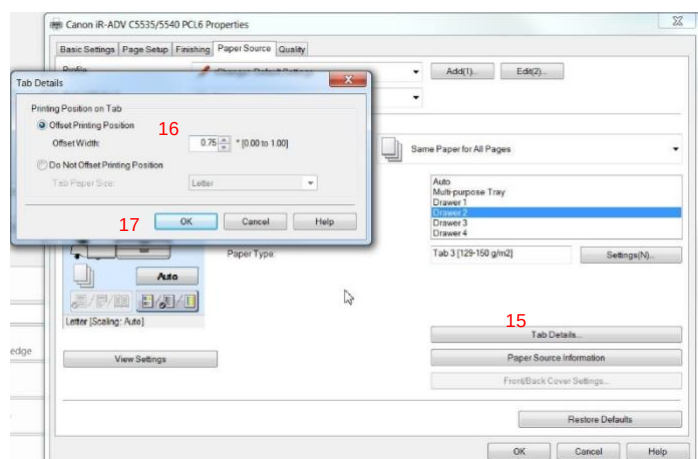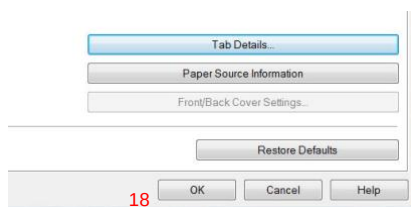

19. Click Print.

