# ShoreTel IP Phone 480/480g Quick Reference

### **PHONE OPERATION**

### **Place Calls**

#### Use the speakerphone or a headset ((1)) or ((1)) + Ext. another extension Dial Use the Directory Directory < O • to select + **EXTENSION ASSIGNMENT** Make a conference call (while on a + Ext. + Confer or Consult Conference Unassign user call) Options < O ) ٩Ô٢ Assign a phone number Dial Make a call from History to select + Next Phone number + History to a phone **CUSTOMIZE YOUR PHONE** Use the Intercom (through Directory) •0 Open Intercom to select + Directory Set do-not-disturb DND Answer Calls mode Answer a call Lift handset or **Answer** or $(\mathbf{n})$ **(∎**)) or Set call-forwarding Options + Call forwarding + •0• Open Edit options Send a call to voicemail To VM or # or Voicemail Change automatic ۰Õ, Options •0• Edit Auto off-hook Divert an incoming call + Ext. + Transfer Transfer off-hook setting Adjust volume of handset, headset, Edit Set headset type Options **۱**Ο **י** + Headset type + < O I or speakerphone when off hook; (-+) to select adjust ringer volume when on hook Select a ringtone •0• Options Ringtone Edit 0 OK Answer call waiting (incoming call) Press green blinking call appearance button or **Answer** Turn ringer on or Pick up a call for another extension Edit Pickup + Ext. Options •0 Audible ringer Toggle off Interact with Calls Set handsfree Options 0 Edit Handsfree mode Toggle mode Mute a call Change time zone •0• < O > Options Place a call on hold + Time zone Edit or press call appearance button Hold TROUBLESHOOTING Take a call off hold or press orange blinking call appearance button Hold (\) 4 6 3 6 (INFO#) View phone information + Ext. + Transfer or Consult Transfer a call Transfer $\begin{bmatrix} 7 \\ PQRS \end{bmatrix} \begin{bmatrix} 3 \\ DEF \end{bmatrix} \begin{bmatrix} 7 \\ PQRS \end{bmatrix} \begin{bmatrix} 3 \\ DEF \end{bmatrix} \begin{bmatrix} 8 \\ TUV \end{bmatrix} \begin{bmatrix} # \end{bmatrix} (RESET#)$ Reboot your phone Join calls Join Park a call on another extension Park + Ext. Call the Help Desk Help Unpark + Ext. Unpark a call

VOICEMAIL

Log in to voicemail main menu

Voicemail + Password + #

Log in to voicemail from Dial your Ext.+ Press \* during greeting + Password + #



Note: For details about using the phone, see the ShoreTel IP Phone 480/480g User Guide. ShoreTel, Inc., 960 Stewart Drive Sunnyvale, California 94085 USA Phone: +1.408.331.3300 +1.800.425.9385 Fax: +1.408.331.3333 www.shoretel.com



•0•

ОК +

ОК +

Exit

Exit

Exit

Exit

OK

Back + Back

Exit

Exit

## ShoreTel IP Phone 480/480g Quick Reference



- Steady Green: The phone is in use (dialing or off hook).
- Blinking Green: Incoming call

PN 800-1930-01

- Orange: The call is on hold or parked.
- Steady Orange: The extensions's call mode is set to Do Not Disturb.
- Steady Red: The shared line is in use by the other party.

## **GUIDE TO STATUS ICONS**

