

Back up or restore Fiery server settings

You can back up or restore Fiery server settings from Configure or from Command WorkStation.

Note: The Restore Fiery Settings and Restore Default Fiery Settings option are not available for every Fiery server.

Back up Fiery server settings from Configure

From Configure, you can choose which Fiery server settings you want to back up.

1. From Configure, choose **Fiery Server > Backup**.
2. Follow the on-screen instructions to back up your settings.

Back up Fiery server settings from Command WorkStation

From Command WorkStation, you can choose which Fiery server settings you want to back up.

1. Connect to the desired Fiery server and do one of the following:
 - Click **Device Center > General > Tools > Backup & Restore**.
 - Select **Server > Backup & Restore**.
2. Click **Backup**.
3. Select the items you want to back up.
4. In the dialog box that appears, select a location to save the file and specify a name for the backup file.
5. (Optional) Select **Add date to file name**.
6. Click **Next**, and then click **Finish**.

Restore Fiery server settings from Configure

If you previously backed up Fiery server settings, you can restore them from Configure.

1. From Configure, choose **Fiery Server > Restore**.
2. Follow the on-screen instructions to restore your settings.

Restore Fiery server default settings from Configure

After you restore default settings from Configure, the Fiery server must reboot to revert to them.

Note: The information in this topic applies only to the Integrated Fiery server.

1. From Configure, choose **Fiery Server > Restore Default Fiery Settings**.
2. Click the **Restore Default Fiery Settings** button.

Restore Fiery server settings from Command WorkStation

If you previously backed up Fiery server settings, you can restore them from Command WorkStation.

1. Connect to the desired Fiery server and do one of the following:
 - Click **Device Center > General > Tools > Backup & Restore**.
 - Select **Server > Backup & Restore**.

2. Click **Restore**.
3. In the dialog box that appears, browse to the location of the configuration settings you want to restore and click **Open** or select a recent backup.
4. Click **Next** and select the items you want to restore.
5. Click **Next**, and then click **Finish**.
6. After the restore operation is complete, reboot the Fiery server if you are prompted.

Copyright © 2018 Electronics For Imaging, Inc. | [Terms of Use](#)