



MAPPING/ LOCATION SENSOR TROUBLESHOOTING

NO POWER

+ Check ethernet plug/cable.

POWER AND CONNECTIVITY ARE GOOD

+ Sensor is ready.

POWER, BUT NOT ABLE TO CONNECT TO INNERSPACE SERVERS

+ Power cycle; unplug and reconnect in 5 seconds.

If you continue to have problems, please contact
Tech Support (support@innerspace.io)