




AutoFry Daily Cleaning Procedures

Perform the following daily cleaning steps in the morning while the equipment is cool to maintain AutoFry for optimum use.

1. Remove the food entry chute from the front door by (a) removing the back hinge, (b) unscrewing the front handle and (c) disconnecting the two chute sides. Wash chute in warm soapy water followed by a clear water rinse.

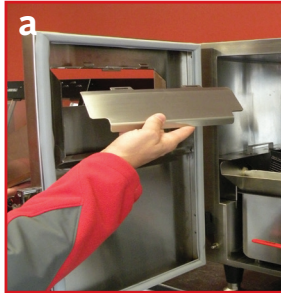

2. Remove and wash the following in warm soapy water followed by a clear water rinse:



A. Teflon Coated Wire Cook Basket



B. Food Exit Chute



C. Filter Cover Plate



D. Grease Baffle



E. Second Filter

3. Thoroughly dry all parts.

4. Remove the charcoal filter and wipe down the exterior surfaces with a clean damp cloth or paper towel. **Never soak the charcoal filter or permanent damage to the charcoal media will result.**



5. Clean all interior surfaces to bare metal. **Use extreme caution when cleaning around the fire system actuation cables and fusible link (A) in the interior cabinet. Accidental discharge of the fire system could result.**

6. Sanitize all part and interior surfaces.
7. Polish the exterior surfaces using AutoFry Shine stainless steel polish and a soft cloth.
8. Replace the clean dry components and add liquid shortening as needed.

IF YOU HAVE ANY QUESTIONS PLEASE FEEL FREE TO CALL US AT 800-348-2976 Ext. 154