

# OPERATIONAL / MAINTENANCE INFORMATION



## 1 INSTALLATION

- Remove packaging and remove gas cylinder cage from pallet
- Locate cage in required location
- Remove warranty card, complete and return'
- According to AS4332-2004 it is recommended that cylinders are to be stored outdoors wherever possible
- Ensure no ignition sources are within 3 metres of store
- Where bolt down feet are provided then stores are to be bolted down unless used as a site stillage
- Where ramps are provided these can be lowered and left in that position until store needs to be relocated
- Positioning of your gas cylinder storage cage must be according to regulatory requirements applicable regarding separation distances and boundary limits



CABINETS ARE BUILT TO AS1940-2004 REQUIREMENTS

## 2 CYLINDER STORAGE

- Cylinders are to be stored in an upright vertical position at all times
- Once in store cylinders need to be restrained with supplied restraint chains
- Where dividers are provided, these need to be moved to suit the cylinder sizes that are to be stored



## 3 MAINTENANCE

- Store to be kept clean and tidy at all times.