

Common Error Codes

Error Code	Problem	Solution
E01	Reset Needed	Perform reset procedure
E16	Too many buttons on hand control pressed simultaneously	Perform reset procedure
E47	Leg or leg cable not connecting	Make sure leg ext cable is plugged in at the leg and into the control box. Perform reset procedure
E41- E62	Hit obstruction	Remove obstruction from under or between the desks. Perform reset procedure

