

PARAMETER – <i>mask sip password</i>	CONFIGURATION FILES startup.cfg, <model>.cfg, <mac>.cfg
DESCRIPTION	Enables the enhanced security feature whereby a user's SIP account password is hidden/masked in the server.cfg and local.cfg files (downloaded from the IP phone's Web UI troubleshooting page for debug purposes).
FORMAT	Boolean
DEFAULT VALUE	0 (disabled)
RANGE	0-1 0 (disabled) 1 (enabled)
EXAMPLE	mask sip password: 1

PARAMETER – <i>sip bla number</i>	CONFIGURATION FILES startup.cfg, <model>.cfg, <mac>.cfg
DESCRIPTION	Allows you to assign a phone number that is shared across all IP phones.
FORMAT	Integer
DEFAULT VALUE	N/A
RANGE	N/A
EXAMPLE	sip bla number: 1010

PARAMETER – <i>sip mode</i>	CONFIGURATION FILES startup.cfg, <model>.cfg, <mac>.cfg
DESCRIPTION	Allows you to configure the mode of the line. Applicable values are: <ul style="list-style-type: none"> • Generic - Normal line • BroadSoft SCA - Shared Call/Line Appearances (SCA) line for BroadWorks network (call activity can go to more than one phone) • BLA - Bridged Line Appearance (BLA) line.
FORMAT	Integer
DEFAULT VALUE	0
RANGE	Valid values are: 0 - Generic 1 - BroadSoft SCA 2 - (reserved) 3 - BLA
EXAMPLE	sip mode: 2