

1. Select Fax from the Main Menu screen



You can specify the destination using the Address
Book or enter the fax number using the numeric keys

Note: If you want to enter two or more fax numbers, press [OK] \rightarrow enter the next destination

3. Press Start

Fax 💽						
Specify the destinations.				02/02/2010 4:27 PM		
Destinations: : 0		0/0		Previous Settings		
=			•	200 (No)x100 dpi rmal)	Þ
Details Delete Dest.	Delete Tone PIN Code			🖒 Aut	o Size	Þ
🤝 John 🔗	Silvia	Se Mark		🔣 🗶 Density		÷
Nancy 🔗	Nancy 🐼 Mike		1/17	🛛 🗎 Orig	ginal Type	÷
				2-9 Drig	Sided ginal	Þ
			•	Dift Origi	erent Size ginals	Þ
Address Book On-Hook Direct Send Options						
	2					

- 4. If the following screen appears, press **Start** to scan the next original
- After all of the originals are scanned, press Start Sending



TO PLACE A SERVICE CALL OR ORDER SUPPLIES: CALL 800.847.3098 AND PROVIDE LOCATION AND SERIAL OR ID NUMBER OF THE DEVICE