

Konica Clear Account Codes


1. At the copier touch Menu



2. Touch Utility



3. Touch Administrator Settings

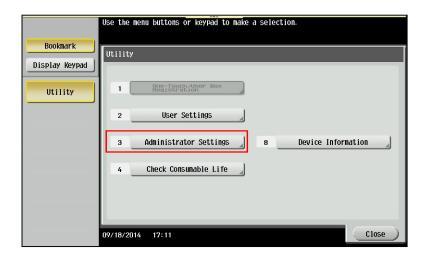




Konica Clear Account Codes


- 4. Type in 12345678 for Administrator password
- 5. Touch OK



6. Touch User Authentication/Account Track

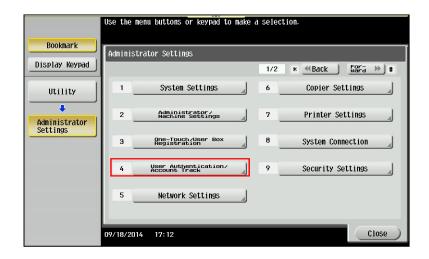

7. Touch Account Track Settings

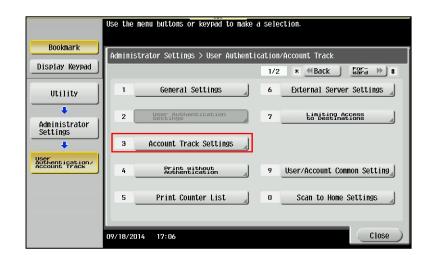



Konica Clear Account Codes

8. Touch Account Track Counter




9. Touch Reset All Counters

NOTE: You can clear individual account codes by just touching that entry instead



- 10. Touch Yes to clear counts
- 11. Click OK

All of the counts are now cleared to zero

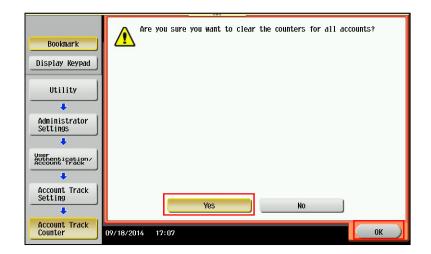

TO PLACE A SERVICE CALL OR ORDER SUPPLIES: CALL 800.847.3098 AND PROVIDE LOCATION AND SERIAL OR ID NUMBER OF THE DEVICE