



**RT-760GER**  
**ALPHA NUMERIC PAGER**  
**2 and 4 Line**

*Users Manual*

**800.321.6221**

[www.jtech.com](http://www.jtech.com) | [wecare@jtech.com](mailto:wecare@jtech.com)


1400 Northbrook Parkway, Suite 320, Suwanee, GA 30024, USA | International +1 770.925.8630

©2018 JTECH, an HME Company logo and product names are registered trademarks of HM Electronics, Inc. All rights reserved.




 

 




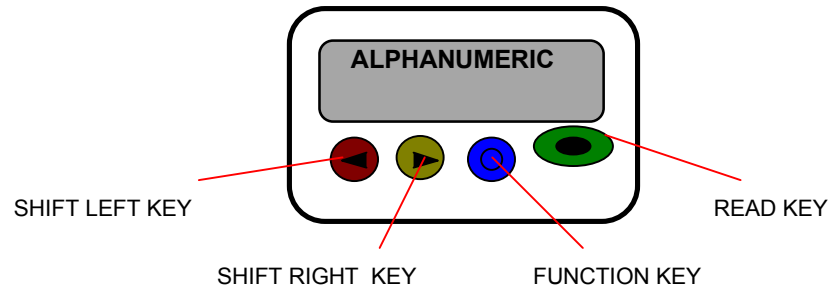




 



**Features:**










- Smart LCD screen that displays 112 x 32 dots, 4 lines for English display, 2 lines for bigger character
- 6 Independent Cap Code/RIC can be set for personal or mail drop
- Message Capacity Total 25,000 characters
  - \* Personal message : 20 sets messages, dynamic characters memory per message
  - \* Mail-Drop message : 48 sets mail-drop, dynamic characters memory per message
- Two lines large size Bold Alpha display, 2x14 =28 English characters
- Four lines normal size Alpha display, 4x18 = 72 English characters per screen
- Word wrap
- Memory retention, memory back-up under main battery replacement
- Unread message remainder alert selectable 0-9 minutes
- User Logo on power-up
- Timer function count down or up
- Battery voltage measuring function with insertion of battery
- Low battery indication
- Adjustable LCD contrast
- Date and Time display DD/MM or MM/DD
- Date and Time Stamping of messages
- Message Lock/protection
- Duplicate message indication
- Message full indication
- Message error indication
- Option to delete individual message or delete all
- Selectable alert mode, 9 kinds of beep, 7 Melodies, Vibration & silent, Beep & Vibrate
- Alert Lengths 7, 14sec, Continuous Beep and Priority Alert.
- Alerts programmable independently for each cap code
- Alarm function, 3 sets of alarms with 10 event setting
- Adjustable LCD contrast
- Illumination backlight for easy night reading
- Turn Loud speaker automatically on/off for silent receiving
- Oldest Message over written automatically by new message when memory is full
- Out off Range indicator 0-9 minutes
- On Air Programming
- Multi Lingual
- FCC, CE Approval

## KEYS





## ICONS


-  In-Range indicator
-  Tone Alert Indicator
-  Vibration alert Indicator
-  Silent Alert Indicator
-  Message Indicator
-  Low Battery Indicator
-  Alarm Function Active Indicator
-  Delete All Messages
-  Mail-drop (alert setting menu)
-  Normal message (alert setting menu)
-  Escape
-  Set Alert
-  Pager On / Off
-  Set Time
-  Duplicate Message
-  Silent Receiving
-  Set Vibrator Alert
-  Set Alarm
-  Auto On / Off set

-  Timer
-  LCD contrast adjustment
-  Power on Indicator
-  Duplicate Message Indicator
-  New Unread Normal Message
-  Read "Normal Message" Indicator
-  Protect / Lock Message
-  New unread Mail-drop Message
-  Read Mail-drop Message

 
### **READING NORMAL MESSAGES**

From stand-by press the READ KEY twice to view message icons. When a normal message is received pager will display  for each unread message. Use the SHIFT RIGHT KEY or SHIFT LEFT KEY to select the message to be read. Once the message is read display will show  for the read messages



### **READING MAIL-DROP MESSAGES**

If the pager programmed to receive Mail-Drop message this will be indicated with a different alert tone and pager will display  for each unread message. From stand-by press READ KEY twice to select message icon. To read the message, press and hold the RIGHT SHIFT KEY to remove the cursor to Mail-Drop icon if the cursor is under normal message icon. Press the "READ KEY" to read the message. If there are more than one message then press Left or Right shift keys to select and read the other messages

### **SAVING MESSAGES TO NOTEBOOK**



Select the message to be read either from Normal Message or Mail Drop then press the FUNCTION KEY once. Move cursor to  using the SHIFT RIGHT KEY. Press the FUNCTION KEY once and the message will be stored in the notebook memory.

### **READING NOTEBOOK MESSAGES**

  From standby-by, press "READ KEY" twice to view message icon. When a notebook message is stored notebook icon  is displayed. Move cursor to note book icon  using the SHIFT RIGHT KEY. Then press READ KEY to read stored message. To read additional messages stored in Note book continue press the READ KEY.

**STARTING TO OPERATE PAGER**

  **Insertion of Battery:**



Insert AAA battery. Screen will display Condition of battery. After a short period screen will change automatically and will display Supplier Name/User name/Company Name etc., and then screen will change to normal receive/stand by mode mode.


**FUNCTIONS**

**Time Date Year Setting :** 




» Press FUNCTION KEY twice from stand by mode



 
» Press SHIFT RIGHT KEY and move cursor to  SET TIME



» Move cursor to  SET TIME



» Press FUNCTION KEY screen will display



» Press FUNCTION KEY to set the right data and press SHIFT KEY to move the cursor. Then press READ KEY to return to stand-by mode after setting the correct time and date.

**ALERT FUNCTIONS:** 

 


» Press FUNCTION KEY twice from stand by mode



» Press SHIFT RIGHT KEY and move cursor to  SET ALERT

» Press FUNCTION KEY on SET ALERT



» Press FUNCTION KEY to change the alert functions  
press SHIFT KEY to move the cursor.

**ALERT ICONS:**



Personal Message Alert Settings

Move cursor to each option



Mail-drop Message Alert Settings

**Note:** Mail Drop function may not be displayed on some pagers if not programmed



Audible Alerts + Melody settings



Audible Alert + Vibrator



Vibrator Only



Silent receiving

**TURNING PAGER ON/OFF:** 

**TO TURN PAGER OFF**



» Press FUNCTION KEY twice from stand by mode

» Press SHIFT RIGHT KEY to move cursor to 



» Press FUNCTION KEY to turn the pager **OFF**

**TO TURN PAGER ON**

» Press READ KEY once to turn the pager **ON**


## DELETING MESSAGES



Messages can be deleted individually or ALL

### DELETING SELECTED/INDIVIDUAL MESSAGE



Select the message to be deleted. While the message is displayed press the FUNCTION KEY, in sub menu move the cursor to  Delete Icon with Shift Right Key. Press FUNCTION KEY to delete The message

### DELETING ALL MESSAGES

 


» Press FUNCTION KEY twice under stand-by mode

» Press SHIFT RIGHT KEY to  DEL ALL MSG




» Press FUNCTION KEY to delete all messages in the memory except that unread and protected messages



» Press FUNCTION KEY again to delete all messages

### PROTECT / LOCK MESSAGE

 


» Select the message to be stored/protected by pressing READ KEY  
» Press FUNCTION KEY and move cursor with SHIFT RIGHT KEY to  Message Protect Icon then press FUNCTION KEY

» To UNLOCK the message repeat above PROTECT function

### ALARM ALERT FUNCTION

If alarm function has been activated pager will automatically alert with a different sound and selected alarm Icon displayed



» To stop Alarm Press READ KEY to return to standby mode

Alarm Alert Icons    USS   



## SETTING ALARMS :



 
» Press FUNCTION KEY twice from stand by mode



» Move cursor with SHIFT RIGHT KEY to SET TIME



» Press SHIFT RIGHT KEY and move cursor to SET ALARM



» Press FUNCTION KEY again

» Press FUNCTION KEY to change between 3 Alarm settings then move cursor with SHIFT RIGHT KEY to Time and Alert settings. Use FUNCTION KEY to change Alarm Alert Icons **US\$**

## ALERT AUTO ON/OFF



» Press FUNCTION KEY twice from stand by mode

 


» Press SHIFT RIGHT KEY and move cursor to SET TIME



» Press FUNCTION KEY on SET TIME

» Press SHIFT RIGHT KEY and move cursor to SET AUTO



» Press FUNCTION KEY on Set Auto

» Press SHIFT RIGHT OR LEFT KEY to move the cursor between digits and press FUNCTION KEY to set the time

» Press SHIFT RIGHT KEY to move the cursor to 00:00 set the time for alert to be turned ON

» Continue to Press SHIFT RIGHT KEY to move cursor to 00:00 set the time alert to be turned OFF

» To activate Auto ON/OFF move cursor to Auto ON OFF Icon simply pressing the FUNCTION KEY

## TIMER SETTING



» Press FUNCTION KEY twice from stand by mode



 
» Press SHIFT RIGHT KEY and move cursor to SET TIME



» Press FUNCTION KEY once on Set Time

» Press SHIFT RIGHT KEY and move cursor to SET TIMER

» Press FUNCTION KEY on Set Timer




 
» Press SHIFT RIGHT KEY to move cursor to digits and change digits with FUNCTION KEY


» To activate ON/OFF move cursor to ON OFF Icon simply pressing the FUNCTION KEY

## LCD CONTRAST ADJUSTMENT



 
- »» Press FUNCTION KEY twice from stand by mode
- »» Press SHIFT RIGHT KEY and move cursor to  SET TIME



- »» Press FUNCTION KEY on Set Time
- »» Press SHIFT RIGHT KEY and move cursor to  LCD CONTRAST



- »» Press FUNCTION KEY to adjust the contrast



- »» Press READ KEY to go back to receive mode


## PHONE BOOK



 
- »» Press FUNCTION KEY TWICE from stand by mode




- »» Move cursor with SHIFT RIGHT KEY to  DIRECTORY
- »» Press FUNCTION KEY on Directory.



 - »» Display will show 00
- »» Press FUNCTION KEY then Shift Right Key to advance to directory position i.e. 00-99



- »» Press FUNCTION KEY then Shift Right Key, display shows  Data Entry



- »» Press FUNCTION KEY, then press Shift Right Key to enter required digit to continue the same procedure to complete the entry.

- »» Press READ KEY to return to standby mode


To Read stored info:

- »» Press FUNCTION KEY twice from stand by
- »» Move cursor with SHIFT RIGHT KEY to Directory
- »» Press FUNCTION KEY, Press FUNCTION KEY again then Press Shift Right Key to select the number stored under directory 00-99

## ZOOM 2/4 LINE SETTING Aa



 - » Press FUNCTION KEY twice from stand by mode
- » Press SHIFT RIGHT KEY and move cursor to ZOOM



- » Press FUNCTION KEY on Zoom
- » Display will show 2 LINE



- » Press FUNCTION KEY to change 2 or 4 Line
- » Press READ KEY to return to stand by mode



## GENERAL FUNCTIONS

### Message Receiving

If a message is received, the pager will alert with a specific tone according to selection made by user, either: Tone, Music, Vibration, Silent.

### Duplicate Message Receiving

After a message is received, the pager will display  on the right top corner of the LCD. If the same message is received a second time, then "Duplicate Message Indicator"  will be displayed.

### Unread Message Alert



Pager will alert user every 0-9 minutes depending on the programming for any unread messages.

### Backlight Function

Press and hold « READ KEY » for 2 seconds while reading a message. This will automatically turn the backlight on, allowing you to read under dark conditions.

### Low Battery Indicator

Replace battery when the low battery indicator is displayed on the LCD.

### Type of Battery

Use only good quality AAA Alkaline 1.5V battery

### Service

Pager to be serviced only an authorized service agent

## **FCC Compliance and Advisory Statement**

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, according to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by one or more of the following measures:

1. Reorient the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into and outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

Any special accessories needed for compliance must be specified in the instruction manual.

**Warning:** A shielded-type power cord is required in order to meet FCC emission limits and also to prevent interference to the nearby radio and television reception. It is essential that only the supplied power cord be used. Use only shielded cables to connect I/O devices to this equipment.

**CAUTION:** Any changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.