


# DirectAlert Quick Setup Guide

## Components

1. ISTATION Transmitter (With power supply & antenna)
2. Ethernet Cable
3. DB9 Cable (Optional for POS Integration)
4. USB Keyboard (Optional)



## Equipment Setup

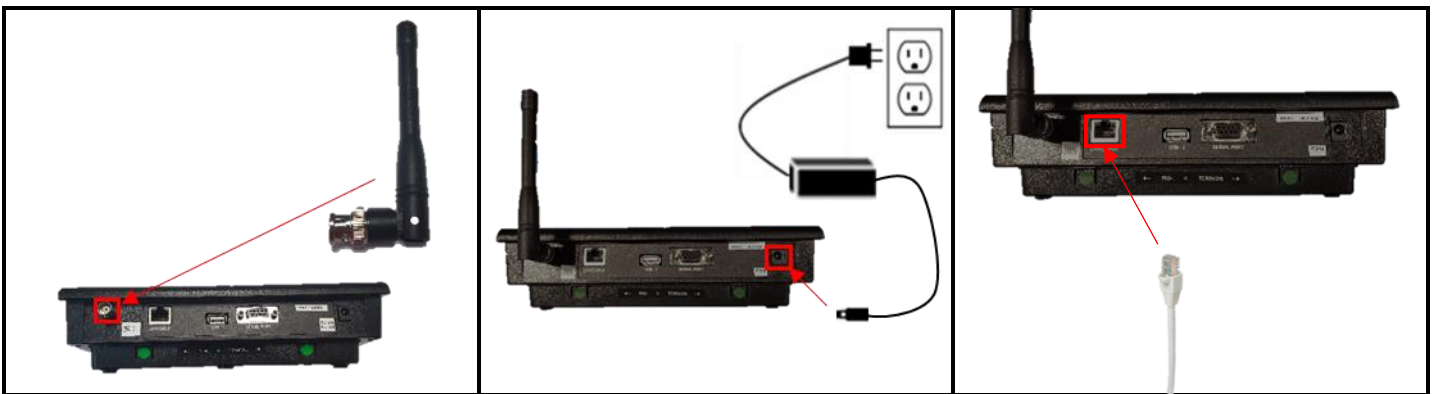

### Step 1


Connect the antenna to the transmitter.  
Twist to lock in place.

### Step 2

Plug the power supply into the transmitter  
and then into a standard 110-240v outlet. **A surge protector is recommended for all Transmitters and Charging Bases.**

### Step 3

Plug one end of the Ethernet cable into the  
back of the transmitter and then the other  
end into your network.

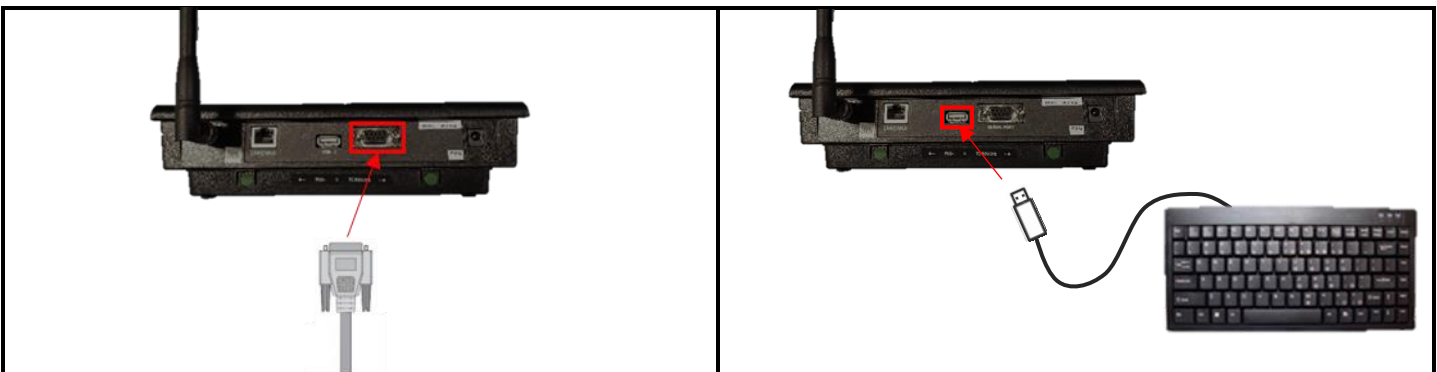

### Step 4

**OPTIONAL (For POS Integration):**  
Connect the serial cable to the serial port on the back of the ISTATION  
and then tighten the screws.

### Step 5

**OPTIONAL:**  
Insert the USB connector from the keyboard into the back of the  
transmitter.

Optional items are not included unless purchased before shipping.

## System Configuration

---

**Please contact your IT department for assistance in setup.**

### To enter Network Programming Mode

1. Press the “**SETUP**” button.
2. Enter the password “**6629**” followed by “**ENTER**”.
3. Once the password is accepted, the display will show “**Admin Setup**”
4. Use the following buttons to configure your transmitter.
  - “**\*/MENU**” key to scroll through the different menu options.
  - “**#/SELECT**” key to toggle between options.
  - “**ENTER**” to edit the menu and save the new settings.
  - “**CANCEL**” to exit the system programming menu.

### Static IP Setup

To enter the IP Address provided by your IT, follow the procedure below:

1. At the “**IP Address**” screen, press the “**ENTER**” key.
2. Enter the twelve-digit IP, then press the “**ENTER**” key.
3. Press the “**CANCEL**” key to exit the system programming menu or “**\*/MENU**” to scroll to the next menu.

### DNS Setup

To enter the DNS Server IP provided by your IT, follow the procedure below:

1. At the “**DNS Server IP**” screen, press the “**ENTER**” key.
2. Enter the twelve-digit IP, then press the “**ENTER**” key.
3. Press the “**CANCEL**” key to exit the system programming menu or “**\*/MENU**” to scroll to the next menu.

### Client Code and Token Setup

If you need your Client Code and Token, please contact support at 800-321-6221.

If you already have the Client Code and Token for your account, follow the procedure below:

1. At the “**SMS Text Messaging**” screen, press the “**#/SELECT**” key to turn “**ON**”.
2. Press the “**ENTER**” key.
3. At the “**SMS Company Code**” screen, use the keyboard to enter your 6-digit Client Code, then press “**ENTER**”.
4. At the “**SMS Company Token**” screen, use the keyboard to enter your 15-digit Token, then press “**Enter**”.
5. Press the “**CANCEL**” key to exit the system programming menu or “**\*/MENU**” to scroll to the next menu.

## System Operation

---

### Sending a direct SMS Message from your transmitter:

To send a direct SMS Message enter the 10-digit phone number on the transmitter, then press “**ENTER**”. Use the keyboard to type the desired message, then press the “**ENTER**” key. For example, type “**8003216221-ENTER-Your table is ready. -ENTER**” to send the phone number 800-321-6221 the message Your table is ready.