


Digital Coaster Reprogramming Guide

To change the pager number, follow the procedure below.

1. Place the pager on the charging base. Be sure that the charging power supply is plugged in and the charging light is ON.
2. Using your transmitter, enter the OLD pager number. Press Enter.
 - a. If the display shows “Pre-set Message (1-4)”, press the enter key again.
3. In the “Enter Message” window, press the * (star) key followed by the **NEW 3-digit** number.
 - a. Enter a **3-digit number** or the pager will not reprogram.
 - i. Example: 1 will be equivalent to “001,” 2 will be “002,” “16” will be “016” and so on.
4. Press the “Send” key. The pager should now display the new pager number.
 - a. For example, to change pager number 8 to pager number 20
 - i. Press: **8, Enter, *, 020, Send** >>> for transmitter with no Pre-set Message Option
 - ii. Press: **8, Enter, Enter, *, 020, Send** >>> for transmitter with Pre-set Message Option

Charging light

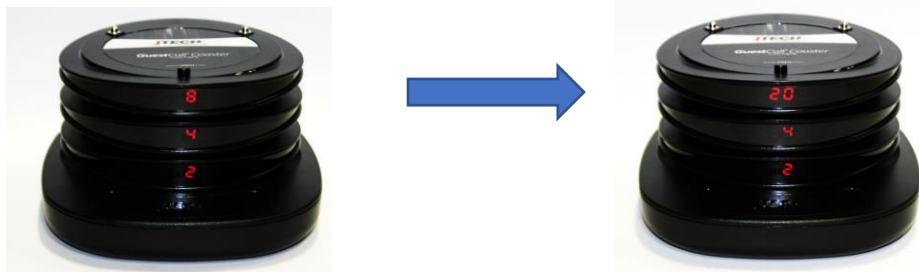

Note: You cannot reprogram pagers with number decals!

Questions? Call 800-321-6221 or email wecare@jtech.com.