

GuestCall® Paging w/ IQ Pagers

Quick Setup Guide

 
Components

- JTECH Transmitter
Applies to models: IQ Base, NEO, IStation
- IQ Pagers
- IQ Charger




Step 1

Lock the antenna to the connector on the transmitter by placing the antenna on the connector and twisting left to lock in place.

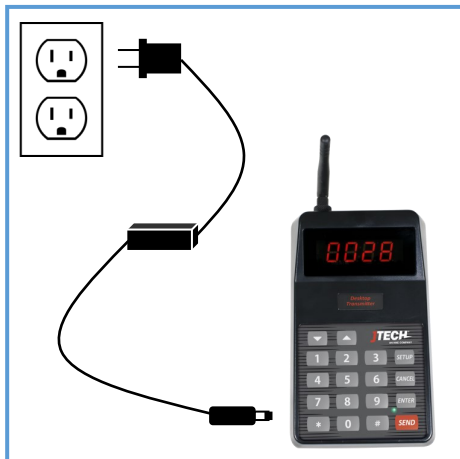

Step 2

 Plug the power supply into the transmitter and then into a standard 110-240v outlet. A surge protector is recommended.

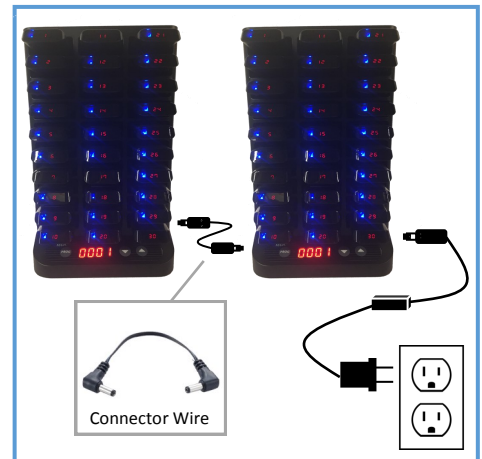


Step 3

Compile charger bases and connector wires if applicable. Plug charger power supply into charger and then into a standard outlet. Surge protection is recommended for charging bases.



Step 4

 
Add pagers to slots. You will see a BLUE light on each pager. This light indicates the charging status.

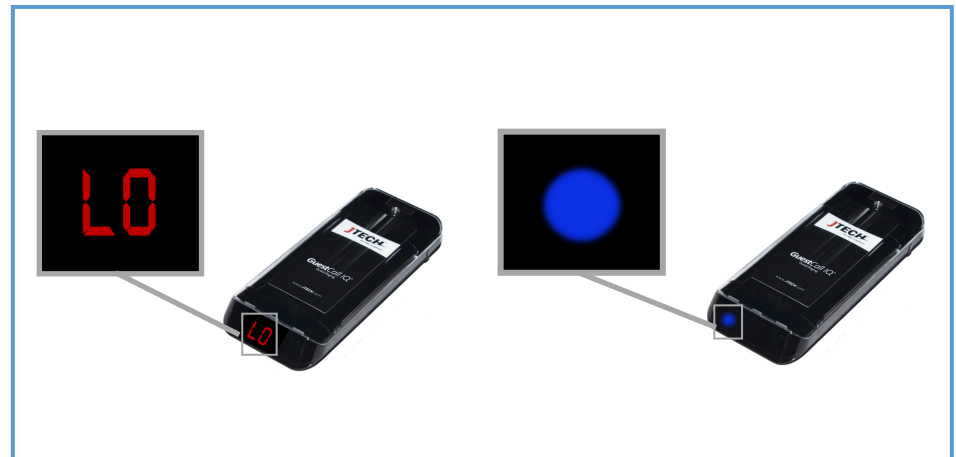

- 'LO' on the number display: Battery is below 20% charged and SHOULD NOT be used.
- **Flashing BLUE:** Pager is charging and CAN BE used.
- **Solid BLUE:** Pager is fully charged.
- Allow 4 hours for a complete charge of the pagers.

Using your GuestCall Paging System

 1. Remove a IQ Pager from the charger.
2. The pager will go through a test page.
3. Hand the pager to the guest, letting them know the pager will go off when they have been paged.

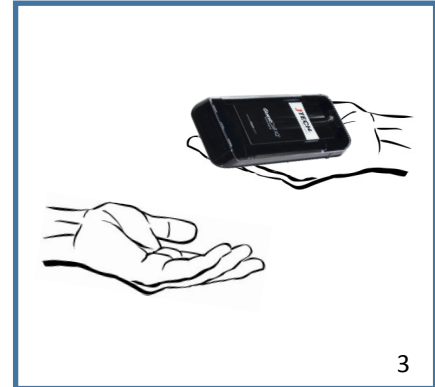

Paging a Guest

 
1. Enter in the 1 to 3-digit pager number into the transmitter and press SEND.
2. The pager will alert until it is returned to the charger.



Program Pagers

The pagers will be set to the programming applied prior to shipping as well as renumbering the pagers into sequential order.

- > First position, indicated by the location with the ☐, will be renumbered to the number shown on the charger's display
- > Pagers will renumber based on their position in the charger, image at right.
- > To activate the programming cycle, return all pagers back to charging base.
 - PRESS and HOLD the PROG button on the charger for eight (8) seconds.
 - Charger will beep twice indicating that the cycle has begun.
 - You will see the pagers perform several functions as it applies each of the pager configurations. When the process is complete, all pagers will be in sequential order.
- > NOTE: Replacements for lost pages will arrive with the number 888 on the display.

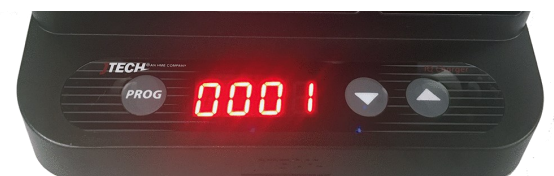

Additional information available at www.jtech.com/manuals.



www.jtech.com | wecare@jtech.com