

EW-7438RPn Mini



Edimax Technology Co., Ltd.

No.3, Wu-Chuan 3rd Road, Wu-Gu, New Taipei City 24891, Taiwan Email: support@edimax.com.tw

Edimax Technology Europe B.V.

Fijenhof 2, 5652 AE Eindhoven, The Netherlands Email: support@edimax.nl

Edimax Computer Company

3350 Scott Blvd., Bldg.15 Santa Clara, CA 95054, USA Live Tech Support: 1(800) 652-6776 Email: support@edimax.com

CONTENTS

Ι.	Product	Information	1
	I-1.	Package Contents	1
	I-2.	System Requirements	1
	I-3.	LED Status	1
	I-4.	Hardware Overview	3
	I-5.	Safety Information	4
II.	Installati	ion	5
	II-1.	Wi-Fi Extender Mode	8
	II-2.	Wi-Fi Adapter/Bridge Mode	
	II-3.	Wi-Fi Access Point Mode	
	II-4.	WPS Setup	20
	II-5.	Reset to Factory Default Settings	22
III.	Browser	Based Configuration Interface	23
	III-1.	Login	23
	III-2.	Save Settings	25
	III-3.	Main Menu	26
IV.	Extende	r Mode	27
	IV-1.	Home	27
	IV-2.	iQ Setup	
	IV-3.	WPS Settings	
	IV-4.	Advanced Setting	
	IV-4-1.	WLAN 2.4GHz Security	
	IV-4-2.	Time Settings	
	IV-4-3.	Scheduling Setting	35
	IV-4-4.	Administration Utility	
	IV-4-5.	Configuration Tools	
v.	Wi-Fi Ad	apter/Bridge Mode	42
	V-1.	Home	42
	V-2.	iQ Setup	44
	V-3.	Wireless Advanced	45
	V-3-1.	Time Settings	46
	V-3-2.	Administration Utility	47
	V-3-3.	Configuration Tools	
VI.	Access P	oint Mode	52

	I-1.	Home	52
V	I-2.	iQ Setup	54
V	I-3.	Basic Settings	55
V	I-4.	WPS Settings	58
V	I-5.	Wireless Advanced	60
V	I-5-1.	Security	62
V	I-5-1-1.	Disable	63
V	I-5-1-2.	WEP	63
V	I-5-1-3.	WPA pre-shared key	64
V	I-5-1-4.	WPA RADIUS	65
V	I-5-2.	MAC Filtering	66
V	I-5-3.	Time Settings	68
V	I-5-4.	Scheduling Setting	69
V	I-5-5.	Administration Utility	71
V	I-5-6.	Configuration Tools	73
VII. E	diRange /	Арр	77
V	II-1.	Login	77
V	II-2.	Main Menu	79
V	II-3.	Parental Control	80
V	II-4.	Wi-Fi Scheduling	80
V	II-5.	Admin	81
VIII.	Appen	dix	82
V	III-1.	Configuring your IP address	02
1.41			82
V	III-1-1.	How to check that your computer uses a dynamic IP address	
	-1-1. -1-1-1.		83
VI		How to check that your computer uses a dynamic IP address	83 83
VI VI	III-1-1-1.	How to check that your computer uses a dynamic IP address Windows XP	83 83 85
VI VI VI	-1-1-1. -1-1-2.	How to check that your computer uses a dynamic IP address Windows XP Windows Vista	83 83 85 87
VI VI VI VI	-1-1-1. -1-1-2. -1-1-3.	How to check that your computer uses a dynamic IP address Windows XP Windows Vista Windows 7	83 83 85 87 90
VI VI VI VI	-1-1-1. -1-1-2. -1-1-3. -1-1-4.	How to check that your computer uses a dynamic IP address Windows XP Windows Vista Windows 7 Windows 8	83 85 87 90 94
VI VI VI VI VI	-1-1-1. -1-1-2. -1-1-3. -1-1-4. -1-1-5.	How to check that your computer uses a dynamic IP address Windows XP Windows Vista Windows 7 Windows 8 Mac OS	83 85 87 90 94 96
VI VI VI VI VI VI	-1-1-1. -1-1-2. -1-1-3. -1-1-4. -1-1-5. -1-2.	How to check that your computer uses a dynamic IP address Windows XP Windows Vista Windows 7 Windows 8 Mac OS How to modify the IP address of your computer	83 85 87 90 94 96 96
VI VI VI VI VI VI VI	-1-1-1. -1-1-2. -1-1-3. -1-1-4. -1-1-5. -1-2.	How to check that your computer uses a dynamic IP address Windows XP Windows Vista Windows 7 Windows 8 Mac OS How to modify the IP address of your computer Windows XP	83 85 90 94 96 96 98
VI VI VI VI VI VI VI VI	-1-1-1. -1-1-2. -1-1-3. -1-1-4. -1-1-5. -1-2. -1-2-1. -1-2-2.	How to check that your computer uses a dynamic IP address Windows XP Windows Vista Windows 7 Windows 8 Mac OS How to modify the IP address of your computer Windows XP Windows XP	83 85 90 94 96 96 98 99
	 III-1-1-1. III-1-1-2. III-1-1-3. II-1-1-4. III-1-1-5. III-1-2. III-1-2-1. III-1-2-2. III-1-2-3. 	How to check that your computer uses a dynamic IP address	83 85 90 94 96 96 98 99 99 99
	 III-1-1-1. III-1-1-2. III-1-1-3. III-1-1-4. III-1-1-5. III-1-2. III-1-2-1. III-1-2-2. III-1-2-3. III-1-2-4. 	How to check that your computer uses a dynamic IP address	83 85 87 90 94 96 96 96 98 99 104 108
VI VI VI VI VI VI VI VI VI VI VI	 III-1-1-1. III-1-1-2. III-1-1-3. II-1-1-4. III-1-1-5. III-1-2.1. III-1-2-2. III-1-2-3. III-1-2-4. III-1-2-5. 	How to check that your computer uses a dynamic IP address	83 85 87 90 94 96 96 96 96 98 99 104 108 111
	 III-1-1-1. III-1-1-2. III-1-1-3. II-1-1-4. III-1-1-5. III-1-2-1. III-1-2-2. III-1-2-3. III-1-2-4. III-1-2-5. III-1-3. 	How to check that your computer uses a dynamic IP address	83 85 87 90 94 96 96 96 98 99 104 108 111 111
	 III-1-1-1. III-1-1-2. III-1-1-3. II-1-1-4. III-1-2. III-1-2-1. III-1-2-3. III-1-2-4. III-1-2-5. III-1-3. III-1-3-1. 	How to check that your computer uses a dynamic IP address	83 85 87 90 94 96 96 96 96 99 104 108 111 111

VIII-1-4-2.	Windows 8	
VIII-1-4-3.	Mac	
VIII-2.	Connecting to a Wi-Fi network	
VIII-3.	Troubleshooting	
VIII-4.	Glossary	

I. Product Information

I-1. Package Contents



- EW-7438RPn Mini
- CD with multi-language QIG & user manual
- Quick installation guide (QIG)
- Access key card

I-2. System Requirements

- Wi-Fi extender/Wi-Fi bridge mode: Existing 2.4GHz wireless network
- Access point mode: Cable/DSL modem router
- Computer with 2.4GHz 802.11/b/g/n Wi-Fi adapter, and web browser for software configuration (Internet Explorer 8[°] or above, Google Chrome[°], Firefox[°] or Safari[°] latest version)
- Smartphone setup: iOS 4.3 or Android 4.x and above

I-3. LED Status

LED	Color	Status	Description
Signal		On	Excellent signal Signal strength: 60 – 100%
Strength 2.4GHz	Amber	Slow Flashing	Good signal Signal strength: 40 – 60%
		Quick Flashing	Poor signal Signal strength: 0 – 40%
		Off	No signal detected, disconnected, or in LED off mode

Wi-Fi	Green	Flashing	Transferring data
(î~	Green	Off	Wi-Fi not active or in LED off mode
		On	Extender is on
Power	Green	Flashing	Resetting to factory default settings, or system is booting up
0		Off	Extender is off or in LED off mode
WPS	Green	On	WPS connection established (LED will remain on for 5 minutes to indicate a successful connection)
		Flashing	WPS in progress (waiting for another WPS device)
		Off	No WPS in progress or in LED off mode
LAN		On	LAN port connected
	Green	Flashing	LAN activity (transferring or receiving data)
28 83		Off	LAN port not connected

I-4. Hardware Overview



1. LEDs

2. Ethernet Port

3. WPS/Reset Button

I-5. Safety Information

In order to ensure the safe operation of the device and its users, please read and act in accordance with the following safety instructions.

- 1. The device is designed for indoor use only; do not place it outdoors.
- 2. Do not place the device in or near hot/humid places, such as a kitchen or bathroom.
- 3. Do not pull any connected cable with force; carefully disconnect it from the EW-7438RPn Mini.
- 4. Handle the device with care. Accidental damage will void the warranty of the device.
- 5. The device contains small parts which are a danger to small children under 3 years old. Please keep the device out of reach of children.
- 6. Do not place the device on paper, cloth, or other flammable materials. The device may become hot during use.
- 7. There are no user-serviceable parts inside the device. If you experience problems with the device, please contact your dealer of purchase and ask for help.
- 8. The device is an electrical device and as such, if it becomes wet for any reason, do not attempt to touch it without switching the power supply off. Contact an experienced electrical technician for further help.
- 9. If you smell burning or see smoke coming from the EW-7438RPn Mini then unplug the device immediately, as far as it is safely possible to do so. Call your dealer of purchase for help.
- 10. This product should work for a long time, and provide round-the-clock Wi-Fi service.

The EW-7438RPn Mini has three different operating modes which you can choose depending on your network requirements. Each mode is described below:

Wi-Fi Extender	The device connects wirelessly to your existing network
WI-FI LALEIIGEI	and repeats the wireless signal.
	Location: The best location for your extender is roughly
	in the middle between your existing wireless
	router/access point and the dead zone. The extender
	needs to receive a good Wi-Fi signal from your
	router/access point.
Wi-Fi Adapter/	The device connects to an Ethernet device such as a
Wi-Fi Bridge	games console or smart TV via Ethernet cable and
	provides wireless Internet access for that device.
	Location: Within Wi-Fi coverage, close to your wired
	network device.
Wi-Fi Access	The device connects to an existing router via Ethernet
Point	cable and provides wireless Internet access for your
	network devices.
	Location: Connected to your router via Ethernet cable.

1. Plug the EW-7438RPn Mini into a power socket.



2. The green power LED will flash while the system is booting up. The device is ready when the green power LED displays on.



3. Use a Wi-Fi device (e.g. computer, tablet, smartphone) to search for a Wi-Fi network with the SSID **EdimaxEXT.Setup** ** and connect to it.



If you are using a computer, please disconnect any Ethernet cables. For mobile devices, iOS 4.3 or Android 4.x or above is required.

The last two characters of the SSID (Edimaxext.Setup**) will be unique numbers according to your device e.g."EdimaxEXT.Setup c1". Your unique SSID is displayed on the product label along with the included access key card.



Default Wi-Fi Extension SSID:

Wi-Fi Extende

User Name: admin

Note: Please keep this card for future use.

Password: 1234

4. Open a web browser and if you do not automatically arrive at the "Get Started" screen shown below, enter the URL *http://edimaxext.setup* and click "Get Started" to begin the setup process.



If you cannot access http://edimaxext.setup, please make sure your computer is set to use a dynamic IP address. For more information please refer to VIII-1. Configuring your IP address.

5. Select an operating mode for your EW-7438RPn Mini.

	Change Mode The device has three different operating modes. Please select a mode below.				
Internet	Existing Router	Wireless Device	Wi-Fi Extender: The device connects wirelessly to your existing network and repeats the wireless signal.		
Internet	Existing Router	Wired Device	Wi-Fi Adapter/Wi-Fi Bridge: The device connects to an Ethernet device such as a games console or smart TV via Ethernet cable and provides wireless Internet access for that device.		
Internet	Existing Wired Router	Wireless Device	Wi-Fi Access Point: The device connects to an existing router via Ethernet cable and provides wireless Internet access for your network devices.		

II-1. Wi-Fi Extender Mode

 Please read the on screen instructions about selecting a good location for your wireless extender and then click "NEXT" to continue. You can check your signal strength on the next page.



2. Select your Wi-Fi network from the list.

2.4GHz	SSID	Signal Strengt
0	Edimax2.4GHz	100%
0	MIS-Jacky	100%
0	PP-6476ND-2.4G	100%
0	OBM-Dlink817_2.4G	100%
0	!WAP1750_2.4G	100%
0	EdimaxHQ	100%
0	BWEDIMAX	84%
0	123	76%
0	TS_IP_Surveillance	76%
0	2g01-000026	76%
0	EdimaxHQ	76%
0	Connie_GGGGG	76%
0	EDIMAX_2.4G_EDF10E	68%
0	605L	68%
0	XXXXXXX	68%
0	Edimax_2.4G_EDF2B0	68%
0	logitec2nd69	60%
0	TS_BR-6208AC_2.4G_12EX	60%

A hidden SSID is one that is not publically displayed when scanning for available Wi-Fi networks. Hidden SSID settings are

usually available in the configuration options of your router. If you use a hidden SSID , check the "Connect to a hidden network" box and enter the information manually.

Connect to root AP's SSID	
Extender device SSID	Hide Extender SSID
Encryption	Disable -
Guest Network	⑦ Enable

3. Select whether to use the same SSID ("Duplicate from root AP") or a different SSID ("User Defined") for your extender, and enter your existing Wi-Fi password. Click "Next" to continue.

For "User Defined" the Wi-Fi extender's default wireless network 🛃 name (SSID) is your existing router/access point's SSID + 2EX. For example if your router's SSID is "Your SSID" then the EW-7438RPn Mini 's SSID will be "Your SSID_2EX". You can change the extender's SSID if you wish.

Change Basic Setting				
Wi-Fi Network Name	Duplicate from root AP User Defined : Edimax2.4GHz			
Wi-Fi Network Password (Your existing wireless security key)	abcd1234			
Guest Network	O Enable			
	BACK NEXT			



You can also enable an additional guest Wi-Fi network. A guest Wi-Fi network is another SSID with a different name and password. Select "Enable" and enter a guest network name and password if you wish.

Guest Network	Enable Obisable
Guest Network Name	
Guest Wi-Fi Password	Enable V



If your Wi-Fi extender fails to connect (below) to your existing router/access point, click the "BACK" button and ensure you entered the correct Wi-Fi network password.



If your Wi-Fi extender cannot obtain an IP address (below) from your existing router/access point then click the "Static IP" button to assign an IP address to the extender. For more guidance please refer to the <u>VIII-1. Configuring your IP address</u>.



5. When the connection test is complete, click "Apply" to restart the extender.



6. Please wait a moment until the extender is ready.



7. A final congratulations screen will indicate that setup is complete. The EW-7438RPn Mini is working and ready for use - the amber signal strength LED should display on or flash depending on your signal strength. To download the EdiRange app, scan the QR code.





8. Please close the browser window. You can now connect to the **extender's new SSID** on a wireless device within range such as a computer, smartphone or tablet.

The password for your Wi-Fi extender's SSID is the same as for your router's SSID.

For more advanced configurations, use the browser based configuration interface (refer to <u>III. Browser Based</u> <u>Configuration Interface</u>).



II-2. Wi-Fi Adapter/Bridge Mode

1. Select your Wi-Fi network from the list and enter the security key/password.

iQ Setup					
	Please connect this device to one of the following Wi-Fi networks.				
2.4GHz	SSID	Signal Strength			
0	Edimax2.4GHz	100%			
0	MIS-Jacky	100%			
0	PP-6476ND-2.4G	100%			
0	OBM-Dlink817_2.4G	100%			
0	!WAP1750_2.4G	100%			
0	EdimaxHQ	100%			
0	BWEDIMAX	84%			
0	123	76%			
0	TS_IP_Surveillance	76%			
0	2g01-000026	76%			
0	EdimaxHQ	76%			
0	Connie_GGGGG	76%			
0	EDIMAX_2.4G_EDF10E	68%			
0	605L	68%			
0	XXXXXXX	68%			
0	Edimax_2.4G_EDF2B0	68%			
0	logitec2nd69	60%			
0	TS_BR-6208AC_2.4G_12EX	60%			
Connect to a hidden network BACK Refresh					

If the Wi-Fi network you wish to connect to does not appear, try clicking "Refresh".

Do not check "Connect to a hidden network" **unless you wish to** connect to a hidden SSID instead.



2. Enter the security key/password for your existing Wi-Fi.

Change Basic Setting				
Wi-Fi Network Password (Your existing wireless security key)	abcd1234		×	
	BACK	NEXT		

3. Please wait while the EW-7438RPn Mini tests the connection.

2.4GHz Connect	ion Test
50%	



If your Wi-Fi extender fails to connect (below) to your existing k router/access point, click the "BACK" button and ensure you entered the correct Wi-Fi network password.





If your Wi-Fi extender cannot obtain an IP address (below) from your existing router/access point then click the "Static IP" button to assign an IP address to the extender. For more guidance please refer to the VIII-1. Configuring your IP address.



4.When the connection test is complete, click "Apply" to restart the extender.



5.Please wait a moment until the EW-7438RPn Mini is ready.



6. A final congratulations screen will indicate that setup is complete. *Please close the browser window.*



- **7.** The EW-7438RPn Mini is working and ready for use as a wireless bridge. Use an Ethernet cable to connect the EW-7438RPn Mini to the Ethernet port on your network device.
- **8.**Ensure the EW-7438RPn Mini is on and then use your network device to connect to your network as usual.

II-3. Wi-Fi Access Point Mode

1. Connect the LAN port of your EW-7438RPn Mini to the LAN port of your existing router using an Ethernet cable, and then click "Next".



2. Click "Next" to continue.



3. Select "Obtain an IP address automatically" or "Use the following IP address" for your EW-7438RPn Mini. If you are using a static IP, enter the IP address, subnet mask, default gateway and DNS. Click "Next" to proceed to the next step.

"Obtain an IP address automatically" is the recommended setting for most users. For more guidance on static IP addresses, please refer to <u>VIII-1. Configuring your IP address.</u>

Management IP			
Please set the IP address of the access point. If you are using a static IP, enter the IP address, subnet mask and default gateway. Click Next to proceed to the next step.			
Obtain an IP address automatically.			
O Use the following IP address.			
IP Address : 192 . 168 . 9 . 2			
Subnet Mask : 255 . 255 . 255 . 0			
Gateway Address :			
Back NEXT			

4. Enter a name and password for your wireless network, then click "Next" to continue.

Change Basic Setting	
Wi-Fi Network Name	EdimaxAPd7
Wi-Fi Network Password	Enabled abcd1234
Enable Guest Network	🗆 Yes 🗹 No
BACK NEXT	



You can also enable an additional guest Wi-Fi network. A guest 😬 Wi-Fi network is another SSID with a different name and password. Select "Enable" and enter a guest network name and password if you wish.

Guest Network	Enable O Disable
Guest Network Name	
Guest Wi-Fi Password	Enable V

5. A summary of your configuration will be displayed, as shown below. Check that all of the details are correct and then click "Apply" to restart the EW-7438RPn Mini.

Settings saved successfully!		
Please click APPLY to restart the system and make the changes take effect.		
Wi-Fi Network Name: Wi-Fi Network Password:	EdimaxAPd7 abcd1234	
BACK	APPLY	

6. Please wait a moment until the EW-7438RPn Mini is ready.



7. A final congratulations screen will indicate that setup is complete. *Please close the browser window.* The EW-7438RPn Mini is working and ready for use. You can now connect to the device's new SSID.

Congratulations.
ou have successfully completed the configuration. You can close this browser window and reconnect to this AP device with new wireless security key now.
Wi-Fi Network Name : EdimaxAPd7 Wi-Fi Network Password : abcd1234

II-4. **WPS Setup**

The WPS button is a quick and easy method to establish a secure connection between your EW-7438RPn Mini and wireless router/access point.

If your wireless device supports WPS (Wi-Fi Protected Setup) then you can use this method to setup the EW-7438RPn Mini in extender or adapter/bridge mode, instead of the setup wizard described in **II. Installation.**



Please do not hold the WPS button for too long – this may reset vour device.

1. Press the WPS button on your **wireless router/access point** for the correct length of time to activate its WPS.



Please check the instructions for your wireless device for how long you need to hold down its WPS button to activate WPS.



Within two minutes, press the WPS button on the EW-7438RPn Mini for 2 – 5 seconds to activate WPS. The green WPS LED will flash to indicate that WPS is active.



3. The devices will establish a connection. The **green** WPS LED on the EW-7438RPn Mini will display **on** for 5 minutes to indicate a successful connection.

II-5. Reset to Factory Default Settings

If you experience problems with your extender or if you want to change the extender to a different operating mode, you can reset the device back to its factory settings. This resets **all** settings back to default.

- **1.** Press and hold the WPS/Reset button for at least 10 seconds and release when the green power LED is flashing.
- 2. Wait for the extender to restart. The extender is ready for setup when the green power LED displays on.



III. Browser Based Configuration Interface

After you have setup the EW-7438RPn Mini as detailed in <u>II. Installation</u> or the included **Quick Installation Guide**, you can use the browser based configuration interface to configure advanced settings.



III-1. Login

 To access the browser based configuration interface enter *http://edimaxext.setup* into the URL bar of a browser on a network device connected to the same Wi-Fi network as the EW-7438RPn Mini.



2. You will be prompted for a username and password. The default username is "admin" and the default password is "1234".

Windows Security
The server edimaxext.setup at Default Name:admin Password:1234 requires a username and password.
Warning: This server is requesting that your username and password be sent in an insecure manner (basic authentication without a secure connection).
admin Remember my credentials
OK Cancel

3. You will arrive at the "Status and Information" screen. Use the menu down the left side to navigate.

EDIMAX	En	glish 🗸
• Home	Status and Information	^
iQ SetupBasic Settings	You can check the device's MAC address, runtime code, hardware version, and network status below.	
WPS Setting	System	
	Current Time 9:07:32 2014/6/24	
Advanced Setting	Uptime 0Day:0h:1m:0s	
	Hardware Version Rev. v3	
	Firmware version Upgrade Firmware	
	Mode AP	
	Wireless Configuration	
	SSID EdimaxAPd7	
	Channel Number 2	
	Security WPA-Shared Key	
	BSSID (MAC) 80:1F:02:FD:D7:D7	
	Associated Clients 1 Show Active Clients	
	State Connected	
	LAN Configuration	
	IP Address 192.168.2.100	
	Subnet Mask 255.255.0	
	Default Gateway 192.168.2.1	•

III-2. Save Settings

1. After you make any changes to the EW-7438RPn Mini's settings, please click "APPLY".

 Home iQ Setup Basic Settings WPS Setting 	Basic Settings This page allows you to define SSID and channel number for the wireless connection. These parameters are used for wireless stations to connect to the access point.
Advanced Setting	Mode AP V
	Band 2.4 GHz (B+G+N) V
	Main SSID EdimaxAPd7 Multiple SSID
	AP Isolation (Client user isolation)
	Channel Number Auto V
	Associated Clients Show Active Clients
	Cancel

 Then, select "CONTINUE" to save changes but not apply them yet, or select "APPLY" to restart the EW-7438RPn Mini and bring the changes into effect.

Settings saved successfully!

Click CONTINUE to continue other configuring settings, or click APPLY to restart the system and make the changes take effect.

CONTINUE

The EW-7438RPn Mini needs to restart in order to apply and bring any changes into effect. Use the "CONTINUE" button to make several changes and apply them all together in one restart.

III-3. Main Menu

The main menu displays different options depending on your device's operating mode. Please refer to the following chapters for guidance on each mode.



IV. Extender Mode

IV-1. Home

Home

The "Status and Information" page displays basic system information about the device, arranged into

three categories: system, wireless configuration & LAN configuration.



Screenshots displayed are examples. The information shown on your screen will vary depending on your configuration.

Status and Information

You can check the device's MAC address, runtime code, hardware version, and network status below.

System		
Current Time	13:22:55 2014/6/23	
Uptime	0Day:0h:4m:4s	
Hardware Version	Rev. v3	
Firmware version	1.06 Upgrade Firmware	
Mode	Range Extender	
Wireless Configuration		
SSID	Edimax2.4GHz_2EX	
Channel Number	10	
Security	WPA-Shared Key	
BSSID (MAC)	80:1F:02:FD:D7:D7	
Associated Clients	0 Show Active Clients	
State	Connected	
Signal Strength		100%
LAN Configuration		
IP Address	192.168.2.100	
Subnet Mask	255.255.255.0	
Default Gateway	192.168.2.1	
MAC Address	80:1F:02:FD:D7:D7	

Current Time	Current time and date.
Uptime	Displays the total time since the device was turned on.
Hardware Version	Displays the hardware version.
Firmware Version	Displays the firmware version.
Mode	Displays the operating mode.
SSID	Displays the EW-7438RPn Mini's SSID. The
	SSID is the name used to identify a wireless
	network.
Channel Number	Displays the current wireless channel number.
Security	Displays the current wireless security setting.
BSSID (MAC)	Displays the device's BSSID. The BSSID
	identifies the EW-7438RPn Mini in the
	network, and is the same as the device's MAC
	address.
Associated Clients	Displays the number of clients connected to
	the EW-7438RPn Mini. Click "Show Active
	Clients" to display a new window showing
	information about wireless clients.
State	Displays the current connection status of the
	EW-7438RPn Mini.
Signal Strength	Displays the signal strength for the specified
0	SSID.
IP Address	Displays the IP address of this device.
Subnet Mask	Displays the subnet mask of the IP address.
Default	Displays the IP address of the default
Gateway	gateway.
MAC address	Displays the device's MAC address. The MAC
	address is a unique, fixed ID for this device, it
	cannot be modified.

IV-2. iQ Setup

iQ Setup

You can run the setup wizard again to reconfigure the basic settings of the device. Please refer to II-1. Wi-Fi Extender Mode Step 2 onwards for guidance.



If you wish to change the operating mode, please reset the EW-7438RPn Mini back to factory default settings.

IV-3. WPS Settings

WPS Setting

Wi-Fi Protected Setup is a simple way to establish connections between WPS compatible devices. When

WPS is activated in the correct manner and at the correct time for two compatible devices, they will automatically connect. PIN code WPS includes the use of a PIN code between the two devices for verification.

The WPS Settings page displays settings for WPS between your extender and a **wireless client.** For WPS Setup between your extender and **router/access point,** please use the WPS button as described in <u>II-4. WPS Setup.</u>

2.4G Wi-Fi Protected Setup Information

WPS Status	Configured
Self PinCode	01902952

Device Configure

Configuration Mode Device is as an AP	Registrar
Configure via Push Button	Start PBC
Input Client PIN Code	Send PIN

WPS Status	Displays "Configured" or "unConfigured" depending on whether WPS and SSID/security settings for the device have been configured or not, either manually or using the WPS button.
Self PIN Code	Displays the WPS PIN code of the device.
Configuration Mode	The configuration mode of the device's WPS setting is displayed here. "Registrar" means the device acts as an access point for a wireless client to connect to and the wireless client(s) will follow the device's wireless settings.
Configure via Push Button	Click "Start PBC" (Push-Button Configuration) to activate WPS on the access point. WPS will be active for 2 minutes.
Input Client PIN Code	Enter the wireless client's PIN code here and click "Start PIN" to activate PIN code WPS. Refer to your wireless client's documentation if you are unsure of its PIN code.

IV-4. Advanced Setting

Advanced Setting

- WLAN 2.4GHz Security
- Time Settings
- Scheduling setting
- Administration Utility
- Configuration Tools

In "Advanced Setting" you can adjust the power output of the EW-7438RPn Mini. The submenu also allows you to configure security, time settings and scheduling settings as well as various administrative and management functions.

Advanced Setting

Advanced functions of the extender can be configured below.

Tx Power 100 % 🔻

Tx Power	You can adjust the level of wireless output power as a percentage. Depending on the size of your location and required coverage, you may not require 100% output power. Reducing the output power can enhance security since your Wi-Fi signal will not extend to potential malicious/unknown users in
	distant areas.

IV-4-1. WLAN 2.4GHz Security

Broadcast SSID	Inable O Disable
Device SSID	Edimax2.4GHz_2EX
Security Type	WPA pre-shared key
Security Key	abcd1234
Guest Network	Enable Disable Disable

Guest Network Name	Guest Network
Guest Wi-Fi encryption	WPA pre-shared key -
WPA Unicast Cipher Suite	Disable WPA pre-shared key
Pre-Shared Key Format	Passphrase -
Guest Wi-Fi Password	

Broadcast SSID	Enable or disable SSID broadcast. When enabled, the SSID will be visible to clients as an available Wi-Fi network. When disabled, the SSID will not be visible as an available Wi-Fi network to clients – clients must manually enter the SSID in order to connect. A hidden (disabled) SSID is typically more secure than a visible (enabled) SSID. WPS (Wi-Fi Protected Setup) is also disabled when SSID broadcast is disabled.			
Device SSID	This is the name of your Wi-Fi network for identification, also sometimes referred to as "SSID". The SSID can consist of any combination of up to 32 alphanumerical characters.			
Security Type	The security/encryption type of your EW-7438RPn Mini's wireless network is displayed here. The security/encryption type is the same as your existing router/access point.			
Security Key	This is the security key for your EW-7438RPn			
	Mini.			
--------------------	---	--	--	--
Guest Network	You can also enable an additional guest Wi-Fi			
	network. A guest Wi-Fi network is another			
	SSID with a different name and password.			
	Select enable or disable.			
Guest Network	Enter a name (SSID) for your guest Wi-Fi			
Name	network.			
Guest Wi-Fi	Select whether to disable encryption for your			
Encryption	guest Wi-Fi or use WPA pre-shared key			
	encryption.			
WPA Unicast Cipher	WPA2(AES) is selected automatically and is			
Suite	the most secure type.			
Pre-Shared Key	Choose a format for your pre-shared key			
Format	(Wi-Fi password). Select from "passphrase"			
	(any alphumeric characters 0-9 a-z A-Z) or			
	"Hex" (limited to characters 0-9 a-f A-F).			
Guest Wi-Fi	Enter or modify the password for your guest			
Password	Wi-Fi network here.			

IV-4-2. Time Settings

Time Zone

Set the time zone of the extender by synchronizing with Network Time Protocol server, the time will be used for Wi-Fi scheduling function.

Set Time Zone	(GMT+08:00)Taipei -	
Time Server Address	pool.ntp.org -	
Daylight Savings	Enable Function January ▼ 1 ▼ January ▼ 1 ▼	

Set Time Zone	Select the time zone of your country or			
	region.			
Time Server Address	The extender supports NTP (Network Time			
	Protocol), select a time server from the drop			
	down menu.			
Daylight Savings	If your country/region uses daylight saving			
	time, please check the "Enable Function"			
	box, and select the start and end date.			

IV-4-3. Scheduling Setting

Scheduling setting

Scheduling function can be configured below for specific service.

Schedule Table (Up to 10 sets) : 🛛 💿 Enable 💿 Disable				
NO.	Service	Schedule description	Schedule	Select
1	Wireless off		Edit	Delete

Add

Cancel	APPLY
--------	-------

Add	Click to add a new schedule in a new window (see below).
Edit	Edit an existing schedule in a new window.
Delete	Delete the specified schedule.

Add

When you click "Add" to add a new schedule, a new window will open as shown below:

Service : Wireless off 🔻	Schedule description :		
	Start Time (hh.mm)	End Time (hh.mm)	Select
Sunday	0 • : 0 •	0 • : 0 •	
Monday	0 • : 0 •	0 • : 0 •	
Tuesday	0 • : 0 •	0 • : 0 •	
Wednesday	0 • : 0 •	0 • : 0 •	
Thursday	0 - : 0 -	0 • : 0 •	
Friday	0 • : 0 •	0 • : 0 •	
Saturday	0 • : 0 •	0 • : 0 •	
Every day	0 - : 0 -	0 - : 0 -	

Cancel

APPLY

- **1.**Select which function to schedule using the "Service" menu and enter a name for the schedule in the "schedule description" box.
- **2.** Specify a start and end time (hours and minutes) using the drop-down menus for your required day.
- **3.** Select the schedule in the "Select" column and click "APPLY" to save the schedule, or "Back" to cancel and go back to the previous screen.



If you need to use the extender during a scheduled off period, press the WPS/Reset button once to "wake up" the extender and resume Wi-Fi coverage.

IV-4-4. Administration Utility

You can change the password used to login to the browser-based configuration interface here. It is advised to do so for security purposes. You can also configure the EW-7438RPn Mini's IP address.



Please make a note of the new password. In the event that you forget the password and are unable to login to the browser based configuration interface, see <u>II-5</u>. Reset to factory default <u>settings</u> for how to reset the device.

Password Settings

Current Password	
New Password	
Re-Enter Password	

Management IP

O Obtain an IP address automatically		
• Use the following IP address		
IP Address	192.168.9.2	
Subnet Mask	255.255.255.0	
Default Gateway		
DNS		

Current Password	Enter your current password.		
New Password	Enter your new password.		
Confirmed Password	Confirm your new password.		

IP Address	Specify an IP address here. This IP address will	
	be assigned to yourEW-7438RPn Mini.	
Subnet Mask	Input the subnet mask of the new IP address.	
Gateway Address	Input the network's gateway IP address.	
DNS	Enter the DNS address here.	

IV-4-5. Configuration Tools

The "Configuration Tools" menu allows you to backup the EW-7438RPn Mini's settings, restore the settings to a previous version or restore the EW-7438RPn Mini back to its factory default state. You can also upgrade the firmware, reboot the device and export the system log.

Manage Settings

Save the current settings of the device to a .bin file, restore the settings of the device to a previously saved .bin file or reset the device to its factory default settings.

Backup Settings :	Save		
Restore Settings :		Browse	Upload
Restore to Factory Defaults :	Reset		

Backup Settings	Click "Save" to save the current settings on
	your computer as config.bin file.
Restore Settings	Click "Browse" to find a previously saved
	config.bin file and then click "Upload" to
	replace your current settings.
Restore to Factory	Click "Reset" to restore settings to the factory
Default	default. A pop-up window will appear and ask
	you to confirm and enter your log in details.
	Enter your username and password and click
	"Ok". See below for more information.

Upgrade Firmware

You can upgrade the system firmware to a more recent version. You can download the latest firmware from the Edimax website. After the upgrade, the system will restart.

Upgrade Firmware

Upgrade the firmware to the most recent version - it is recommended that you use a wired connection for the procedure.

Browse	CANCEL	APPLY
Construction of the second sec		



Do not unplug or disconnect the device during a firmware upgrade, as this could damage the device. It is recommended that you use a computer for a firmware upgrade.

Browse	Open a new window to locate and select the
	firmware file in your computer.

Reboot

In the event that the router malfunctions or is not responding, then it is recommended that you restart the device.

Reboot

In the event that the device malfunctions or is not responding, you can perform a system reboot. Click on Apply - this will reboot the device, without affecting your existing settings.

APPLY	
-------	--



Rebooting the EW-7438RPn Mini will not affect the current configuration/settings of the device.

Apply	Click "Apply" to reboot the device. A status
	bar will indicate the progress of the reboot
	and you will see a confirmation screen when
	the reboot is complete.

System Log

You can export the system log to a separate file if you require.

System Log

Export system log

Export system log	Click to open a new window and select a
	location to save the log file.

V. Wi-Fi Adapter/Bridge Mode

V-1. Home

Home

The "Status and Information" page displays basic system information about the device, arranged into

three categories: system, wireless configuration & LAN configuration.



Screenshots displayed are examples. The information shown on your screen will vary depending on your configuration.

System		
Current Time	14:12:17 2014/6/23	
Uptime	0Day:0h:1m:17s	
Hardware Version	Rev. v3	
Firmware version	1.06 Upgrade Firmware	
Mode	Wi-Fi Bridge	
Wireless Configuration		
SSID	Edimax2.4GHz	
Channel Number	10	
Security	WPA-Shared Key	
BSSID (MAC)	80:1F:02:FD:D7:D7	
State	Connected	
Signal Strength	100%	
LAN Configuration		
IP Address	192.168.2.100	
Subnet Mask	255.255.255.0	
Default Gateway	192.168.2.1	
MAC Address	80:1F:02:FD:D7:D7	

Current Time	Displays the current time and date.
Uptime	Displays the total time since the device was
	turned on.

V-2. iQ Setup

iQ Setup

You can run the setup wizard again to reconfigure the basic settings of the device. Please refer to II-2. Wi-Fi Adapter/Bridge Mode for guidance.



If you wish to change the operating mode, please reset the EW-7438RPn Mini back to factory default settings.

V-3. Wireless Advanced

Advanced Setting

Time Settings

Administration Utility

Configuration Tools

In "Wireless Advanced" you adjust the power output of the EW-7438RPn Mini. The submenu also allows you to configure time settings and various administrative and management functions.

Advanced Setting

Advanced functions of the extender can be configured below.

Tx Power 100 % -

Tx Power	You can adjust the level of wireless output power as a percentage. Depending on the size of your location and required coverage, you may not require 100% output power. Reducing the output power can enhance security since your Wi-Fi signal will not extend to potential malicious/unknown users in
	distant areas.

V-3-1. Time Settings

Time Zone

Set the time zone of the extender by synchronizing with Network Time Protocol server, the time will be used for Wi-Fi scheduling function.

Set Time Zone	(GMT+08:00)Taipei -	
Time Server Address	pool.ntp.org	
Daylight Savings	Enable Function January ▼ 1 ▼ To	

Set Time Zone	Select the time zone of your country or
	region.
Time Server Address	The extender supports NTP (Network Time
	Protocol), select a time server from the drop
	down menu.
Daylight Savings	If your country/region uses daylight saving
	time, please check the "Enable Function"
	box, and select the start and end date.

V-3-2. Administration Utility

You can change the password used to login to the browser-based configuration interface here. It is advised to do so for security purposes. You can also configure the EW-7438RPn Mini's IP address.



Please make a note of the new password. In the event that you forget the password and are unable to login to the browser based configuration interface, see <u>II-5</u>. Reset to factory default <u>settings</u> for how to reset the device.

Password Settings

Current Password	
New Password	
Re-Enter Password	

Management IP

O Obtain an IP address automatically	
• Use the following IP address	
IP Address	192.168.9.2
Subnet Mask	255.255.255.0
Default Gateway	
DNS	

Current Password	Enter your current password.
New Password	Enter your new password.
Confirmed Password	Confirm your new password.

IP Address	Specify an IP address here. This IP address will
	be assigned to yourEW-7438RPn Mini.
Subnet Mask	Input the subnet mask of the new IP address.
Gateway Address	Input the network's gateway IP address.
DNS	Enter the DNS address here.

V-3-3. Configuration Tools

The "Configuration Tools" menu allows you to backup the EW-7438RPn Mini's settings, restore the settings to a previous version or restore the EW-7438RPn Mini back to its factory default state. You can also upgrade the firmware, reboot the device and export the system log.

Manage Settings

Save the current settings of the device to a .bin file, restore the settings of the device to a previously saved .bin file or reset the device to its factory default settings.

Backup Settings :	Save		
Restore Settings :		Browse	Upload
Restore to Factory Defaults :	Reset		

Backup Settings	Click "Save" to save the current settings on
	your computer as config.bin file.
Restore Settings	Click "Browse" to find a previously saved
	config.bin file and then click "Upload" to
	replace your current settings.
Restore to Factory	Click "Reset" to restore settings to the factory
Default	default. A pop-up window will appear and ask
	you to confirm and enter your log in details.
	Enter your username and password and click
	"Ok". See below for more information.

Upgrade Firmware

You can upgrade the system firmware to a more recent version. You can download the latest firmware from the Edimax website. After the upgrade, the system will restart.

Upgrade Firmware

Upgrade the firmware to the most recent version - it is recommended that you use a wired connection for the procedure.

	Browse	CANCEL	APPLY
--	--------	--------	-------



Do not switch off or disconnect the device during a firmware upgrade, as this could damage the device. It is recommended that you use a computer for a firmware upgrade.

Browse	Open a new window to locate and select the
	firmware file in your computer.

Reboot

In the event that the router malfunctions or is not responding, then it is recommended that you restart the device.

Reboot

In the event that the device malfunctions or is not responding, you can perform a system reboot. Click on Apply - this will reboot the device, without affecting your existing settings.

APPLY



Rebooting the EW-7438RPn Mini will not affect the current configuration/settings of the device.

Apply	Click "Apply" to reboot the device. A status
	bar will indicate the progress of the reboot
	and you will see a confirmation screen when
	the reboot is complete.

System Log

You can export the system log to a separate file if you require.

System Log

Export system log

Export system log	Click to open a new window and select a
	location to save the log file.

VI. Access Point Mode

VI-1. Home

Home

The "Status and Information" page displays basic system information about the device, arranged into

three categories: system, wireless configuration & LAN configuration.



Screenshots displayed are examples. The information shown on your screen will vary depending on your configuration.

System		
Current Time	14:21:41 2014/6/23	
Uptime	0Day:0h:0m:55s	
Hardware Version	Rev. v3	
Firmware version	1.06 Upgrade Firmware	
Mode	AP	
Wireless Configuration		
SSID	EdimaxAPd7	
Channel Number	2	
Security	WPA-Shared Key	
BSSID (MAC)	80:1F:02:FD:D7:D7	
Associated Clients	0 Show Active Clients	
State	Connected	
LAN Configuration		
IP Address	192.168.2.100	
Subnet Mask	255.255.255.0	
Default Gateway	192.168.2.1	
MAC Address	80:1F:02:FD:D7:D7	

Current Time	Displays the current time and date.	
Uptime	Displays the total time since the device was	
	turned on.	
Hardware Version	Displays the hardware version.	

Firmware Version	Displays the firmware version.	
Mode	Displays the operating mode.	
SSID	Displays the access point's SSID, sometimes	
	also known as SSID. The SSID is the name used	
	to identify a wireless network.	
Channel Number	Displays the current wireless channel number.	
Security	Displays the current wireless security setting.	
BSSID (MAC)	Displays the device's BSSID. The BSSID	
	identifies this access point in the network, and	
	is the same as the device's MAC address.	
Associated Clients	Displays the number of clients connected to	
	the access point. Click "Show Active Clients"	
	to display a new window showing information	
	about wireless clients.	
State	Displays the current connection state of the	
	EW-7438RPn Mini.	
IP Address	Displays the IP address of this device.	
Subnet Mask	Displays the subnet mask of the IP address.	
Default	Displays the IP address of the default	
Gateway	gateway.	
MAC address	Displays the device's MAC address. The MAC	
	address is a unique, fixed ID for this device, it	
	cannot be modified.	

VI-2. iQ Setup

iQ Setup

You can run the setup wizard again to reconfigure the basic settings of the device. Please refer to II-3. Wi-Fi Access Point Mode Step 3 onwards for guidance.



If you wish to change the operating mode, please reset the EW-7438RPn Mini back to factory default settings.

VI-3. Basic Settings

Basic Settings

The "Basic Settings" screen displays various settings for your wireless network.

Mode	AP -
Band	2.4 GHz (B+G+N) ▼
Main SSID	EdimaxAPd7
Ivian 33D	Multiple SSID
AP Isolation (Client user isolation)	Disabled 💌
Channel Number	Auto 🗸
Associated Clients	Show Active Clients

Mode	The EW-7438RPn Mini's mode is displayed
Widde	. ,
	here.
Band	Displays the wireless standard used for the
	EW-7438RPn Mini. "2.4GHz (B+G+N)" means
	that 802.11b, 802.11g, and 802.11n wireless
	clients can connect to the EW-7438RPn Mini.
MAIN SSID	This is the name of your Wi-Fi network for
	identification, also known as "SSID". The SSID
	can consist of any combination of up to 32
	alphanumerical characters.
Multiple SSID	Click "Multiple SSID" to open a new window
	and assign up to four SSIDs to this access
	point. Please see the following page for more
	details.
AP Isolation	When "Enabled", wireless clients will be able
	to access the Internet, but will not be able to
	communicate with each other. This applies to
	clients connected to the MAIN ESSID only.
Channel Number	Select a wireless radio channel or use the
	default "Auto" setting from the drop-down
	menu.
Associated Clients	Click "Show list" to display a new window
	showing information about wireless clients.
	Please disable any pop-up blockers if you
	have difficulty using this function.

Multiple SSID

This page allows you to configure the wireless settings for multiple ESSID's.

Multiple SSID

This page allows you to configure the wireless settings for Multiple SSIDs. The wireless security settings for these SSIDs can be configured in Security page.

		Basic Settings	Advanced Setting					
No.	Enabled	Associated Clients	SSID	Broadcast SSID	WMM	Band	AP Isolation (Client user isolation)	SSID isolation
SSID		Show Active Clients	Guest Netwo	Enabled V	Disabled \checkmark	2.4 GHz (B+G+N) 🗸	Disabled V	Disabled V

BACK

Save

No.	Identification number of each additional CCID
	Identification number of each additional SSID.
Enable	Check the box to enable or disable an SSID.
SSID	Enter the SSID (the name used to identify this
	wireless access point) here. You can input up
	to 32 alphanumerical characters. Please note
	that the SSID is case sensitive.
Broadcast SSID	Enable or disable SSID broadcast. When
	enabled, the ESSID will be visible to clients as
	an available Wi-Fi network. When disabled,
	the SSID will not be visible as an available
	Wi-Fi network to clients – clients must
	manually enter the SSID in order to connect. A
	hidden (disabled) SSID is typically more secure
	than a visible (enabled) SSID.
WMM	WMM (Wi-Fi Multimedia) technology can
	improve the performance of certain network
	applications, such as audio/video streaming,
	network telephony (VoIP), and others. When
	WMM is enabled, the access point will
	prioritize different kinds of data and give
	higher priority to applications which require
	instant responses. This improves the
	performance of such network applications.
Band	Select the wireless band you wish to use for
Danu	· ·
	the access point: 802.11b, 802.11g, 802.11n

	or selected combinations of each. Only wireless clients of the same band(s) as you select will be able to connect.
AP Isolation	When "Enabled", wireless clients will be able to access the Internet, but will not be able to communicate with each other.
SSID Isolation	When "Enabled", wireless clients that connect to main SSID and multiple SSID will not be able to communicate with each other.

VI-4. WPS Settings

WPS Setting

Wi-Fi Protected Setup is a simple way to establish connections between WPS compatible devices. When

WPS is activated in the correct manner and at the correct time for two compatible devices, they will automatically connect. PIN code WPS includes the use of a PIN code between the two devices for verification.

The WPS Settings page displays settings for WPS between your extender and a **wireless client.**



Do not use the physical WPS button (described in <u>II-4. WPS Setup</u>) in access point mode. Use the settings below instead.

2.4G Wi-Fi Protected Setup Information

WPS Status	Configured
Self PinCode	01902952
Device SSID	EdimaxAPd7
Security Type	WPA pre-shared key
Passphrase Key	abcd1234

Device Configure

Configuration Mode Device is as an AP	Registrar
Configure via Push Button	Start PBC
Input Client PIN Code	Send PIN

WPS Status	Displays "Configured" or "unConfigured" depending on whether WPS and SSID/security settings for the device have been configured or not, either manually or using the WPS button.
Self PIN Code	Displays the WPS PIN code of the device.
Device SSID	Displays the SSID of the device.
Security Type	Displays the wireless security authentication mode of the device.

Passphrase Key	Displays the wireless security authentication key.
Configuration Mode	The configuration mode of the device's WPS setting is displayed here. "Registrar" means the device acts as an access point for a wireless client to connect to and the wireless client(s) will follow the device's wireless settings.
Configure via Push Button	Click "Start PBC" (Push-Button Configuration) to activate WPS on the EW-7438RPn Mini. WPS will be active for 2 minutes.
Input Client PIN Code	Enter the wireless client's PIN code here and click "Start PIN" to activate PIN code WPS. Refer to your wireless client's documentation if you are unsure of its PIN code.

VI-5. Wireless Advanced

Advanced Setting

- Security
- MAC Filtering
- Time Settings
- Scheduling setting
- Administration Utility
- Configuration Tools

Using the "Advanced Setting" menu, you can configure security, MAC filtering and various other settings.

The settings on the "Advanced Setting" page shown below are for experienced users only. Please do not change any of the values on this page unless you are already familiar with these functions.

Changing these settings can adversely affect the performance of your access point.

Fragment Threshold	2346	(256-2346)	
RTS Threshold	2347	(0-2347)	
Beacon Interval	100	(20-1024 ms)	
DTIM Period	3	(1-10)	
Data Rate	Auto 👻		
N Data Rate	Auto 👻		
Channel Width	Auto 20/40MHz © 20MHz		
Preamble Type	Short Preamble O Long Preamble		
Broadcast SSID	Enabled		
CTS Protect	Auto Always None None		
Tx Power	100 % 👻		

Fragment Threshold	Set the Fragment threshold of the wireless
	radio. The default value is 2346.
RTS Threshold	Set the RTS threshold of the wireless radio.
	The default value is 2347.
Beacon Interval	Set the beacon interval of the wireless radio.
	The default value is 100.
DTIM Period	Set the DTIM period of wireless radio. The
	default value is 3.

Data Rate	Set the wireless data transfer rate. The
	default is set to auto.
N Data Rate	Set the data rate of 802.11n. The default is
	set to auto.
Channel Width	Select wireless channel width (bandwidth
	used by wireless signals from the device) –
	the recommended value is Auto 20/40MHz.
Preamble Type	Set the wireless radio preamble type. The
	default value is "Short Preamble".
Broadcast SSID	Enable or disable SSID broadcast. When
	enabled, the SSID will be visible to clients as
	an available Wi-Fi network. When disabled,
	the SSID will not be visible as an available
	Wi-Fi network to clients – clients must
	manually enter the SSID in order to connect.
	A hidden (disabled) SSID is typically more
	secure than a visible (enabled) SSID. WPS
	(Wi-Fi Protected Setup) is also disabled when
	SSID broadcast is disabled.
CTS Protect	Enabling this setting will reduce the chance
	of radio signal collisions between 802.11b
	and 802.11g wireless access points. It's
	recommended to set this option to "Auto".
Tx Power	Set the power output of the wireless radio.
	You may not require 100% output power.
	Setting a lower power output can enhance
	security since potentially malicious/unknown
	users in distant areas will not be able to
	access your signal.

VI-5-1. Security

The access point provides a variety of wireless security options (wireless data encryption). When data is encrypted, information transmitted wirelessly cannot be read by anyone who does not know the encryption key. The "Security" screen displays security settings for your EW-7438RPn Mini.

Select SSID

Device SSID EdimaxAPd7 V

Security Settings

Security Type	WPA pre-shared key 🗸
WPA Unicast Cipher Suite	○ WPA(TKIP) ● WPA2(AES) ○ WPA2 Mixed
Pre-Shared Key Format	Passphrase V
Security Key	abcd1234

SSID choice	Select which SSID to configure
	security settings for.

Encryption	Select an SSID from the drop down
	menu to configure security for. Refer
	to the next sections for more details
	about each security type.

VI-5-1-1. Disable

Encryption is disabled and no password/key is required to connect to the EW-7438RPn Mini.



Disabling wireless encryption is not recommended. When disabled, anybody within range can connect to your device's SSID.

 Security Settings 			1
Security Type	Disable	•	
Enclose 002 des Austhandles	- 41		

Enable 802.1x Authentication

Enable 802.1x	Check the box to enable the 802.1x
Authentication	authentication. A RADIUS server is required
	to perform 802.1x authentication.

VI-5-1-2. WEP

WEP (Wired Equivalent Privacy) is a basic encryption type. For a higher level of security consider using WPA encryption.

WEP supports data rates up to 54Mbps.

Security Settings

Security Type	WEP -
Key Length	64-bit 👻
Key Format	HEX (10 Characters) 🔻
Default Key	Key 1 👻
Security Key	

Enable 802.1x Authentication

Key Length	Select 64-bit or 128bit. 128-bit is more secure than 64-bit.
Key Format	Choose from "ASCII" (any alphanumerical character 0-9, a-z and A-Z) or "Hex" (any

	characters from 0-9, a-f and A-F).
Encryption Key	Enter your encryption key/password according to the format you selected above. A complex, hard-to-guess key is recommended. Check the "Hide" box to hide your password from being displayed on-screen.
Enable 802.1x	Check the box to enable the 802.1x
Authentication	authentication. A RADIUS server is required to
	perform 802.1x authentication.

VI-5-1-3. WPA pre-shared key

WPA pre-shared key is the recommended and most secure encryption type.



Security Settings

Security Type	WPA pre-shared key -
WPA Unicast Cipher Suite	○ WPA(TKIP)
Pre-Shared Key Format	Passphrase -
Security Key	abcd1234

WPA Unicast Cipher Suite	Select from WPA (TKIP), WPA2 (AES) or WPA2 Mixed. WPA2 (AES) is safer than WPA (TKIP). Please make sure your wireless client supports your selection. WPA2 (AES) is recommended followed by WPA2 Mixed if your client does not support WPA2 (AES).
Pre-shared Key Format	Choose from "Passphrase" (8 – 63 alphanumeric characters) or "Hex" (up to 64 characters from 0-9, a-f and A-F).
Pre-shared Key	Please enter a key according to the format you selected above. A complex, hard-to-guess key is recommended. Check the "Hide" box to hide your password from being displayed on-screen.

VI-5-1-4. WPA RADIUS

WPA RADIUS is a combination of WPA encryption and RADIUS user authentication. If you have a RADIUS authentication server, you can authenticate the identity of every wireless client against a user database.

Security Settings

Security Type	WPA RADIUS -
WPA Unicast Cipher Suite	○ WPA(TKIP)
RADIUS Server IP Address	
RADIUS Server Port	1812
RADIUS Server Password	

WPA Unicast Cipher Suite RADIUS Server IP address	Select from WPA (TKIP), WPA2 (AES) or WPA2 Mixed. WPA2 (AES) is safer than WPA (TKIP). Please make sure your wireless client supports your selection. WPA2 (AES) is recommended followed by WPA2 Mixed if your client does not support WPA2 (AES). Input the IP address of the RADIUS authentication server here.
RADIUS Server Port	Input the port number of the RADIUS authentication server here. The default value is 1812.
RADIUS Server Password	Input the password of the RADIUS authentication server here.

VI-5-2. MAC Filtering

The MAC filtering feature allows you to define a list of wireless devices permitted to connect to this access point, identified by their unique MAC address. When this feature is enabled, devices which are not on the list of permitted MAC addresses cannot connect to the access point.

Select SSID EdimaxAPd7 -					
MAC Address Filtering Table Only 32 entries are allowed.					
1	aa:bb:cc:	:dd:ee:ff	Edimax		
Delete	Delete Selected Delete All Reset				
Enable Wireless Access Control					
New	MAC Address:		Comment:	Add	Clear

MAC address entries will be listed in the "MAC Address Filtering Table". Select an entry using the "Select" checkbox.

Delete Selected/	Delete selected or all entries from the table.
Delete All	
Reset	De-select all selected entries.

To enable the MAC filtering function, check the box labeled "Enable Wireless Access Control".

MAC address	Enter a MAC address of computer or network device without dashes or colons e.g. for MAC address 'aa-bb-cc-dd-ee-ff' enter 'aabbccddeeff'.
Comment	Enter a comment for reference/identification consisting of up to 16 alphanumerical characters.
Add	Click "Add" to add the MAC address to the

	MAC address filtering table.
Clear	Clear all fields.

VI-5-3. Time Settings

Time Zone

Set the time zone of the extender by synchronizing with Network Time Protocol server, the time will be used for Wi-Fi scheduling function.

Set Time Zone	(GMT+08:00)Taipei -	
Time Server Address	pool.ntp.org	
Daylight Savings	Enable Function January ▼ 1 ▼ To	

Set Time Zone	Select the time zone of your country or	
	region.	
Time Server Address	The extender supports NTP (Network Time	
	Protocol), select a time server from the drop	
	down menu.	
Daylight Savings	If your country/region uses daylight saving	
	time, please check the "Enable Function"	
	box, and select the start and end date.	
VI-5-4. Scheduling Setting

Scheduling setting

Scheduling function can be configured below for specific service.

Schedule Table (Up to 10 sets) : 🛛 💿 Enable 💿 Disable				
NO.	Service	Schedule description	Schedule	Select
1	Wireless off		Edit	Delete

Add

Cancel	APPLY
--------	-------

Add	Click to add a new schedule in a new window (see below).		
Edit	Edit an existing schedule in a new window.		
Delete	Delete the specified schedule.		

Add

When you click "Add" to add a new schedule, a new window will open as shown below:

Service : Wireless off 👻	Schedule description :		
	Start Time (hh.mm)	End Time (hh.mm)	Select
Sunday	0 - : 0 -	0 • : 0 •	
Monday	0 • : 0 •	0 • : 0 •	
Tuesday	0 - : 0 -	0 • : 0 •	
Wednesday	0 • : 0 •	0 • : 0 •	
Thursday	0 - : 0 -	0 • : 0 •	
Friday	0 - : 0 -	0 • : 0 •	
Saturday	0 • : 0 •	0 • : 0 •	
Every day	0 - : 0 -	0 - : 0 -	

Cancel

APPLY

- **1.**Select which function to schedule using the "Service" menu and enter a name for the schedule in the "schedule description" box.
- **2.** Specify a start and end time (hours and minutes) using the drop-down menus for your required day.
- **3.** Select the schedule in the "Select" column and click "APPLY" to save the schedule, or "Back" to cancel and go back to the previous screen.



If you need to use the extender during a scheduled off period, press the WPS/Reset button once to "wake up" the extender and resume Wi-Fi coverage.

VI-5-5. Administration Utility

You can change the password used to login to the browser-based configuration interface here. It is advised to do so for security purposes. You can also configure the EW-7438RPn Mini's IP address.



Please make a note of the new password. In the event that you forget the password and are unable to login to the browser based configuration interface, see <u>II-5</u>. Reset to factory default <u>settings</u> for how to reset the device.

Password Settings

Current Password	
New Password	
Re-Enter Password	

Management IP

O Obtain an IP address automatically		
• Use the following IP address		
IP Address	192.168.9.2	
Subnet Mask	255.255.255.0	
Gateway Address		
DNS		

DHCP Server

DHCP Server	Disabled V
Default Gateway	192.168.9.2
Start IP	192.168.9.100
End IP	192.168.9.200
Lease Time	Forever V

Current Password	Enter your current password.	
New Password	Enter your new password.	
Confirmed Password Confirm your new password.		

IP Address	Specify an IP address here. This IP address will be assigned to your EW-7438RPn Mini.	
Subnet Mask Input the subnet mask of the new IP address		
Gateway Address	Input the network's gateway IP address.	
DNS	Enter the DNS address here.	

DHCP Server	Enable or disable the DHCP server.		
Default Gateway	Input the network's gateway IP address.		
Start IP	Enter the start IP address for the DHCP server's		
	IP address leases.		
End IP	Enter the end IP address for the DHCP server's		
	IP address leases.		
Lease Time	Select a lease time for the DHCP leases here.		
	The DHCP client will obtain a new IP address		
	after the period expires.		



Please refer to <u>VIII-1. Configuring your IP address</u> for more information about changing the access point's IP address.

VI-5-6. Configuration Tools

The "Configuration Tools" menu allows you to backup the EW-7438RPn Mini's settings, restore the settings to a previous version or restore the EW-7438RPn Mini back to its factory default state. You can also upgrade the firmware, reboot the device and export the system log.

Manage S	ettings
----------	---------

Save the current settings of the device to a .bin file, restore the settings of the device to a previously saved .bin file or reset the device to its factory default settings.

Backup Settings :	Save		
Restore Settings :	-	Browse	Upload
Restore to Factory Defaults :	Reset		

Backup Settings	Click "Save" to save the current settings on
	your computer as config.bin file.
Restore Settings	Click "Browse" to find a previously saved
	config.bin file and then click "Upload" to
	replace your current settings.
Restore to Factory	Click "Reset" to restore settings to the factory
Default	default. A pop-up window will appear and ask
	you to confirm and enter your log in details.
	Enter your username and password and click
	"Ok". See below for more information.

Upgrade Firmware

You can upgrade the system firmware to a more recent version. You can download the latest firmware from the Edimax website. After the upgrade, the system will restart.

Upgrade Firmware

Upgrade the firmware to the most recent version - it is recommended that you use a wired connection for the procedure.

Browse	CANCEL	APPI Y
	O, TOLL	



Do not switch off or disconnect the device during a firmware upgrade, as this could damage the device. It is recommended that you use a wired Ethernet connection for a firmware upgrade.

Browse	Open a new window to locate and select the
	firmware file in your computer.

Reboot

In the event that the router malfunctions or is not responding, then it is recommended that you restart the device.

Reboot

In the event that the device malfunctions or is not responding, you can perform a system reboot. Click on Apply - this will reboot the device, without affecting your existing settings.

APPLY



Rebooting the EW-7438RPn Mini will not affect the current configuration/settings of the device.

Apply	Click "Apply" to reboot the device. A status
	bar will indicate the progress of the reboot
	and you will see a confirmation screen when
	the reboot is complete.

System Log

You can export the system log to a separate file if you require.

System Log

Export system log

Export system log	Click to open a new window and select a
	location to save the log file.

VII. EdiRange App

A The EdiRange app is for use with range extender mode only.

The EdiRange app is a free smartphone app from which you can manage the extender's functions and check your local Wi-Fi environment.

Please ensure that your smartphone/tablet is connected to your extender's Wi-Fi (SSID).

VII-1. Login

1. Open the EdiRange app.



2. Select "Management".



3. Enter the username and password (default username: *admin,* default password: *1234*).

The admin password is the same password used for the browser based configuration interface. It is recommended that you change the password from the default "1234". You can change the password in the "admin" page from the main menu.



4. Wait for the app to log in.

	Login ?
Please Login (Default Password : 1234)
User Name :	admin
Password :	
Cancel	Login
Please	e wait a moment
C	\mathbf{D}

VII-2. Main Menu

After you log in, the "Status" page will be displayed. You can see the extender status, SSID name, and guest network and schedule status here. Use the menu of icons across the bottom of the screen to navigate around the app.





Logout

Click the logout icon in the top left corner of the app anytime to log out from the app.



Help

Click the help icon in the top right corner of the app anytime to display help and tips about using the app.



More

Click the "more" icon in the main menu to display an additional menu with more options:



VII-3. Parental Control

The parental control function is a guest Wi-Fi network (SSID) which can be used for children, and switched on or off remotely using the EdiRange app independent from your extender's primary Wi-Fi network. Select "Second Wi-Fi Network" and then enter a name and password for the network.



VII-4. Wi-Fi Scheduling

Wi-Fi can be scheduled to switch off according to your preference. Your current schedules are displayed in the table: grey areas indicate Wi-Fi is off and orange areas indicate Wi-Fi is on.

Touch the time bars on the screen to open the schedule settings, and then click "Add" or "Edit" to add a new or edit an existing schedule for Wi-Fi **off**. Daylight Savings can also be configured here.

«	Wi-Fi Schedule	?	Schedule setting	Schedule	setting
0 SUN	06:00 12:00 18:0	0 23:59	System time GMT +0800 Daylight Savings Enable Function		
MON		_	May 15 To October 01	00 To 07	00
TUE			Save setting	/	
WED		-	Wireless off Schedule Table(Up to 10 sets) SUN 00:00 - 07:15 Edit	Everyday	
				Sunday	
THU				Monday	
				Tuesday	
FRI				Wednesday	
FRI				Thursday	
				Friday	
SAT			Add	Saturday	
	0:00 06:00 12:00 18:0	0 23:59	Арріу	Save se	etting

VII-5. Admin

You can change the extender's administrative password on the Admin page. This is the password to login to the EdiRange app and the browser based configuration interface.

User Name :	Admin Password	
User Name :		
	Admin	
Password :	default 1234	
	Save setting	

VIII. Appendix

VIII-1. Configuring your IP address

For first time access to the URL *http://edimaxext.setup* please ensure your computer is set to use a dynamic IP address. This means your computer can obtain an IP address automatically from a DHCP server. You can check if your computer is set to use a dynamic IP address by following <u>VII-1-1. How to</u> <u>check that your computer uses a dynamic IP address</u>.

Static IP users can also temporarily modify your computer's IP address to be in the same IP address subnet e.g. **192.168.9.x** (x = 3 - 254) as the EW-7438RPn Mini in order to access *http://edimaxext.setup*.



The procedure for modifying your IP address varies across different operating systems; please follow the guide appropriate for your operating system in <u>VIII-1-2. How to modify the IP address of your computer</u>.



You can assign a new IP address to the device which is within the subnet of your network during setup or using the browser based configuration interface, so that you can access the URL *http://edimaxext.setup* in future without modifying your IP address.



Please remember to change your IP address back to its original value after the device is properly configured.

VIII-1-1. How to check that your computer uses a dynamic IP address

Please follow the instructions appropriate for your operating system.

VIII-1-1-1. Windows XP

1. Click the "Start" button (it should be located in the lower-left corner of your computer), then click "Control Panel". Double-click the "Network and Internet Connections" icon, click "Network Connections", and then double-click "Local Area Connection". The "Local Area Connection Status" window will then appear, click "Properties".

🔟 Local Area Connection Properties 🛛 🔹 💽
General Authentication Advanced
Connect using:
AMD PCNET Family PCI Ethernet Ad
This connection uses the following items:
 Client for Microsoft Networks File and Printer Sharing for Microsoft Networks Guos Packet Schedule.
✓ Tinternet Protocol (TCP/IP)
Install Uninstall Properties
Description Transmission Control Protocol/Internet Protocol. The default
wide area network protocol that provides communication across diverse interconnected networks.

2. "Obtain an IP address automatically" and "Obtain DNS server address automatically" should be selected.

Internet Protocol (TCP/IP) Proper	ties 🛛 🛛 🔀
General Alternate Configuration	
You can get IP settings assigned autom this capability. Otherwise, you need to a the appropriate IP settings.	
Obtain an IP address automatically	
OUse the following IP address:	
IP address:	
S <u>u</u> bnet mask:	
Default gateway:	
⊙ 0 <u>b</u> tain DNS server address autom	atically
Use the rollowing Divisi server add	esses:
Preferred DNS server:	
Alternate DNS server:	
	Ad <u>v</u> anced
	OK Cancel

VIII-1-1-2. Windows Vista

1. Click the "Start" button (it should be located in the lower-left corner of your computer), then click "Control Panel". Click "View Network Status and Tasks", then click "Manage Network Connections". Right-click "Local Area Network", then select "Properties". The "Local Area Connection Properties" window will then appear, select "Internet Protocol Version 4 (TCP / IPv4)", and then click "Properties".

Intel(R) PRO/1000 MT Netwo	ork Connection
	Configure
his connection uses the following i	tems:
Internet Protocol Version 4 Internet Protocol Version 4 Version Version 4	very Mapper 1/5 Univer
Manhouse and a second s	very Responder

2. Select "Obtain an IP address automatically" and "Obtain DNS server address automatically" should be selected.

ou can get IP settings assigned a nis capability. Otherwise, you ne				
or the appropriate IP settings.				
Obtain an IP address autom	atically			
O Use the following IP address	si.			- 100
<u>I</u> P address:	+	- R		
Sybnet mask:			2	
Default gateway:				
Obtain DNS server address Use the following DNS server				
Use the following Divs serve			0.0	
Desforced DNS conver	1 .			_
Preferred DNS server:	-			
Preferred DNS server: Alternate DNS server:		120	1	
				anced

VIII-1-1-3. Windows 7

1. Click the "Start" button (it should be located in the lower-left corner of your computer), then click "Control Panel".



2. Under "Network and Internet" click "View network status and tasks".



3. Click "Local Area Connection".

View your basic network information and set up connections



4. Click "Properties".

Local Area Connection	n Status		x
General	p		
Connection			
IPv4 Connectivity:		No Internet acce	ss
IPv6 Connectivity:		No network acce	ss
Media State:		Enab	ed
Duration:		02:08:	52
Speed:		100.0 Mb	ps
Details			
Activity			
S	ent —	Receiv	ed
Bytes:	951,332	4,398,1	.84
Properties	Dsable	Diagnose	
		C	ose

5. Select "Internet Protocol Version 4 (TCP/IPv4) and then click "Properties".

Local Area Connection Properties	23
Networking	
Connect using:	
Broadcom 440x 10/100 Integrated Controller	
Configure This connection uses the following items:	
Client for Microsoft Networks Client for Microsoft Networks Client for Microsoft Networks Client Printer Sharing for Microsoft Networks A. Internet Protocol Version 4 (TCP/IPv4) A. Internet Protocol Version 4 (TCP/IPv4)	
Link-Layer Topology Discovery Mapper I/O Driver Link-Layer Topology Discovery Responder	
Install Uninstall Properties	
Description TCP/IP version 6. The latest version of the internet protocol that provides communication across diverse interconnected networks.	
ОК Са	ncel

6. Select "Obtain an IP address automatically" and "Obtain DNS server address automatically" should be selected.

Internet Protocol Version 4 (TCP/IPv4)	Properties ? X
General	
You can get IP settings assigned auton this capability. Otherwise, you need to for the appropriate IP settings.	
Obtain an IP address automatical	y
IP address:	192.168.2.10
Subnet mask:	255 . 255 . 255 . 0
Default gateway:	· · ·
Obtain DNS server address autom	
	resses:
Preferred DNS server:	
Alternate DNS server:	
Validate settings upon exit	Advanced
	OK Cancel

VII-1-1-4. Windows 8

1. From the Windows 8 Start screen, you need to switch to desktop mode. Move your curser to the bottom left of the screen and click.



2. In desktop mode, click the File Explorer icon in the bottom left of the screen, as shown below.



3. Right click "Network" and then select "Properties".



4. In the window that opens, select "Change adapter settings" from the left side.

🖬 🛃 📗 = I	Library Tools Picture T	ools	Pictures -	
File Home Share	View Manage Mana	ge		v 🕐
(<th>braries → Pictures →</th> <th></th> <th>V 🖒 Search Pictures</th> <th>Q</th>	braries → Pictures →		V 🖒 Search Pictures	Q
☆ Favorites	2	Network and Sharing (renter – 🗆 🗙	
Desktop		-		
Recent places	🔄 🏵 🕆 🏌 🧱 « Network	and Internet > Network and Sharing Center	✓ C Search Control Panel	
	Control Panel Home	View your basic network inform	ation and set up connections	
Libraries Documents	Change adapter settings	View your active networks		
Documents Music	<u>Change adapter settings</u>	Network	Access type: Internet	
Pictures	settings	Public network	Connections: 🔋 Ethernet	
Videos				
I툎 Computer Network		Change your networking settings Set up a new connection or netw Set up a broadband, dial-up, or 1	vork VPN connection; or set up a router or access point.	
	See also HomeGroup Internet Options Windows Firewall	Troubleshoot problems Diagnose and repair network pro	oblems, or get troubleshooting information.	
1 item 1 item selected	Library includes: 2 locations			::: 🖬
	2 7		- 18 🖯 🕼	2:54 PM 12/3/2012

5. Choose your connection and right click, then select "Properties".



6. Select "Internet Protocol Version 4 (TCP/IPv4) and then click "Properties".

👊 🗋 🗐 🖛	Network – 🗇	×
File Network View		~ ?
€ ∋ ▼ ↑ 🗣 ► Network	k v 🗸 Karch Network	Q
	are turned off. Network computers and devices are not visible. Click to change	×
🛠 Favorites	Network and Sharing Center - 🗆 🗙	
Desktop	Network Connections	
Downloads	(e) → ↑ 😰 « Network and Internet → Network Connections ∨ C	
💹 Recent places		
🥃 Libraries	Creanize = Dirabile this network device Diagnose this connection Rename this connection »	
Documents	Networking	
👌 Music	Connect using:	
Pictures	Broadcom 440x 10/100 Integrated Controller	
🛃 Videos		
🖳 Computer	Configure This connection uses the following items:	
14	Rection rection uses the ronowing items: Rection of the ronowing items: A	
📬 Network	A Microsoft Network Adapter Multiplexor Protocol	
	Microsoft LLDP Protocol Driver	
	 ✓ ▲ Link-Layer Topology Discovery Mapper I/O Driver ✓ ▲ Link-Layer Topology Discovery Responder 	
	✓ Valuence Protocol Version 6 (TCP/TEAL)	
	Internet Protocol Version 4 (TCP/IPv4)	
	< >	
	Install Uninstall Properties	
	Description Transmission Control Protocol/Internet Protocol. The default	
	wide area network protocol that provides communication	
	across diverse interconnected networks.	
	OK Cancel	
0 items	1 item 🛛 1 item selected 🛛 📰	:== 🛋
6 📋 😕		5 PM 3/2012

7. Select "Obtain an IP address automatically" and "Obtain DNS server address automatically" should be selected.



VIII-1-1-5. Mac OS

1. Have your Macintosh computer operate as usual, and click on "System Preferences".



2. In System Preferences, click on "Network".



3. Click on "Wi-Fi" in the left panel and then click "Advanced" in the lower right corner.

0 0	Network	
Show All		Q
Locat	tion: Automatic	÷
Wi-Fi Connected Connected Connected Connected		ed Turn Wi-Fi Off onnected to OBM-AirPort-2.4G and address 192.168.77.119.
AX881thernet Not Connected Not Connected Not Connected FireWire Not Connected Sultation PAN Not Connected Sultation PAN	Ask to Known r	rPort-2.4G a join new networks networks will be joined automatically. own networks are available, you will d before joining a new network.
+ - * T	Show Wi-Fi status in menu urther changes. Assist	

4. Select "TCP/IP" from the top menu and "Using DHCP" in the drop down menu labeled "Configure IPv4" should be selected.

)	Network	
Show All	and the second s	٩
Wi-Fi		
Wi-I	TCP/IP DNS WINS 802.1X	Proxies Hardware
Configure		
IPv4 Address	Using Brief with manual address Using BootP	Renew DHCP Lease
Subnet Mask	Manually	ID:
Router	Off	(If required)
		The second is president and the second second
Configure IPv6:	Automatically	*
Router:		
IPv6 Address:		
Prefix Length:		
		Cancel
ick the lock to preve	a further charges Ass	ist ma Bucard

VIII-1-2. How to modify the IP address of your computer

Please follow the instructions appropriate for your operating system. In the following examples we use the IP address **192.168.9.20** though you can use any IP address in the range **192.168.9.x** (x = 3 - 254) in order to access iQ Setup/browser based configuration interface.



VII-1-2-1. Windows XP

1. Click the "Start" button (it should be located in the lower-left corner of your computer), then click "Control Panel". Double-click the "Network and Internet Connections" icon, click "Network Connections", and then double-click "Local Area Connection". The "Local Area Connection Status" window will then appear, click "Properties".

🕹 Local Area Connection Properties 🛛 🔹 👔
General Authentication Advanced
Connect using:
AMD PCNET Family PCI Ethernet Ad
This connection uses the following items:
 Client for Microsoft Networks File and Printer Sharing for Microsoft Networks
Install Uninstall Properties Description Transmission Control Protocol/Internet Protocol. The default wide area network protocol that provides communication across diverse interconnected networks. Show icon in notification area when connected ✓ Notify me when this connection has limited or no connectivity
▼ Notify me when this connection has inniced of no connectivity

2. Select "Use the following IP address", then input the following values:

Your existing static IP address will be displayed in the "IP address" field before you replace it. Please make a note of this IP

address, subnet mask, default gateway and DNS server addresses.

IP address: 192.168.9.20 Subnet Mask: 255.255.255.0

Click 'OK' when finished.

Internet Protocol (TCP/IP) Prope	rties 🛛 🛛 🔀
General	
You can get IP settings assigned autor this capability. Otherwise, you need to the appropriate IP settings.	
Obtain an IP address automatical	
IP address:	192.168.9.20
S <u>u</u> bnet mask:	255 . 255 . 255 . 0
Default gateway:	
○ O <u>b</u> tain DNS server address autor	natically
• Use the following DNS server add	dresses:
Preferred DNS server:	
<u>A</u> lternate DNS server:	· · ·
	Ad <u>v</u> anced
	OK Cancel

VIII-1-2-2. Windows Vista

1. Click the "Start" button (it should be located in the lower-left corner of your computer), then click "Control Panel". Click "View Network Status and Tasks", then click "Manage Network Connections". Right-click "Local Area Network", then select "Properties". The "Local Area Connection Properties" window will then appear, select "Internet Protocol Version 4 (TCP / IPv4)", and then click "Properties".

Intel(R) PRO	/1000 MT Network Con	nection
	es the following items:	Configure
 ✓ Internet I ✓ Internet P ✓ Sinkel aver 	hinter Sharing for Microso natocol Version & (TCP/I ratocol Version 4 (TCP/I r Topology Discovery Ma r Topology Discovery Re	Pv4) Pv4)
Description	ntrol Protocol/Internet P	rotocol. The default

2. Select "Use the following IP address", then input the following values:

Your existing static IP address will be displayed in the "IP address" field before you replace it. Please make a note of this IP address, subnet mask, default gateway and DNS server addresses.

IP address: 192.168.9.20 Subnet Mask: 255.255.255.0

Click 'OK' when finished.

neral	
	automatically if your network supports eed to ask your network administrator
Obtain an IP address autom	natically
Ose the following IP address	s:
IP address:	192.168.9.20
Subnet mask:	255 . 255 . 255 . 0
Default gateway:	
Obtain DNS server address	automatically
Output the following DNS server	er addresses:
Preferred DNS server:	
Alternate DNS server:	arab selected Region
	Advanced

VII-1-2-3. Windows 7

1. Click the "Start" button (it should be located in the lower-left corner of your computer), then click "Control Panel".



2. Under "Network and Internet" click "View network status and tasks".



3. Click "Local Area Connection".



4. Click "Properties".

📱 Local Area Connec	tion Status	X
General	Snip	
Connection		
IPv4 Connectivity	:	No Internet access
IPv6 Connectivity	:	No network access
Media State:		Enabled
Duration:		02:08:52
Speed:		100.0 Mbps
Details		
Activity		
	Sent —	Received —
Bytes:	951,332	4,398,184
Properties	1) Disable	Diagnose
		Close

5. Select "Internet Protocol Version 4 (TCP/IPv4) and then click "Properties".

Local Area Connection Properties	x
Networking	
Connect using:	
Broadcom 440x 10/100 Integrated Controller	
Configure This connection uses the following items:	
Client for Microsoft Networks QoS Packet Scheduler File and Printer Sharing for Microsoft Networks Intermet Protocol Version 6 (TCP/IPv6) Intermet Protocol Version 4 (TCP/IPv4)	
Install Uninstall Properties	
Description TCP/IP version 6. The latest version of the internet protocol that provides communication across diverse interconnected networks.	
ОК Са	ncel

6. Select "Use the following IP address", then input the following values:

Your existing static IP address will be displayed in the "IP address" field before you replace it. Please make a note of this IP address, subnet mask, default gateway and DNS server addresses.

IP address: 192.168.9.20 Subnet Mask: 255.255.255.0

Click 'OK' when finished.

neral	
	automatically if your network supports eed to ask your network administrator
or the appropriate IP settings.	
Obtain an IP address auton	natically
Use the following IP addres	
IP address:	192.168.9.20
Subnet mask:	255 . 255 . 255 . 0
Default gateway:	Te a a
Obtain DNS server address	automatically
Use the following DNS served	
Preferred DNS server:	[
Alternate DNS server:	Grab selected Region
	Advanced
	<u></u>

VIII-1-2-4. Windows 8

1. From the Windows 8 Start screen, you need to switch to desktop mode. Move your curser to the bottom left of the screen and click.



2. In desktop mode, click the File Explorer icon in the bottom left of the screen, as shown below.


3. Right click "Network" and then select "Properties".



4. In the window that opens, select "Change adapter settings" from the left side.



5. Choose your connection and right click, then select "Properties".



6. Select "Internet Protocol Version 4 (TCP/IPv4) and then click "Properties".



7. Select "Use the following IP address", then input the following values:

Your existing static IP address will be displayed in the "IP address" field before you replace it. Please make a note of this IP address, subnet mask, default gateway and DNS server addresses.

IP address: 192.168.9.20 Subnet Mask: 255.255.255.0

Click 'OK' when finished.

VIII-1-2-5. Mac

1. Have your Macintosh computer operate as usual, and click on "System Preferences"



2. In System Preferences, click on "Network".



3. Click on "Wi-Fi" in the left panel and then click "Advanced" in the lower right corner.

00	١	Network		
Show All)		٩	
	Location: Automatic	:	Å V	
• Wi-Fi Connected			ted Turn V onnected to OBM-AirPo P address 192.168.77.1	
• Not Connected • AX881thernet Not Connected			irPort-2.4G	\$
 802.11 n WLAN Not Connected FireWire Not Connected 	«» **	Known If no kr	o join new network: networks will be joined a nown networks are availal ed before joining a new n	utomatically. ble, you will
Bluetooth PAN Not Connected	8			
+ - * *	Show Wi-F	i status in menu	bar Ad	vanced
Click the lock to	prevent further changes.	Assis	t me Rever	t Apply

4. Select "TCP/IP" from the top menu and select "Manually" from the drop down menu labeled "Configure IPv4", then click "OK".

9 0	Network	
Show All		Q
🛜 Wi-Fi		
Wi-Fi	Using DHCP Using DHCP with manual address Using RootP	oxies Hardware
Configure 7.v4		ered to CBM, Andure 2 AC and
IPv4 Address	Un	
Subnet Mask:	255.255.255.0	10769-246 1
Router:	192.168.77.1	
Configure IPv6:	Automatically	*
Router:	Automatically	•
IPv6 Address:		
Prefix Length:		
?		Cancel OK

Your existing static IP address will be displayed in the "IP address" field before you replace it. Please make a note of this IP address, subnet mask, default gateway and DNS server addresses.

5. In the "IPv4 Address" and "Subnet Mask" field enter IP address 192.168.9.20 and subnet mask 255.255.255.0. Click on "OK".

0	Network		
Show All			Q
💦 Wi-Fi			
Wi-Fi	TCP/IP DNS WINS 802	.1X Proxies	Hardware
	Status: G	onnected	Turn Wi-Fi Off
Configure IPv4	Manually	\$	
IPv4 Address	: 192168.9.20		
Subnet Mark	255.255.255.0		
Router	: 192.168.77.1		
C	Automotivelly		
	Automatically	\$	
Router			
IPv6 Address	:		
Prefix Length	:		
)			Cancel

6. Click "Apply" to save the changes.



VIII-1-3. How to Find Your Network Security Key

To find your network security key, please follow the instructions appropriate for your operating system.

If you are using Windows XP or earlier, please contact your ISP or router manufacturer to find your network security key.

VIII-1-3-1. Windows 7 & Vista

1. Open "Control Panel" and click on "Network and Internet" in the top menu.



2. Click on "View network status and tasks" which is under the heading "Network and Sharing Center".



3. Click on "Manage wireless networks" in the left menu.



4. You should see the profile of your Wi-Fi network in the list. Right click on your Wi-Fi network and then click on "Properties".

Add	Remove	Move down	Adapter properties	Profile types	
Network	Networks you can view, modify, and reorder (2)				
	HomeNet	work	Security: WPA2-P	ersonal	
		Proper	ties		
Remo		Remove	e network		
-		Rename	•		
		Move d	own		

5.Click on the "Security" tab, and then check the box labeled "Show characters". This will show your network security key. Click the "Cancel" button to close the window.

I	HomeNetwork Wireless Network Properties			
	Connection Security			
	Security type:	WPA2-Personal 🔹		
	Encryption type:	AES 🔹		
	Network security key	1234567890		
	(Show characters		

VIII-1-3-2. Mac

1. Open a new Finder window, and select "Applications" from the menu on the left side. Open the folder labeled "Utilities" and then open the application "Keychain Access".



2. Select "Passwords" from the sub-menu labeled "Category" on the left side, as shown below. Then search the list in the main panel for the SSID of your network. In this example, the SSID is "EdimaxWireless" – though your SSID will be unique to your network.

0 0		Keychain Access		
Click to lock the	ogin keychain.		Q	
Keychains login System System Roots	EdimaxWireless Kind: AirPort networ Account: AirPort Where: com.apple.n Modified: Today, T	etwork.wlan.ssid.EdimaxWireless		
	Name	A Kind	Date Modified	Keychain
	A Apple ID Authentication	application password	2012/7/17 上午10:16:29	login
	🗛 Apple Persistent State Encrypt	ion application password	2012/7/16 下午5:15:20	login
	A EDIMAX 6475	AirPort network password	2012/7/17 上午11:08:03	login
Category	A Edimax5fb78a	AirPort network password	2012/8/27 上午10:24:59	login
All Itoms	A EdimaxWireless	AirPort network password	Today, 下午5:45	login
/ Passwords	Var fotogene@ma.com	application password	2012/7/17 上午10:16:23	login
/ Passworus	🗛 Matt	AirPort network password	Today, 下午5:28	login
	A PP-6574-Demo	AirPort network password	2012/7/17 下午2:21:30	login
My Certificates				
🖗 Keys				
📴 Certificates				
จ	+ i Copy	8 items		

3. Double click the SSID of your network and you will see the following window.

● ○ ○	EdimaxWireless
[Attributes Access Control
Name:	EdimaxWireless
Kind	AirPort network password
Account:	AirPort
Where:	com.apple.network.wlan.ssid.EdimaxWireless
Comments	
Show password:	P
	Save Changes

4. Check the box labeled "Show password" and you will be asked to enter your administrative password, which you use to log into your Mac. Enter your password and click "Allow".

		9
	Keychain Access wants to use your confidential information stored in "EdimaxWireless" in your keychain. To allow this, enter the "login" keychain password.	
	Password:	
?	Always Allow Deny Allow	
	Account: AirPort	
	Where: com.apple.network.wlan.ssid.EdimaxWirele	ss
	Comments:	
	Show password:	ę
	Sa	ive Changes
		are changes

Your network security password will now be displayed in the field next to the box labeled "Show password". In the example below, the network security password is "edimax1234". Please make a note of your network security password.

●	EdimaxWireless		
	Attributes Access Control		
Name:	EdimaxWireless		
Kind:	AirPort network password		
Account:	AirPort		
Where:	com.apple.network.wlan.ssid.EdimaxWireless		
Comments:			
Show password:	edimax1234		
	Save Changes		

VIII-1-4. How to Find Your Router's IP Address

To find your router's IP address, please follow the instructions appropriate for your operating system.

VIII-1-4-1. Windows XP, Vista & 7

1. Go to "Start", select "Run" and type "cmd", then press Enter or click "OK".

Mozilla Firefox			
E-mail Microsoft Office Outlook	AlanChiu	- Run	ж
Finternet Explorer	Documents Pictures	Type the name of a program, folder, document, or Internet	
😻 XnView	Music	resource, and windows will open it for you.	
Microsoft Office Word 2007	Recent Items	Oper cmd This task will be created with administrative privileges.	
Google Chrome	Computer		-
Microsoft Office PowerPoint 2007	Network	OK Cancel Browse	
Adobe Reader 9	Connect To		
Command Prompt	Control Panel		
開設 Microsoft Office 文件	Default Programs		
Audacity	Run		
All Programs			
Start Search			
🔗) 🖃 🖻 👘			

2. A new window will open, type "ipconfig" and press Enter.



3. Your router's IP address will be displayed next to "Default Gateway".



VIII-1-4-2. Windows 8

1. From the Windows 8 Start screen, move your curser to the top right corner of the screen to display the Charms bar.



2. Click "Search" and enter "cmd" into the search bar. Click the "Command Prompt" app which be displayed on the left side.

Apps Results for "cmd"	Search Apps cmd × P
	Apps 1
	Settings 0
	Files 0
	Bing
	Finance
	Games
	Mail
	Maps
	Music

3. A new window will open, type "ipconfig" and press Enter.



4.Your router's IP address will be displayed next to "Default Gateway".



VIII-1-4-3. Mac

- **1.** Launch "System Preferences" and click on "Network".
- 2. If you are using an Ethernet cable to connect to your network, your router's IP address will be displayed next to "Router".

0	Network	
Show All		Q
Locatio	on: Automatic	\$
Connected FireWire Not Connected		Connected Ethernet is currently active and has the IP address 192.168.10.179.
● Wi-Fi 📀	Configure IPv4:	Manually +
⊖ USB Ne…terface	IP Address:	192.168.9.20
Not Connected	Subnet Mask:	255 255 255.0
Bluetooth PAN Not Connected	Router:	192.168.10.254
	DNS Server:	192.168.1.12, 192.168.1.2
	Search Domains:	
+ - * -		Advanced ?
Click the lock to prevent furt	her changes.	Assist me Revert Apply

3. If you are using Wi-Fi, click "Wi-Fi" in the left panel, and then "Advanced" in the bottom right corner.

Θ Θ	Network	
Show All		Q
Loca	ation: Automatic	\$
 Wi-Fi Connected Extense Not Connected FireWire Not Connected USB Neterface Not Connected Bluetooth PAN Not Connected 	IP addre Network Name: Edima V Auto Auto Know If no	Turn Wi-Fi Off a connected to EdimaxHQ and has the ess 10.0.20.97. axHQ omatically join this network to join new networks wn networks will be joined automatically. known networks are available, you will sked before joining a new network.
+ - & -	Show Wi-Fi status in men further changes.	nu bar Advanced) ? ist me Revert Apply

4. Click the "TCP/IP" tab and your router's IP address will be displayed next to "Router".

0 0	٨	letwork	
⊲ ⊳) Show All			Q
🛜 Wi-Fi			
Wi-fi	TCP/IP DNS WI	NS 802.1X Proxie	s Hardware
Configure IPv4:	Using DHCP	\$	
IPv4 Address:	10.0.20.97	(Renew DHCP Lease
Subnet Mach	255.255.2	DHCP Client ID:	
Router:	10.0.20.254	Automatical	(If required)
Configure IPv6:	Automatically	* Ask to Join (
Router:		If the known net	
IPv6 Address:			
Prefix Length:			
?			Cancel OK
Click the lock to preve			Revent

VIII-2. Connecting to a Wi-Fi network

For help connecting to your device's *edimaxext.setup* SSID for initial setup, or to connect to your device's new Wi-Fi network (SSID) after setup is complete, follow the guide below:

Below is an example of how to connect using Windows Vista – the process may vary slightly for other versions of Windows.

1. Click the network icon (Image: Image:



2. Search for the SSID of your EW-7438RPn Mini and then click "Connect". If you set a password for your network, you will then be prompted to enter it.



3. After correctly entering your password, you will be successfully connected to the EW-7438RPn Mini's wireless network.



VIII-3. Troubleshooting

If you are experiencing problems with your wireless extender, please refer to this troubleshooting guide before contacting your dealer of purchase for help.

Scenario	Solution
I can't log onto the browser-based configuration interface.	 a. Please check that the extender is correctly inserted into a power socket and check the LEDs on the front panel. If the extender is initializing after being switched off or restarted, wait for a 2 minutes and try again. b. Make sure you are using the full, correct URL: http://edimaxext.setup c. If you are using a MAC or IP address filter, try to connect the wireless extender using a different computer. d. Set your computer to obtain an IP address automatically (DHCP), and see if your computer can obtain an IP address. e. Ensure that all other Wi-Fi/Ethernet adapters are disabled or disconnected. f. Password is case-sensitive. Make sure the "Caps Lock" light is not illuminated.
I can't establish a connection to my wireless extender.	 g. b. If you do not know your password, restore the device to factory settings. a. If encryption is enabled, please re-check WEP or WPA passphrase settings on your wireless client. The password is case-sensitive. Make sure the "Caps Lock" light is not illuminated. b. Try moving closer to the wireless extender. c. Switch off the extender and switch it back on after 10 seconds. h. Please check that the extender is correctly inserted into a power socket and check the LEDs on the front panel.
File downloads are very slow or frequently interrupted. The wireless extender	 a. Reset the wireless extender b. Try again later. Your local network may be experiencing technical difficulties or very high usage. c. Change channel number. a. It is normal for the wireless extender to heat up

	Γ
is extremely hot.	 during frequent use. If you can safely place your hand on the wireless extender, the temperature of the device is at a normal level. b. If you smell burning or see smoke coming from wireless extender then disconnect the extender immediately, as far as it is safely possible to do so. Call your dealer of purchase for help.
My network device	a. Ensure that your broadband router is fully
can't access the	functional.
Internet.	b. Power off both your network device and wireless
	extender and switch back on again.
	c. Ensure that the wireless extender is powered on
	(check the PWR LED).
	 d. On the browser based configuration interface home page, check "Status" under "Wireless
	Configuration". It should be "Connected" – if it is
	"Disconnected" then this means the wireless
	extender is not connected to your router/access
	point.
My wireless extender	The best location to place the Wi-Fi extender is one
has a poor signal	which is an open space, roughly in the middle
from my access	between your router and the Wi-Fi dead zone, and
point/router.	where the Wi-Fi extender LED displays "Excellent"
	signal strength.
	a. Keep the extender away from other radio devices
	such as microwaves or wireless telephones.
	 b. Do not put the extender in the corner of a room or under/nearby metal.
	 c. It is recommended to plug the extender directly into a wall socket.
	d. Ensure there are as few obstacles as possible
	between the extender and the access point/router.
Can I use the same	Yes, but it is not recommended as it will be difficult to
SSID as my current	distinguish between two SSIDs with the same name.
gateway router for	-
my Wi-Fi extender?	
A firmware upgrade	Firmware upgrade failures can happen occasionally due to
failed and the	power cuts or unstable connections. In this scenario, you
EW-7438RPn Mini	need to first connect a computer to one of your
isn't working.	EW-7438RPn Mini's LAN ports using an Ethernet cable.

Then you need to modify your computer's IP address to 192.168.2.x where x is any value between 3 and 254 . Refer to VIII-1-2. How to modify the IP address of your computer if you need guidance to do so.
From there, you need to go to 192.168.2.1 in a web browser, and you will see the page below:
Firmware Recovery Mode Please select the correct firmware file than click Upload once and wait for the next screen to display that the upgrade is in progress. Browse Upload
Click "Browse" to locate the firmware file on your computer and then click "Upload" to upload the new firmware. It may take several minutes to complete, please wait and follow the instructions on screen.

VIII-4. Glossary

Default Gateway (Wireless bridge): Every non-access point IP device needs to configure a default gateway's IP address. When the device sends out an IP packet, if the destination is not on the same network, the device has to send the packet to its default gateway, which will then send it out towards the destination.

DHCP: Dynamic Host Configuration Protocol. This protocol automatically gives every computer on your home network an IP address.

DNS Server IP Address: DNS stands for Domain Name System, which allows Internet servers to have a domain name (such as www.Broadbandaccess point.com) and one or more IP addresses (such as 192.34.45.8). A DNS server keeps a database of Internet servers and their respective domain names and IP addresses, so that when a domain name is requested (as in typing "Broadbandaccess point.com" into your Internet browser), the user is sent to the proper IP address. The DNS server IP address used by the computers on your home network is the location of the DNS server your ISP has assigned to you.

DSL Modem: DSL stands for Digital Subscriber Line. A DSL modem uses your existing phone lines to transmit data at high speeds.

Ethernet: A standard for computer networks. Ethernet networks are connected by special cables and hubs, and move data around at up to 10/100 million bits per second (Mbps).

IP Address and Network (Subnet) Mask: IP stands for Internet Protocol. An IP address consists of a series of four numbers separated by periods, that identifies a single, unique Internet computer host in an IP network. Example: 192.168.2.1. It consists of 2 portions: the IP network address, and the host identifier.

A network mask is also a 32-bit binary pattern, and consists of consecutive leading 1's followed by consecutive trailing 0's, such as 1111111111111111111111111100000000. Therefore sometimes a network mask can also be described simply as "x" number of leading 1's. When both are represented side by side in their binary forms, all bits in the IP address that correspond to 1's in the network mask become part of the IP network address, and the remaining bits correspond to the host ID.

For example, if the IP address for a device is, in its binary form, <u>11011001.10110000.1001</u>0000.00000111, and if its network mask is, 11111111.11111111111110000.00000000 It means the device's network address is <u>11011001.10110000.1001</u>0000.00000000, and its host ID is, 00000000.00000000000000000111. This is a convenient and efficient method for access points to route IP packets to their destination.

ISP Gateway Address: (see ISP for definition). The ISP Gateway Address is an IP address for the Internet access point located at the ISP's office.

ISP: Internet Service Provider. An ISP is a business that provides connectivity to the Internet for individuals and other businesses or organizations.

LAN: Local Area Network. A LAN is a group of computers and devices connected together in a relatively small area (such as a house or an office). Your home network is considered a LAN.

MAC Address: MAC stands for Media Access Control. A MAC address is the hardware address of a device connected to a network. The MAC address is a unique identifier for a device with an Ethernet interface. It is comprised of two parts: 3 bytes of data that corresponds to the Manufacturer ID (unique for each manufacturer), plus 3 bytes that are often used as the product's serial number.

NAT: Network Address Translation. This process allows all of the computers on your home network to use one IP address. Using the broadband access point's NAT capability, you can access the Internet from any computer on your home network without having to purchase more IP addresses from your ISP.

Port: Network Clients (LAN PC) uses port numbers to distinguish one network application/protocol over another. Below is a list of common applications and protocol/port numbers:

Application	Protocol	Port Number
Telnet	ТСР	23
FTP	ТСР	21
SMTP	ТСР	25
POP3	ТСР	110
H.323	ТСР	1720
SNMP	UCP	161
SNMP Trap	UDP	162
HTTP	ТСР	80
РРТР	ТСР	1723
PC Anywhere	ТСР	5631
PC Anywhere	UDP	5632

Access point: A access point is an intelligent network device that forwards packets between different networks based on network layer address information such as IP addresses.

Subnet Mask: A subnet mask, which may be a part of the TCP/IP information provided by your ISP, is a set of four numbers (e.g. 255.255.255.0) configured like an IP address. It is used to create IP address numbers used only within a particular network (as opposed to valid IP address numbers recognized by the Internet, which must be assigned by InterNIC).

TCP/IP, UDP: Transmission Control Protocol/Internet Protocol (TCP/IP) and Unreliable Datagram Protocol (UDP). TCP/IP is the standard protocol for data transmission over the Internet. Both TCP and UDP are transport layer protocol. TCP performs proper error detection and error recovery, and thus is reliable. UDP on the other hand is not reliable. They both run on top of the IP (Internet Protocol), a network layer protocol.

WAN: Wide Area Network. A network that connects computers located in geographically separate areas (e.g. different buildings, cities, countries). The Internet is a wide area network.

Web-based management Graphical User Interface (GUI): Many devices support a graphical user interface that is based on the web browser. This means the user can use the familiar Netscape or Microsoft Internet Explorer to Control/configure or monitor the device being managed.



COPYRIGHT

Copyright © Edimax Technology Co., Ltd. all rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission from Edimax Technology Co., Ltd.

Edimax Technology Co., Ltd. makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability, or fitness for any particular purpose. Any software described in this manual is sold or licensed as is. Should the programs prove defective following their purchase, the buyer (and not this company, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Edimax Technology Co., Ltd. reserves the right to revise this publication and to make changes from time to time in the contents hereof without the obligation to notify any person of such revision or changes.

The product you have purchased and the setup screen may appear slightly different from those shown in this QIG. The software and specifications are subject to change without notice. Please visit our website www.edimax.com for updates. All brand and product names mentioned in this manual are trademarks and/or registered trademarks of their respective holders.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1. Reorient or relocate the receiving antenna.
- 2. Increase the separation between the equipment and receiver.
- 3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4. Consult the dealer or an experienced radio technician for help.

FCC Caution

This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the authority to operate equipment.

Federal Communications Commission (FCC) Radiation Exposure Statement

This equipment complies with FCC radiation exposure set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 2.5cm (1 inch) during normal operation.

Federal Communications Commission (FCC) RF Exposure Requirements

SAR compliance has been established in the laptop computer(s) configurations with PCMCIA slot on the side near the center, as tested in the application for certification, and can be used in laptop computer(s) with substantially similar physical dimensions, construction, and electrical and RF characteristics. Use in other devices such as PDAs or lap pads is not authorized. This transmitter is restricted for use with the specific antenna tested in the application for certification. The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

R&TTE Compliance Statement

This equipment complies with all the requirements of DIRECTIVE 1999/5/EC OF THE EUROPEAN PARLIAMENT AND THE COUNCIL of March 9, 1999 on radio equipment and telecommunication terminal equipment and the mutual recognition of their conformity (R&TTE). The R&TTE Directive repeals and replaces in the directive 98/13/EEC (Telecommunications Terminal Equipment and Satellite Earth Station Equipment) As of April 8, 2000.

Safety

This equipment is designed with the utmost care for the safety of those who install and use it. However, special attention must be paid to the dangers of electric shock and static electricity when working with electrical equipment. All guidelines of this and of the computer manufacture must therefore be allowed at all times to ensure the safe use of the equipment.

EU Countries Intended for Use

The ETSI version of this device is intended for home and office use in Austria, Belgium, Bulgaria, Cyprus, Czech, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Ireland, Italy, Latvia, Lithuania, Luxembourg, Malta, Netherlands, Poland, Portugal, Romania, Slovakia, Slovenia, Spain, Sweden, Turkey, and United Kingdom. The ETSI version of this device is also authorized for use in EFTA member states: Iceland, Liechtenstein, Norway, and Switzerland.

EU Countries Not Intended for Use

None

EU Declaration of Conformity

English:	This equipment is in compliance with the essential requirements and other relevant provisions of Directive 2006/95/EC, 2011/65/EC.
Français:	Cet équipement est conforme aux exigences essentielles et autres dispositions de la directive 2006/95/CE, 2011/65/CE.
Čeština:	Toto zařízení je v souladu se základními požadavky a ostatními příslušnými ustanoveními směrnic 2006/95/ES, 2011/65/ES.
Polski:	Urządzenie jest zgodne z ogólnymi wymaganiami oraz szczególnymi warunkami określonymi Dyrektywą UE 2006/95/EC, 2011/65/EC
Română:	Acest echipament este în conformitate cu cerințele esențiale și alte prevederi relevante ale Directivei 2006/95/CE, 2011/65/CE.
Русский:	Это оборудование соответствует основным требованиям и положениям Директивы 2006/95/EC, 2011/65/EC.
Magyar:	Ez a berendezés megfelel az alapvető követelményeknek és más vonatkozó irányelveknek (2006/95/EK, 2011/65/EK).
Türkçe:	Bu cihaz 2006/95/EC, 2011/65/EC direktifleri zorunlu istekler ve diğer hükümlerle ile uyumludur.
-	: Обладнання відповідає вимогам і умовам директиви 2006/95/EC, 2011/65/EC. Toto zariadenie spĺňa základné požiadavky a ďalšie príslušné ustanovenia smerníc 2006/95/ES, 2011/65/ES.
Deutsch:	Dieses Gerät erfüllt die Voraussetzungen gemäß den Richtlinien 2006/95/EC, 2011/65/EC.
Español:	El presente equipo cumple los requisitos esenciales de la Directiva 2006/95/EC, 2011/65/EC.
Italiano:	Questo apparecchio è conforme ai requisiti essenziali e alle altre disposizioni applicabili della Direttiva 2006/95/CE, 2011/65/CE.
Nederlands	Dit apparaat voldoet aan de essentiële eisen en andere van toepassing zijnde bepalingen van richtlijn 2006/95/EC, 2011/65/EC
Português:	Este equipamento cumpre os requesitos essênciais da Directiva 2006/95/EC, 2011/65/EC.
Norsk:	Dette utstyret er i samsvar med de viktigste kravene og andre relevante regler i Direktiv 2006/95/EC, 2011/65/EC.
Svenska:	Denna utrustning är i överensstämmelse med de väsentliga kraven och övriga relevanta bestämmelser i direktiv 2006/95/EG, 2011/65/EG.
Dansk:	Dette udstyr er i overensstemmelse med de væsentligste krav og andre relevante forordninger i direktiv 2006/95/EC, 2011/65/EC.
suomen kie	li: Tämä laite täyttää direktiivien 2006/95/EY, 2011/65/EY oleelliset vaatimukset ja muut asiaankuuluvat määräykset.



WEEE Directive & Product Disposal



At the end of its serviceable life, this product should not be treated as household or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal.

Declaration of Conformity

We, Edimax Technology Co., Ltd., declare under our sole responsibility, that the equipment described below complies with the requirements of the European R&TTE directives.

Equipment: N300 Mini Wi-Fi Extender/Access Point/Wi-Fi Bridge Model No.: EW-7438RPn Mini

The following European standards for essential requirements have been followed:

Spectrum:	ETSI EN 300 328 V1.8.1
EMC:	EN 301 489-1 V1.9.2 (2011-09); EN 301 489-17 V2.2.1 (2012-09)
EMF:	EN 62311:2008
Safety (LVD):	IEC 60950-1:2005 (2nd Edition); EN-60950-1:2006+A11:2009+A1:2010+A12:2011

Edimax Technology Co., Ltd. No. 3, Wu Chuan 3rd Road, Wu-Ku Industrial Park, New Taipei City, Taiwan

Date of Signature:	July, 2014
Signature:	Allas
Printed Name:	Albert Chang
Title:	Director
	Edimax Technology Co., Ltd.

CE

Notice According to GNU General Public License Version 2

This product includes software that is subject to the GNU General Public License version 2. The program is free software and distributed without any warranty of the author. We offer, valid for at least three years, to give you, for a charge no more than the costs of physically performing source distribution, a complete machine-readable copy of the corresponding source code.

Das Produkt beinhaltet Software, die den Bedingungen der GNU/GPL-Version 2 unterliegt. Das Programm ist eine sog. "Free Software", der Autor stellt das Programm ohne irgendeine Gewährleistungen zur Verfügung. Wir bieten Ihnen für einen Zeitraum von drei Jahren an, eine vollständige maschinenlesbare Kopie des Quelltextes der Programme zur Verfügung zu stellen – zu nicht höheren Kosten als denen, die durch den physikalischen Kopiervorgang anfallen.

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc. 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep

intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

