


Welcome to ClareVision Plus

In order to access the Live View and stream your camera footage, you must enable ClareVision Plus.

Setup your ClareVision Plus Account

1. Open the app and tap  **Cloud devices**.
2. Tap **Login**.
3. Tap **Register** and select your preferred method of registration.
4. Follow the on screen instructions to complete your registration. Now proceed to installation.

Understanding the ClareVision Plus App

Live and Recorded Video Settings



2-Way Audio



Take Photo



Take Video



HD/Basic Video

Live View Configuration



Stop/Start



Volume



Camera View



Zoom

Main Menu Settings



Back



Settings



Add Device




Playback

Installation Option 1: PoE (Power over Ethernet)

Connecting cameras using PoE: you will need access to the ClareVision Plus App, camera, and PoE power supply.

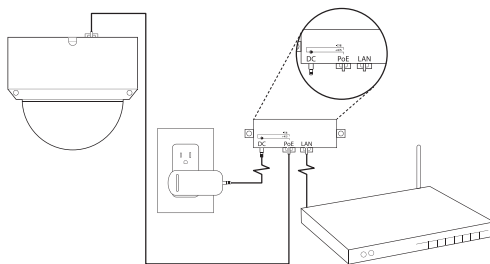

Simple Setup Using A Wired Connection



1. Connect the camera to the PoE injector.
2. Connect the injector to the router and then plug in the power supply for the injector.
3. Download and open the ClareVision Plus App.

Adding a ClareVision Plus Camera


Open the ClareVision Plus App.

- a. Tap  **Cloud devices**.
- b. Tap .
- c. Scan the QR code on the camera housing or the packaging label.
- d. Follow instructions in the ClareVision Plus App to complete the process.
- e. Once completed, tap the ClareVision Plus logo under the camera part number to view live video.

Installation Option 2: Wi-Fi

Connecting cameras using Wi-Fi: you will need access to the ClareVision Plus App, camera, and Wi-Fi.

Simple Setup Using A Wi-Fi Connection

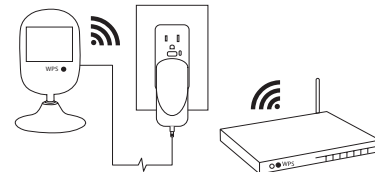



Note: When using the Wi-Fi option, ensure that your mobile device is connected to the same network that you want the camera to join.

1. Connect the camera to the power supply.
2. Connect your mobile device to the Wi-Fi network you want your camera to use. (2.4Ghz only)
3. Now add the camera in the ClareVision Plus App, refer to page 4.

Easily View Recorded Video Footage

If you are using an NVR or a micro SD card*, you can use the ClareVision+ App to view all recorded footage.

1. Tap  and select camera for live view.
2. Tap  **Gallery**.
3. Select date of desired recorded video.
4. Recorded video will be displayed.

*ClareVision Plus micro SD cards come pre-formatted for ClareVision Plus cameras. Other micro SD cards will need to be formatted before use.

Thank You

Thank you for choosing Clare Controls. In today's competitive market place, we can appreciate that you have many choices for your home automation needs.

Included in the Box (contents may vary)

- Camera
- Power supply
- Composite video output pigtail adapter (if applicable)
- Mounting screws (if applicable)
- Anchors (if applicable)
- Hex tool (if applicable)
- Drill template
- Weather housing (if applicable)
- Quick start guide

Note: Ensure all the accessories are included. If not, contact your dealer.

Additional Information and Support

Installation and Setup Manual:

www.clarecontrols.com/camera-fullmanual



Warranty Information

Clare Controls offers a three (3) year limited warranty on original Clare Controls components, from the date of shipment from Clare Controls. To view complete limited warranty details, including limitations and exclusions, www.clarecontrols.com/warranty.



Scan the code to view product warranty details.

Support

For technical issues and additional support, please contact Clare Technical Services at:

claresupport@clarecontrols.com

ClareVision Plus IP CCTV Cameras



Clare Controls Camera
Quick-Start Guide

