



# ClareVision Plus CVP-B4460-01 NVR Firmware v3.4.99 Build 180207 Release Notes

## Content

- Introduction...1
- Digest to Digest/Basic...1
- Updating the firmware...2
- Contact information...3

**Last modified:** 03/14/19

## Introduction

The ClareVision Plus (CVP) CVP-B4460-01 4-Channel NVR firmware v3.4.99 Build 180207 update changes the default authorization property from Digest to Digest/Basic.

## Digest to Digest/Basic

Once the firmware is updated, the NVR's connection configuration is set to digest/basic by default. This setting allows ClareHome access to the NVR.


**Note:** This default is only available after the updated. You can manually change the NVR setting.

### To manually change the authorization property:

1. Using your computer, connect to the same network as the camera.
2. Browse to the camera's IP address, and then login using the camera's credentials.

### 3. Browse to **Authorization**.

#### **Configuration > System > Security > Authorization**

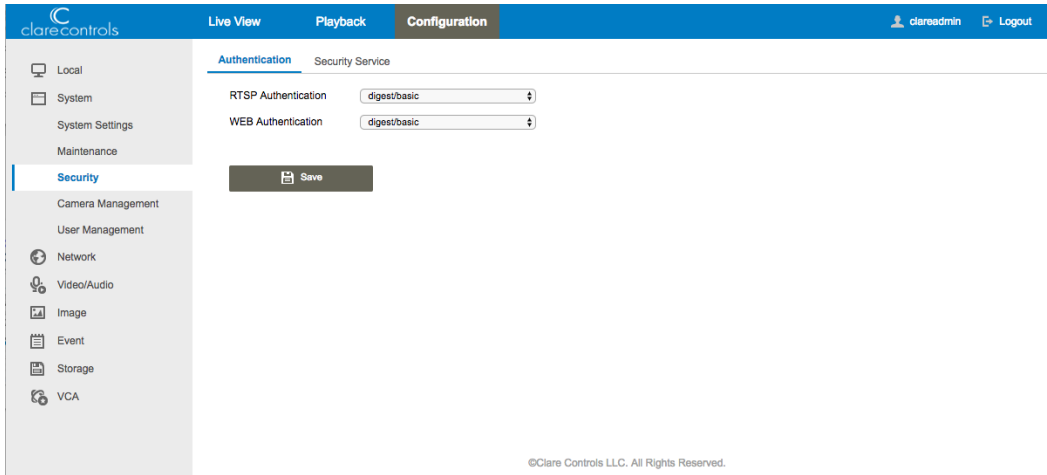

4. Set both the RTSP and WEB Authentication dropdowns to **digest/basic**.

5. Click **Save**.


## Updating the firmware

The new NVR firmware is found on the Clare Controls Knowledge Base. You must download and extract the firmware before you can continue.

### To download the new firmware:

1. Access the Clare Controls Knowledge Base [ClareVision Plus Firmware](https://www.clarecontrols.com/helpcenter/clarevision-plus-firmware) page.

<https://www.clarecontrols.com/helpcenter/clarevision-plus-firmware>

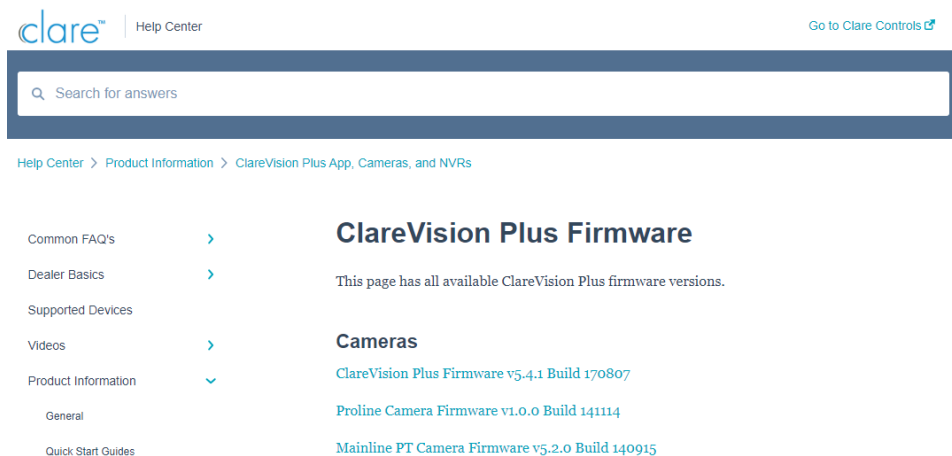

2. Scroll to find the correct firmware, and then click the firmware link.


The firmware begins to download.

3. Once the firmware is downloaded, extract the information to the desired location in your computer.

### To update the firmware using the camera's web UI:

1. Using your computer, connect to the same network as the camera.
2. Browse to the camera's IP address, and then login using the camera's credentials.
3. Browse to **Maintenance**.

### Configuration > System > Maintenance > Upgrade & Maintenance

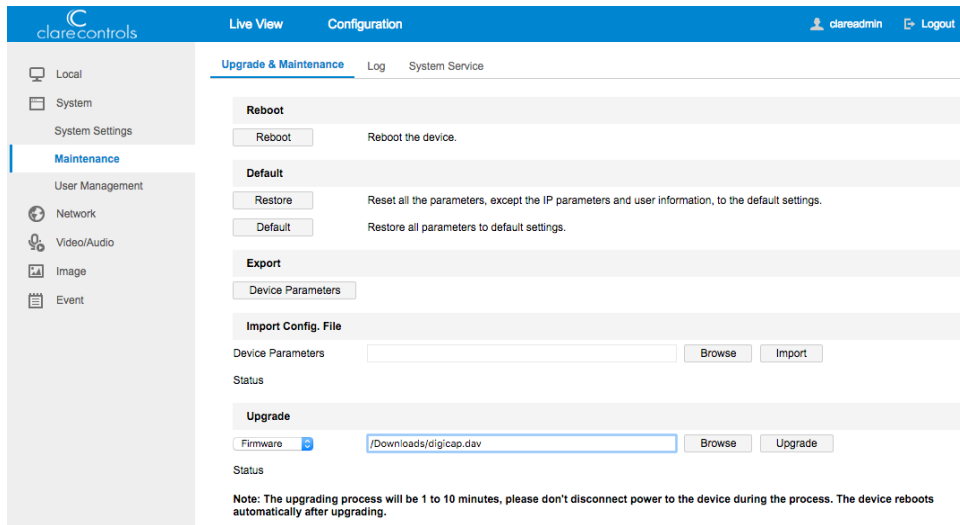

4. Under the Upgrade heading, click **Browse**. Select the previously extracted firmware.
5. Click **Upgrade** and confirm the upgrade.

**Note:** The upgrade reboots the NVR.

## Contact information

Clare Controls, LLC.  
7519 Pennsylvania Ave, Suite 104  
Sarasota, FL 34243

General: 941.328.3991  
Fax: 941.870.9646  
www.clarecontrols.com

Integrator/Dealer Support: 941.404.1072  
claresupport@clarecontrols.com

Homeowner Support (ClareCare): 941.315.2273 (CARE)  
help@clarecontrols.com