

# clare™ CS-PIN-10 Wireless Pinpad



**The CS-PIN-10** is a simple arming station that allows local control of the security system. It is battery powered and requires no installation tools. Many can be installed throughout the home to provide convenient system control.

## Features

- Secure 4 to 10 digit disarming
- Supports 1-button arming
- Small yet comfortable

**Enroll** by placing the panel into wireless enrollment mode and then sending an enrollment signal from the PINPad. Alternatively, the PINPad can be enrolled by scanning its bar code using the install Assist App.

### Option for sending an Enrollment Signal

- Press **1** and **3** buttons simultaneously

**Install** using the 3M VHB® tape on the back of the PINPad to adhere it to a wall.

- See Pro Tips for recommendations about using 3M VHB tape.
- Two #4 or #6 screws may be used instead of, or in addition to, the 3M VHB tape.
- The mounting plate can also be rotated 180° for table top use (See Pro Tips).

**Operate** using the PINPad buttons. The PINPad LED will blink when a button is activated.

**Disarm** by entering a valid 4-10 digit user code on the number pad.

 
 
 
**Arm Away** by pressing the **AWAY** button until the PINPad LED flashes red.

**Arm Stay** by pressing the **STAY** button until the PINPad LED flashes red.

**Trigger a panic alarm** by pressing the **STAY & AWAY** buttons together until the Red PINPad LED flashes repeatedly.



Enrollment Buttons

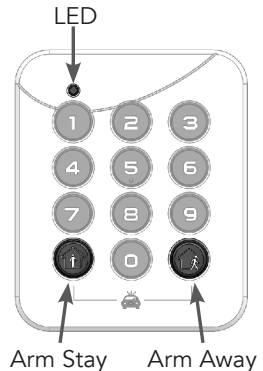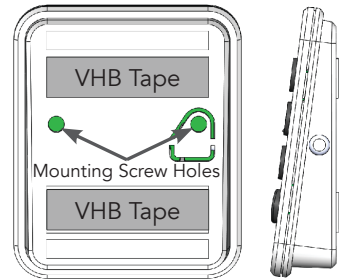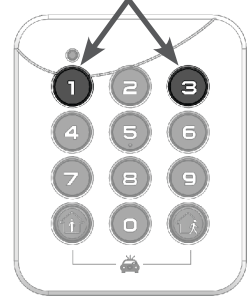

Use the panel installation guide to verify proper system setup.


## Pro Tips

 **3M VHB Tape** works great if the surface is properly prepared and firm pressure is applied for over 10 seconds.

### Surface Preparation

- Clean the surface
- Ensure the mounting surface temperature is above 50 °F

**Reversible mounting plate** allows for easy use on a wall or table. For table top use, remove and reverse the mounting plate and install the rubber feet supplied.

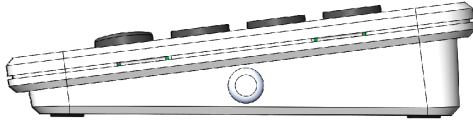

**To replace the battery** insert a screwdriver into the latch slot on either side of the PINPad and pop the cover off the wall plate. Replace the battery and reinstall the cover onto the wall plate.

## Specifications

Physical	
Housing Dimensions	2.28 x 1.97 x 0.40 inches (5.8 x 5.0 x 1.0 cm)
Weight with Battery	0.70 ounces (20 grams)
Mounting Fastener	3M VHB™ Tape or #4/#6 screws (Mounting screws not provided)
Environmental	
Operating Temperature	32 to 120 °F (0 to 49 °C)
Maximum Humidity	85% relative humidity non-condensing
Sensor Specifications	
Frequency	433.92 MHz
Replacement Battery	One Panasonic CR2032
Nominal Battery Life	4 to 6 years
Battery Voltage	3.0 VDC (Nominal), 2.2 VDC (Low)
Current Draw	20 mA (Maximum), 1 uA (Quiescent)
Transmitted Indications	Low Battery, Supervision
Certification	
RE652	UL634, ULC634, FCC, IC
RE652-CE	EN50131-1, EN 60950-1, EN300 220, EN301 489, CE, RCM

*Specifications subject to change without notice.*

clare™

2019-02-1838-01

941.238.3991

[www.ClareControls.com](http://www.ClareControls.com)

Original document below

<https://bit.ly/2IBUzHe>