Clore[™] CS-WRP-10 Wireless Range Repeater

The CS-WRP-10 is a battery backed up device that extends the wireless range of Clare compatible sensors.

Features

- Extends the range of Clare wireless sensors
- Rechargeable Backup Battery
- Cover and Wall Tamper
- 5-Year Warranty
- **Enroll** the repeater itself by placing the panel into wireless enrollment mode and then tampering the repeater. Alternatively, the repeater can be enrolled using the Install Assist App.
- **Install** by mounting the repeater in the desired location using the mounting screw holes. Then connect the power supply to the repeater.
- Set the repeater protocol by changing both the

panel and sensor selection knobs to position 8 (Connect+).

Note: This repeater is for Connect+ devices only. Other sensors and protocols are not supported.

Enable configuration mode by pressing and releasing the "**Configure**" button. The repeater will beep and the yellow LED will illuminate to confirm configuration mode is enabled.

Configuration Mode Tips


- Configuration mode ends automatically when the cover is closed, the "*Configure"* button is pressed again, or 30 minutes after the last action.
- Configuration mode is locked out 24 hours after power up. To re-enter configure mode, the repeater must be power cycled by removing both the 12VDV input power and backup battery for at least 5 seconds.
- When re-entering configuration mode, previously learned sensors are retained.

Learn Sensors to be repeated by placing the repeater into configuration mode and tripping the desired sensors.


- When repeating life safety devices, two repeaters MUST BE used in parallel.
- The repeater will beep after learning each new sensor.
- Sensors not learned into the repeater *will not* be repeated.

Use the panel installation guide to verify proper system setup.



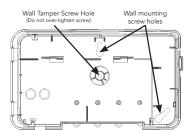

Use two #4 or # 6 screws for mounting (not included)

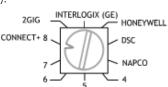





PWR/RX LED ON - Normal operation GREEN OFF - 12/DC power has been removed BLINKING - Every received packet will briefly blink the LED Fault condition: See Notes section		2GIG INTERLOGIX (GE)	HONEYWELL PWR/RX LED	
BATT/TX LED RED	ON - Battery low or cover tamper OFF - Normal operation BLINKING- Every transmitted packet will briefly blink the LED			NAPCO
CONFIGURE LED	ON - Translator configuration mode enabled OFF - Translator configuration mode disabled		5 PANEL SELECT	
SOUNDER	Short beep - Valid panel selection and sensor selection, or sensor configuration success Long beep - Invalid panel selection or sensor selection Fault condition: See Notes section			COVER TAMPER
BATTERY CONNECT		CONNECT+ 8	HONEYWELL DSC NAPCO 15 NAPCO	CONFIGURE
OPTIONAL BARREL CONVIECTOR CONVIECTOR 12VDC 0.1A 12VDC 1A CONVIECTOR Decifications				
Physical				
Housing Dimensions Weight with Battery Mounting Screws		8.5 x 1.0 x 1.3 inches (21.6 x 2.5 x 3.3 Cm) 16 ounces (454 g) #4 or #6 (Not Included)		
Environmenta	l			
Operating Temperature Maximum Humidity		32°F to 120°F (0°C to 49°C) 85% non-condensing relative humidity		
Power				
12VDC Output Battery Specifications Transmitted Indications		10.2VDC to 13VDC, 150mA Max 6VDC 800mAh NiMH Low Battery, Cover Tamper, Wall Tamper, Supervision		
Certification				
RE620		FCC, IC		

Specifications subject to change without notice

2019-02-1837-01 941.238.3991 www.ClareControls.com Original document below https://bit.ly/2GMk720