BLACKLINE LIVE

Quick Start Guide

WORKER S A F E T Y MO N I T O

LONE

blacklinesafety

blacklinesafety

CONTENTS


SIGNING UP & SIGNING IN Creating an account Signing into an existing Blackline account	4 4 4
EDITING YOUR TEAM MEMBER PROFILE	5
EDITING YOUR ACCOUNT SETTINGS Changing default team member settings	6 6
CREATING TEAM MEMBERS	7
VIEWING DEVICES	8
EDITING DEVICE INFORMATION	9
SETTING UP CONFIGURATION PROFILES	10
SETTING UP ALERT PROFILES	11
SETTING UP CONTACT GROUPS	12
USING THE MAPS DASHBOARD PAGE Features of the maps page Live locating a lone worker History view	13 13 14 14
MANAGING ALERTS	15
PLACING LOCATION BEACONS	16

SIGNING UP & SIGNING IN

In order to access the Blackline Live portal, you will have to create a Blackline Safety account and sign in.

Creating an account


- 1. Navigate to live.blacklinesafety.com in your browsers search bar
- 2. Select new account sign up
- 3. Enter your first and last name
- 4. Enter a valid email address
- 5. Choose a password
- 6. Verify your password
- 7. Select the captcha box to confirm you are not a robot
- 8. Agree to the Terms and Conditions by checking the box
- 9. Select create

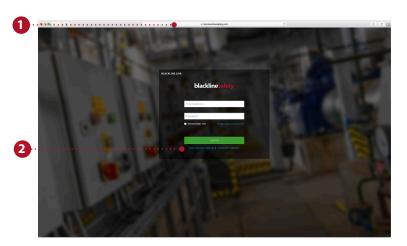



Signing in to an existing Blackline account

- 1. Enter in the email address associated with the account you would like to access
- 2. Enter in the password associated with the account you would like to access
- 3. Select sign in

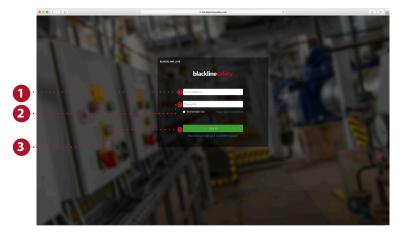


EDITING YOUR TEAM MEMBER PROFILE

Having your personal information in the portal ensures that you can be contacted by monitoring services in an emergency. Your contact information is kept in your own personalized team member profile, which anyone in your organization can view.

- 1. Navigate to the drop down menu in the top right corner
- 2. Select my team member profile
- 3. Select edit

4.


- Fill in form fields Ensure your first name, last name and email are entered, and fill out any other additional information that would be useful in the case of an alert.
- 5. Press save

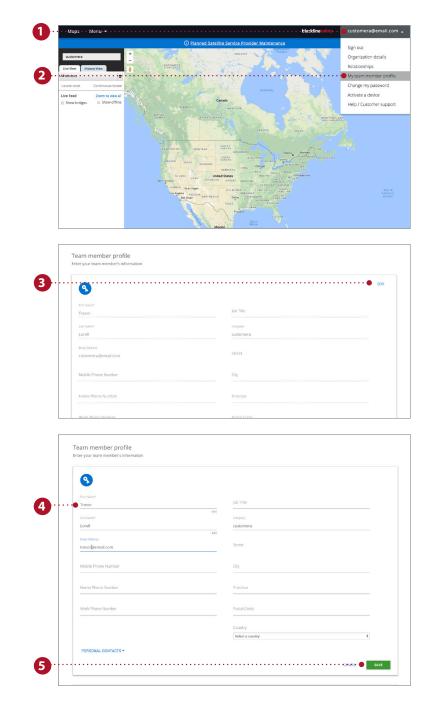

EDITING YOUR ACCOUNT SETTINGS

Account settings defines how the account holder experiences Blackline Live. These settings are completely individual to each account holder, but can be seen and changed by other users.

- 1. Navigate to the drop down menu in the top right corner
- 2. Select my team member profile
- 3. Scroll down to the account settings card and select *edit* to make changes
- 4. Change language if necessary Translations are provided by Google Translate. Blackline Safety is not responsible for the quality or accuracy of these translations.
- 5. Adjust portal alarm volume
- 6. Select save

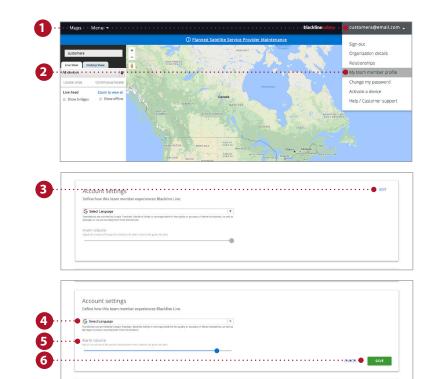


Changing default team member settings

Time zone, display unit and region selection information have been moved to the organization details page. These settings apply to every team member in the organization.

- 1. Navigate to the drop down menu in the top right corner
- 2. Select organization details
- **3.** Scroll down to the default team member settings card and select *edit* to make changes.
- 4. Select the organization's time zone, display units and region. These settings will apply to all team members in the organization.
- 5. Select save

NOTE: An organization admin role is required to make changes to the organization details page.

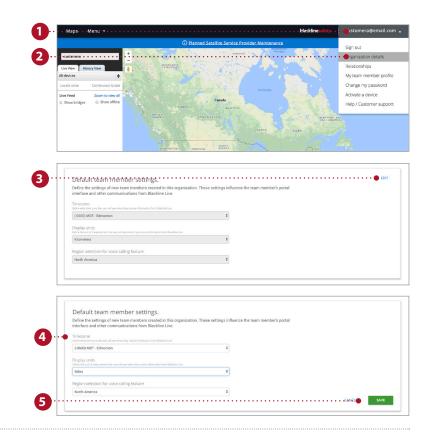


CREATING TEAM MEMBERS

Team members represent the employees, supervisors, managers and emergency response contacts in your organization. Their team members profiles contain contact information that is valuable in the case of alerts.

- 1. Navigate to the drop down menu in the top left corner
- 2. Select team members
- 3. Select the blue *add team member* button
- 4. Select whether you want to create a contact or an account user. Account users will be invited to log onto Blackline Live.
- 5. Select next
- 6. Enter contact information; including phone numbers, email address and street address
- 7. If creating an account user, assign them a role in at least one group.
- 8. Select save when complete

Repeat this process for all employees, supervisors, managers and emergency response contacts.


NOTE: A device admin role in the All devices group is required to create contacts. Group admins and org admins can create both contacts and account users.

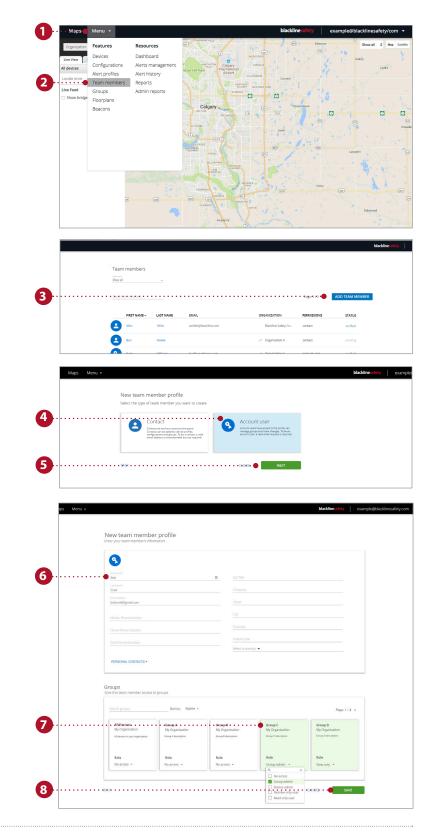


VIEWING DEVICES

The devices page gives an overview of the devices you have access to. This page is useful for monitoring the status of your devices: whether they are online or in alert, how they are configured and the amount of time since they have communicated with the Blackline Safety Network.

- 1. Navigate to the drop down menu in the top left corner
- 2. Select devices
- 3. View the status of the device: whether it is online or offline and whether it is in alert
- 4. If configured, view how much time is left until the next check in reminder
- 5. Click to assign or reassign a team member
- 6. View the name of the organization the device belongs to
- 7. View the type of device and device ID. Clicking it goes to the device details page.
- 8. View the custom name of the device. Clicking it goes to the device details page.
- 9. View which configuration profile the device is assigned to.
- **10.** View which alert profile the device is assigned to
- **11.** View the last communication the portal has had with the device. Select to view location on map.

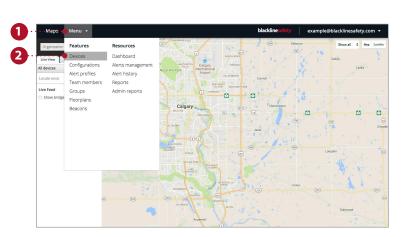


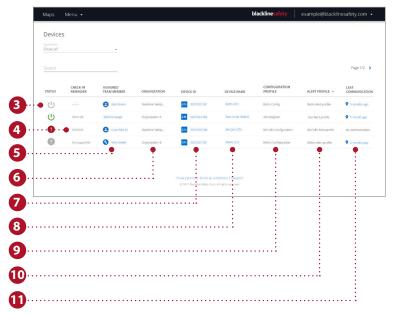

EDITING DEVICE INFORMATION

The device details page is accessed through the devices page, and offers more specific information about a particular device. You can make changes to the device itself or redirect to other pages on the portal that affect device behaviour.

- 1. Navigate to the drop down menu in the top left corner
- 2. Select devices
- **3.** Select either the device's name or ID in order to access the device detail's page.
- 4. Select *edit* in the first card.
- 5. Fill in the field forms with relevant information
- 6. Select save when finished.

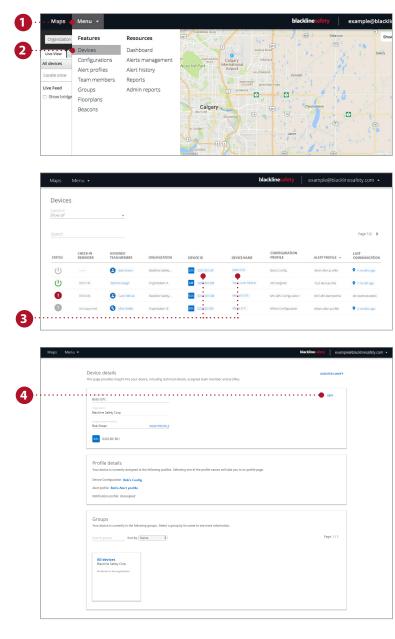

enu •		blackline:mfety example@blackline
	Device details This page provides insight into your device, including technical details, assigned team member and profiles.	ASSISTED LOGOFF
5	Robs G7c 844	
	Organization Blackline Safety Corp	
	August som mentar Bob Green	
0	G70 0201301301	_
6		SAVE

SETTING UP CONFIGURATION PROFILES

Devices are synced with configuration profiles. Configuration profiles are customizable by enabling and disabling different features. Different device users are added to each profile and you can create as many profiles as your organization needs.

- 1. Navigate to the drop down menu in the top left corner
- 2. Select configurations
- 3. Select *add configuration* to create a new profile
- 4. Select the type of device you are making a profile for, and click *next*
- 5. Name your profile and add a description if desired.
- 6. In the Settings section, open the setting expansion panels by clicking them, and use toggles, text inputs and dropdown to customize device features
- 7. In the Devices section, use the search and sort tools to find and select devices.
- 8. Once the configuration profile is set up to your liking, select *save*.

Live View All devices Locate once Live Feed Show bridge	Devices Configurations Alert profiles Team members Groups Floorplans Beacons	Dashboard Alerts management Alert history Reports Admin reports	Accellant	a jerwedet	olar 2 Consch Consch Consch Consch Consch		Datity	Lista
This p chang Organiz	ges.	e configuration pi	rofiles availabl	e to you. Select a co	onfiguration's na	ame to view its	s settings and ma	ke
	n'còrffgùràfions ICE TYPE Y G7c		GURATION NA	ME ORGANI		67c G7c	ADD CONFIGURA	
Configuration	ation profile profiles determine ho levices depending on y	w your device should fu our needs.	inction. Features ca	n be enabled, disabled ar	nd modified to c	G7X G7X 500 Loner 900 BR Bridge IS Loner IS M6 Loner M6 M64 Loner M6i		
- 67c Cor	figuration name*					LM Loner Mobile		
Configura	r a valid configuration nam	e 	0/40	ß			CANCEL	NI
Configura Setting Device feat Click on the	tion description	bled and modified in orde		ek environment.			CANCEL	NE
Configure Setting Device feat Click on the 	tion description	bled and modified in orde		ek envéronment.			CANCEL	NE
Setting Device feat Citic on the I	tion description	bled and modified in orde		const.			(parti)	
Setting Device feat Cick on the (1) (2) (2) (2) (2)	tion description	bled and modified in orde		045		minutes	Commission Latch pull	
Setting Device fear Cick on the Cick on th	IS I I I I I I I I I I I I I I I I I I	bled and modified in orde	r to best suit your we	045		minutes	Commission Latch pull	
Setting Device feat Cick on the Cick on th	IS I I I I I I I I I I I I I I I I I I	bled and modified in orde	r to best suit your we	045			Commission Latch pull	Page:
Setting Device feat Cick on the Cick on th	Iso description I I I I I I I I I I I I I I I I I I I	bled and modified in orde ation about each setting.	r to best suit your we	0mm 60	e mender LAST NAI		Cyconia Latch pull	Page:
Setting Device feat Cick on the Cick on th	Ison description	bled and modified in orde ation about each setting.	r to best suit your wc	FIRST NAME			Cyconia Latch pull	Page:

SETTING UP ALERT PROFILES


Alerts are notifications that occur in the portal whenever a device is configured to go into alarm. Modifications made to the alerts setup page will only affect the Portal's response to device alerts and will not affect device configurations.

- 1. Navigate to the drop down menu in the top left
- 2. Select *alert profiles* from the list
- 3. To create a new profile, select the create alert profile button
- 4. If you want to edit an existing profile, select the blue box next to the profile name
- 5. Name your alert profile
- 6. Enter your emergency response protocol These are the steps monitoring personnel will follow once an alert has been generated
- 7. Add emergency response contacts from your address book.

These are the people that will be contacted by monitoring personnel as per your emergency response protocol and should be available via phone

- 8. Add notified contacts These are people who will be notified when an alert occurs, and are required to respond
- 9. Depending on your needs, you can change the device alerts. You can turn device alerts on or off. However, always ensure emergency alerts are set to on.
- **10.** Select the *add user* button to assign the alert profile to device users. Select these users from the list and select done when finished
- **11.** Select *save* to update the profile with the new changes


Device Users		+ Add User
Users	Device Name	
Allen Miller	Unit 171704aaa	
Ben Howie	Unit 171705	
Betty Williams	Unit 171706	
Carter Steiner	Unit 171711	
Devon Pinto	Unit 171712	

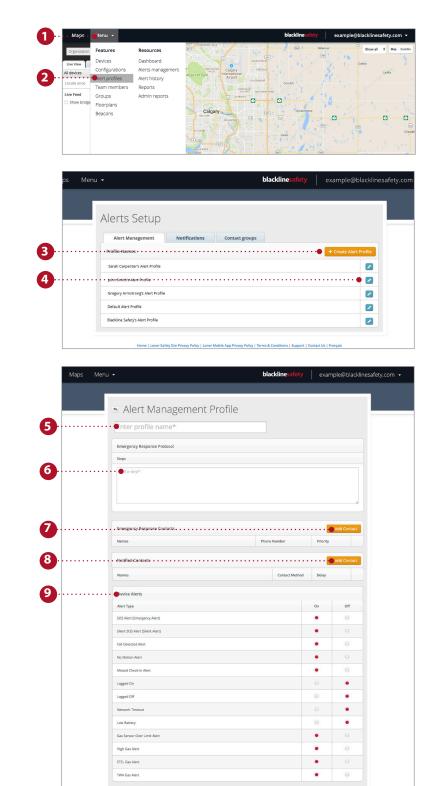

SETTING UP CONTACT GROUPS


Adding team members to contact groups allows them to receive important information pertaining to the organization. Ensure that team members added to these contact groups have valid emails so that they will be able to successfully receive these notifications.

- 1. Navigate to the drop down menu in the top left
- 2. Select *alert profiles* from the list
- 3. Click the contact groups tab
- 4. To add a team member to a contact group, click the orange *add contacts* button for the group.
- 5. Select the team members you would like to add from the pop-up modal. Ensure these team members have an email listed in their profile, otherwise they will not receive notifications.
- 6. Select *done* to confirm your selections

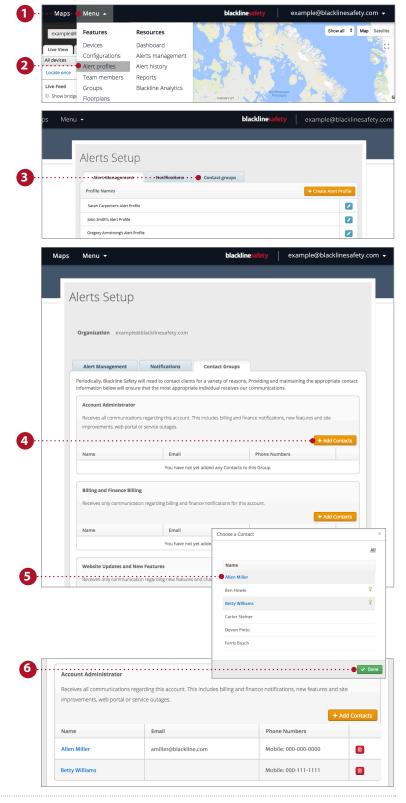

USING THE MAPS DASHBOARD PAGE

The Maps page is where you can view location, statuses and information about all your devices: both online and offline. The maps page is the easiest way to quickly view the status and location of multiple devices.

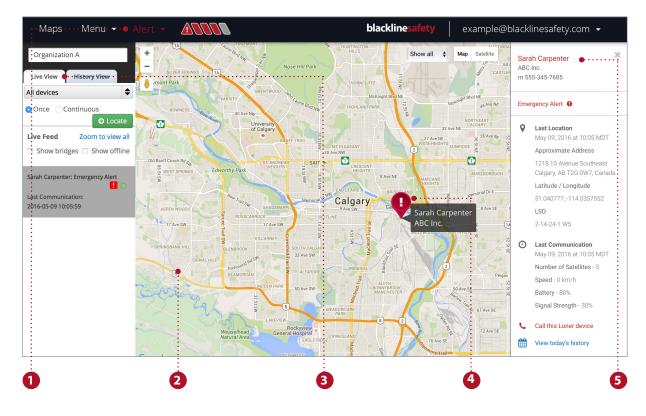


Features of the maps page

- 1. The alert banner indicates any devices that may be in alarm and is visible on every page
- 2. The map display can be navigated, minimized and enlarged easily
- 3. The live feed displays the most current events, with alerts displayed at the top
- 4. Map pins visualize the location the status of a device on the map
- 5. The info panel can by viewed by clicking on the map pin of the device

Live locating a lone worker

Receive a live update of your employees location.


- 1. Select live view from the tabs above the data stream on the left
- 2. Select the loner device you would like to locate from the drop down menu
- 3. Select once to receive a single update on the device's location or select continuous to receive updates every 5 seconds for 10 minutes
- 4. Select *locate* and wait for location update

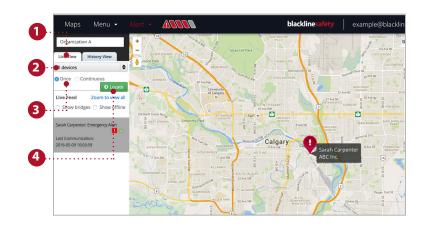

History view

Retrace the steps of a device and view its status.

- 1. Select history view from the tabs above the data stream on the left
- 2. Select the loner device you would like to view the history of from the drop down menu
- 3. Select start and end dates.
- 4. See more information in the history feed or by clicking on the map pin

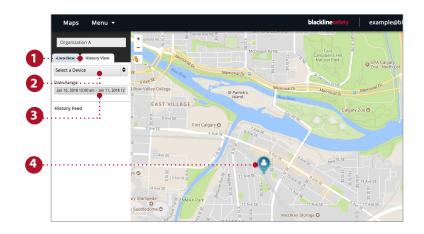


MANAGING ALERTS


When a red alert is triggered on a device, it will also be generated in the live portal. Further action is required when an alert is in the live portal.

NOTE: if you have purchased the Monitoring plan, the Blackline Safety Operations Center will manage your alerts for you.

- 1. To acknowledge the alert, navigate to the alarm banner and click on the drop down menu
- 2. All active alerts will be listed here. Select the alert you would like to acknowledge
- 3. A pop up will appear, asking if you would like to acknowledge the alert, select *yes*
- 4. You can leave notes below to increase the detail of your alert history
- 5. Select *post note* to save your note
- 6. Once you have followed the appropriate protocol and confirmed the device user is safe, select the reason for resolving the alert from the drop down menu
- 7. Select *resolve alert* to completely resolve and close the alert

Once the alert has been resolved, the alert banner will disappear and the map pin will return to its normal state

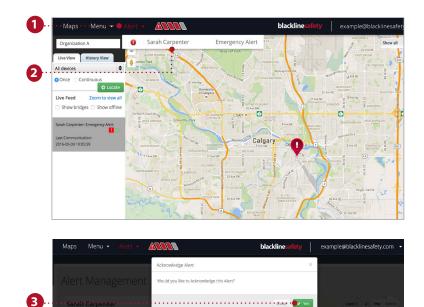

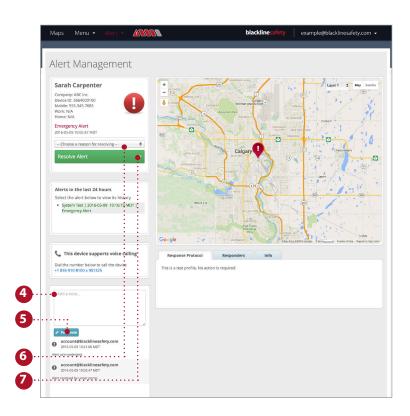

PLACING LOCATION BEACONS


Adding beacons in the Blackline Live portal ensures your safety is being monitored. Placing beacons in the correct location can decrease response time in order to give lone workers the help they need.


- 1. Select menu
- 2. Under features, select beacons
- 3. Select the Location Beacon you wish to place in the portal
- If you are using floor plans:

If you are not using floor plans:

Select the layer that corresponds with the floor plan the beacon is on Select no layer

- 5. Select the blue beacon pin
- 6. Drag the pin to where it is positioned in your building
- 7. Select save

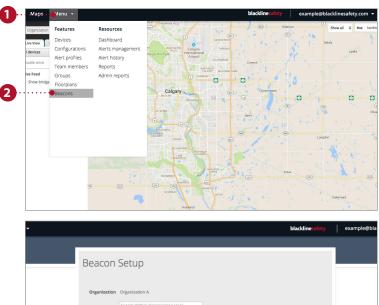

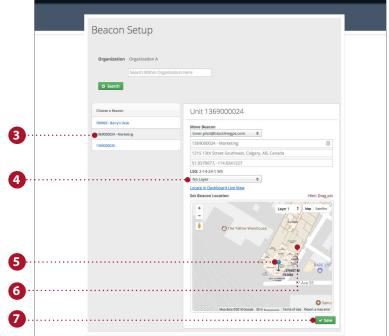



Contact us.

We've got your back. Reach out to Blackline's Customer Care for any questions or assistance during your transition to the new Blackline Live.

Customer Care | 1-877-869-7212 | support@blacklinesafety.com

blacklinesafety

www.BlacklineSafety.com