blacklinesafety


The Loner M6 Safety System

CONTENTS

About the device
Starting your shift
During your shift
Generating Manual Alerts
Receiving a voice call
Ending your shift
Questions?

ABOUT THE DEVICE

There are three primary mechanical components of the Loner device.

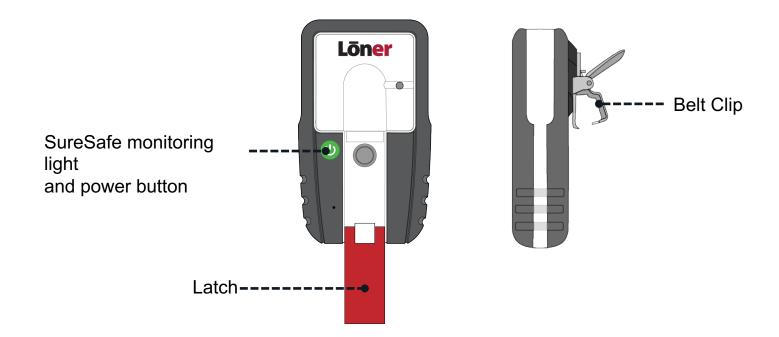

STARTING YOUR SHIFT

TURNING ON YOUR LONER




Press the power button

The green SureSafe light will blink until it is connected to the Blackline Safety Network.

Once connected, the light will be SOLID GREEN.


This means your safety is now monitored.

WEARING YOUR LONER

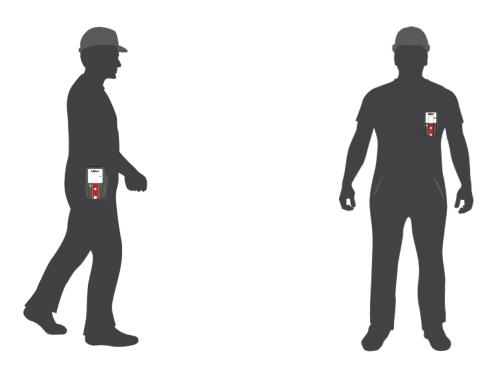

Clip the device to the side of your hip or to your chest pocket

Do not leave Loner unattended when powered on

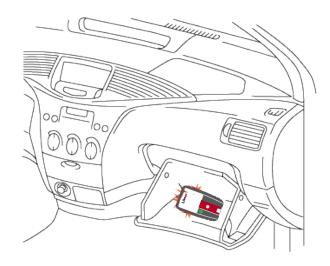


This can lead to false alerts


DURING YOUR SHIFT


AUTOMATIC FEATURES

During your shift, the device may ask you to confirm that you are OK when it detects one of the following:

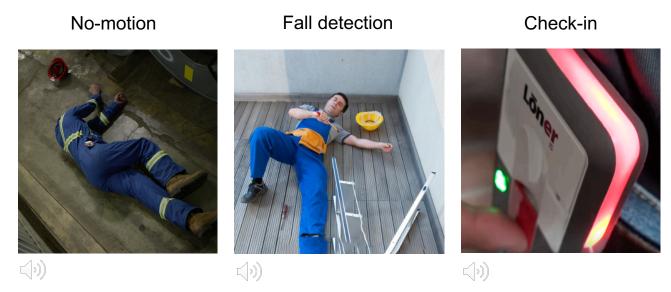


AUTOMATIC FEATURES - IF YOU'RE OK

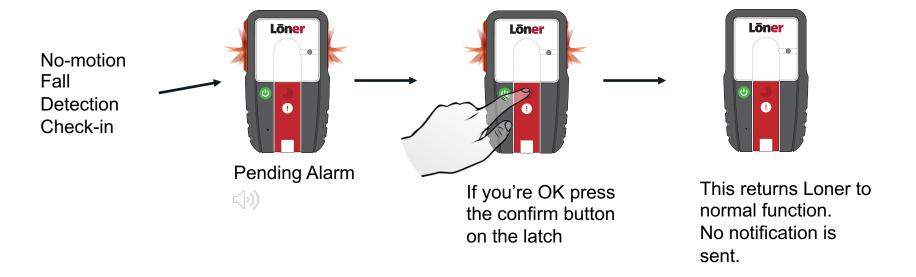

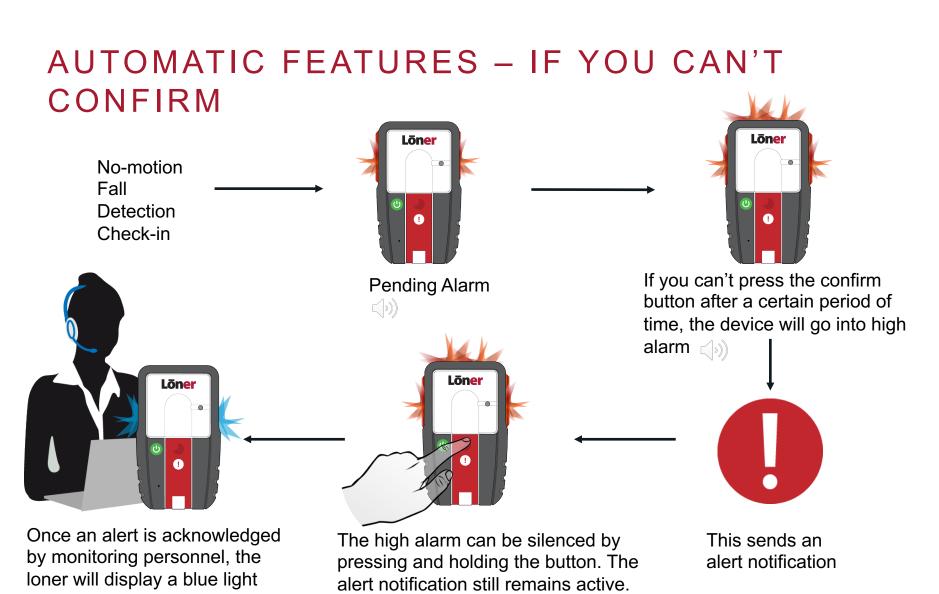

PRE CHECK-IN

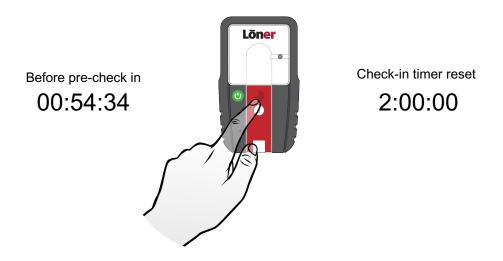

To do this, press and hold the latch for two vibrations. This will reset the check-in timer before the automatic alarm sounds.

Your device will automatically check you in if you are driving over 35 km/h.

MANUAL FEATURES

During your shift, you may need to request help using one of the manual features:

Emergency alert (Audible)










Emergency alert

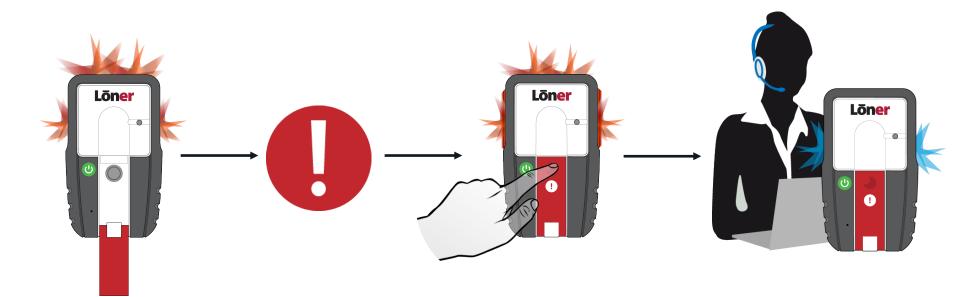


Request help by pulling down the latch

An alert notification will be sent to monitoring personnel

The high alarm can be silenced by pressing and holding the button. The alert notification still remains active. Once an alert is acknowledged by monitoring personnel, the loner will display a blue light

Silent Alert

(No audible or visual alarm is generated on the Loner device)

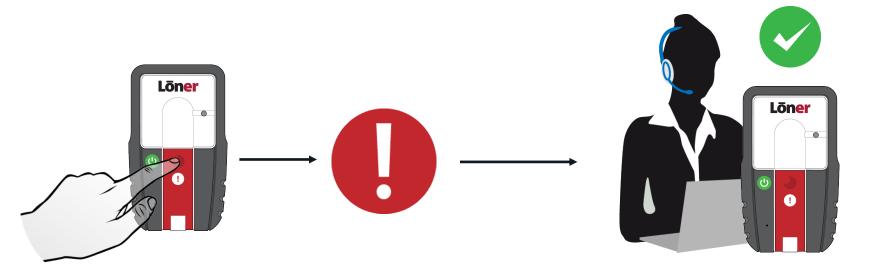


Press the confirm button until the vibration stops (two full vibration pulses ~5 sec.)

An alert notification will be sent to monitoring personnel

No alert acknowledged blue light will be displayed on the device during a silent alert even if monitoring personnel have acknowledged the incident

RECEIVING A VOICE CALL


RECEIVING A VOICE CALL

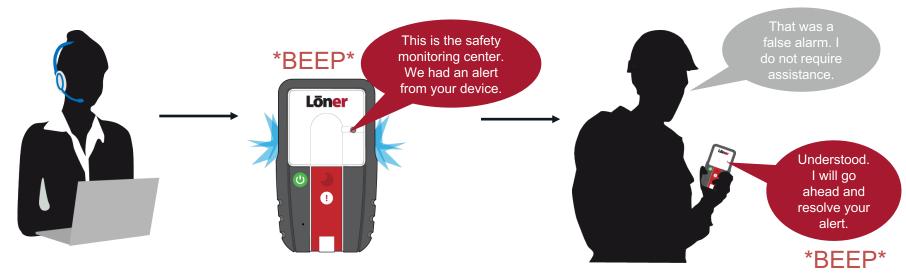

A voice call can be made by monitoring personnel directly to the device. After an alert is triggered the device will beep once when a call is connected.

Once the call is connected you can speak back and forth to monitoring personnel. When the call has ended the device will beep once more.

RECEIVING A VOICE CALL – AFTER A SILENT ALERT

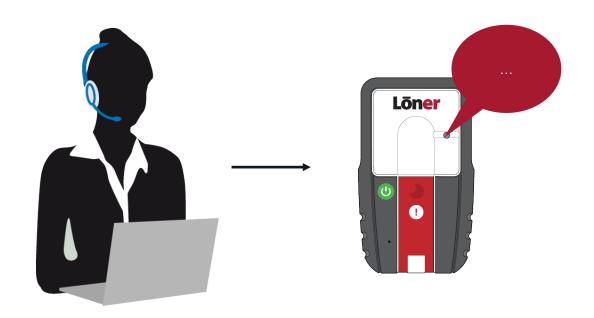

When a silent alert is generated, monitoring personnel can still connect with the Loner device. However the Loner will not beep and it will be in a 'listen only' mode.

NOTIFICATIONS

Link lost alarm

Your Loner will notify you if it loses cellular communication.



Your Loner SureSafe light will begin blinking to confirm that your safety is not being monitored. If configured, the device may initiate a link lost plarm.

Low battery alarm

Your Loner device is configured to signal to you when the battery falls below a certain configured percentage



Low battery alarm is characterized by a short beep and a quick flash every 5 minutes. Charge your device as pon as possible.

ENDING YOUR SHIFT

TURNING OFF YOUR LONER DEVICE



Press the power button until beeping and vibration stops (usually 3 seconds)

The device will begin its shutdown sequence and the SureSafe light will flash and then turn off once your Loner logs off from the Blackline Safety Network.

Your safety is no longer being monitored

 
CHARGING YOUR LONER

Full charge takes approx 4 hours Battery Life is 20 hours

Insert the charger into the bottom of the device and connect to power source

While the device is charging the red lights on the base will flash

When Loner is charged, the red lights will turn on continuously.







QUESTIONS?

blacklinesafety

For more support materials,
Please visit support.blacklinesafety.com

Customer Care: 1-877-869-7212